

# Measurement Computing Product Support DAQami

The following table lists the hardware supported by DAQami. OEM variants and compatible expansion devices are also supported.

## USB

- miniLAB 1008
- SC-1608-USB
- SC-1608X-2AO-USB
- SC-1608X-USB
- SwitchAndSense-8/8
- TC-32
- USB-1024HLS
- USB-1024LS
- USB-1208FS
- USB-1208FS-Plus
- USB-1208HS
- USB-1208HS-2AO
- USB-1208HS-4AO
- USB-1208LS
- USB-1408FS
- USB-1408FS-Plus
- USB-1608FS
- USB-1608FS-Plus
- USB-1608G
- USB-1608GX
- USB-1608GX-2AO
- USB-1608HS
- USB-1608HS-2AO
- USB-1616FS
- USB-1808<sup>1,2</sup>
- USB-1808X<sup>1,2</sup>
- USB-2001-TC
- USB-201
- USB-202
- USB-2020
- USB-204
- USB-205
- USB-231
- USB-234
- USB-2408<sup>3</sup>
- USB-2408-2AO<sup>3</sup>
- USB-2416<sup>3</sup>
- USB-2416-4AO<sup>3</sup>
- USB-2623
- USB-2627
- USB-2633
- USB-2637
- USB-3101FS
- USB-3101
- USB-3102
- USB-3103
- USB-3104
- USB-3105
- USB-3106
- USB-3110
- USB-3112
- USB-3114
- USB-5201<sup>4</sup>
- USB-5203<sup>4</sup>
- USB-7202
- USB-7204
- USB-CTR04<sup>1</sup>
- USB-CTR08<sup>1</sup>
- USB-DIO24/37
- USB-DIO24H/37
- USB-DIO32HS
- USB-DIO96H
- USB-DIO96H/50
- USB-ERB08
- USB-ERB24
- USB-PDISO8
- USB-PDISO8/40
- USB-SSR08
- USB-SSR24
- USB-TC
- USB-TC-AI
- USB-TEMP<sup>3</sup>
- USB-TEMP-AI<sup>3</sup>

## Ethernet<sup>3</sup>

- E-1608
- E-DIO24
- E-TC
- SC-1608-2AO-ENET
- TC-32

## Wireless

- BTH-1208LS

<sup>1</sup> Includes support for synchronous I/O (composite) operations.

<sup>2</sup> DAQami does not support encoders at this time.

<sup>3</sup> Some device features must be configured using InstaCal™.

▪ For multi-sensor temperature devices, this includes configuring RTD, thermistor, and semiconductor measurements.

▪ For Ethernet devices, this includes the connection code stored on the device, alarm options, and other network settings.

<sup>4</sup> DAQami only supports USB-5200 Series devices that are connected by USB. Data logging mode is not supported.