


PCI-DIO24/LP

24-bit, TTL-compatible, Digital I/O board
MD2 form factor for low-profile systems

User's Guide

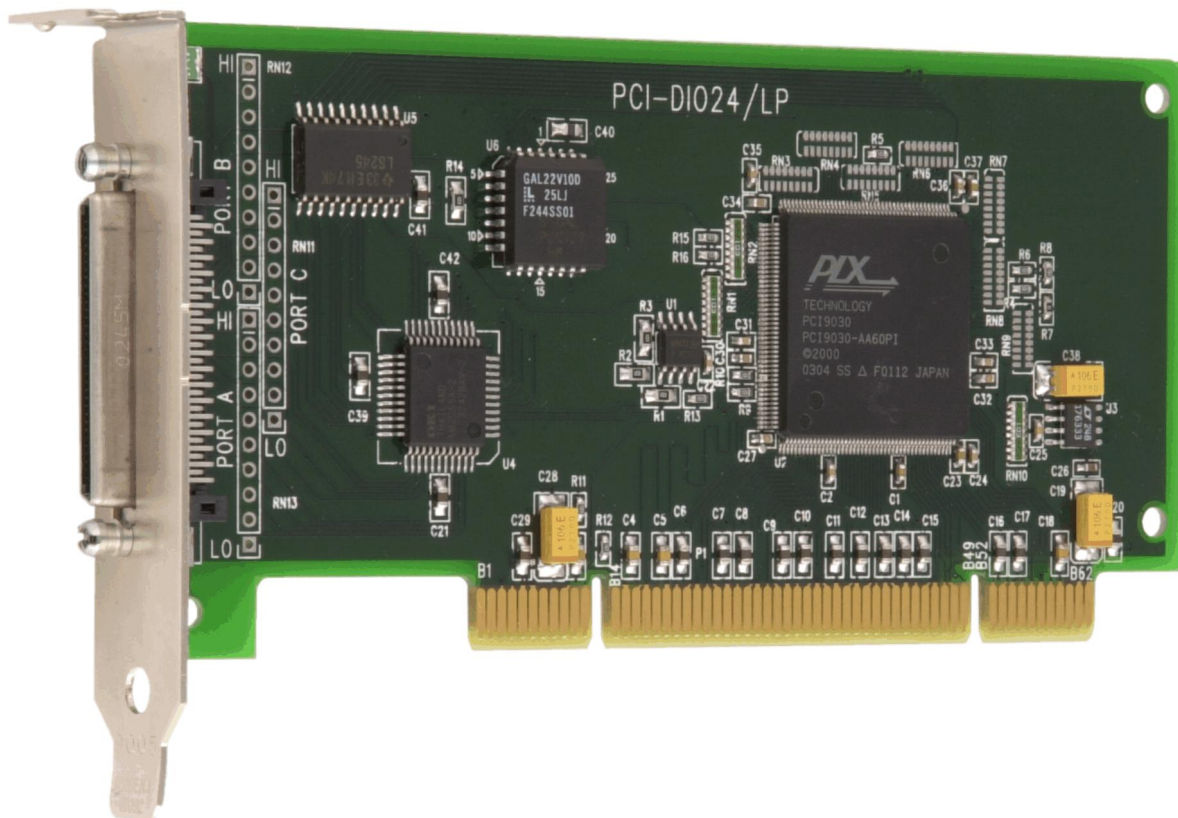

PCI-DIO24/LP

Digital Input/Output

User's Guide



**MEASUREMENT
COMPUTING™**

Document Revision 7A, May, 2009
© Copyright 2009, Measurement Computing Corporation

Trademark and Copyright Information

Measurement Computing Corporation, InstaCal, Universal Library, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation. Refer to the Copyrights & Trademarks section on mccdaq.com/legal for more information about Measurement Computing trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies.

© 2009 Measurement Computing Corporation. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

Notice

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems that, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required, and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

Table of Contents

Preface	
About this User's Guide	6
What you will learn from this user's guide	6
Conventions in this user's guide	6
Where to find more information	6
Chapter 1	
Introducing the PCI-DIO24/LP	7
Overview: PCI-DIO24/LP features	7
Software features	7
Chapter 2	
Installing the PCI-DIO24/LP	8
What comes with your PCI-DIO24/LP shipment?	8
Hardware	8
Additional documentation.....	8
Optional components	8
Unpacking the PCI-DIO24/LP	9
Installing the software	9
Installing the PCI-DIO24/LP	9
Connecting the board for I/O operations	9
Connectors, cables – main I/O connector.....	9
Pin out – main I/O connector	10
Cabling.....	10
Field wiring, signal termination and conditioning	10
Chapter 3	
Functional Details	11
PCI-DIO24/LP block diagram.....	11
Signal level control.....	12
Chapter 4	
Specifications	14
Digital input/output.....	14
Interrupts.....	14
Power consumption	14
Environmental	14
Mechanical	15
Connector and pin out.....	15
Declaration of Conformity	16

About this User's Guide

What you will learn from this user's guide

This user's guide explains how to install, configure and use the PCI-DIO24/LP digital I/O board.

This user's guide also refers you to related documents available on our web site and to technical support resources.

Conventions in this user's guide

For more information on ...

Text presented in a box signifies additional information and helpful hints related to the subject matter you are reading.

Caution! Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.

<#:#> Angle brackets that enclose numbers separated by a colon signify a range of numbers, such as those assigned to registers, bit settings, etc.

bold text **Bold** text is used for the names of objects on the screen, such as buttons, text boxes, and check boxes. For example:
1. Insert the disk or CD and click the **OK** button.

italic text *Italic* text is used for the names of manuals and help topic titles, and to emphasize a word or phrase. For example:
The *InstaCal* installation procedure is explained in the *Quick Start Guide*.
Never touch the exposed pins or circuit connections on the board.

Where to find more information

For additional information relevant to the operation of your hardware, refer to the *Documents* subdirectory where you installed the MCC DAQ software (C:\Program Files\Measurement Computing\DAQ by default), or search for your device on our website at www.mccdaq.com.

If you need to program at the register level in your application, refer to the *Register Map for the PCI-DIO24, PCI-DIO24H, PCI-DIO24/S, and PCI-DIO24/LP*. This document is available on our website at www.mccdaq.com/registermaps/RegMapPCI-DIO24X.pdf.

Introducing the PCI-DIO24/LP

Overview: PCI-DIO24/LP features

This manual explains how to install, configure and use the PCI-DIO24/LP digital I/O board. You can use the PCI-DIO24/LP to control logic devices such as switches, gauges, relays, pumps, and sensors in a variety of digital applications.

The PCI-DIO24/LP is a 24-bit, TTL-compatible digital I/O board. The board has an MD2 form factor for low profile systems.

An on-board, industry standard 82C55 programmable peripheral interface chip provides 24 discrete digital I/O lines in three eight-bit ports (Port A, Port B, and Port C). Port C can be further divided into two four-bit ports. You can configure each port independently for either input or output. The PCI-DIO24/LP supports 5V or 3.3V TTL/CMOS I/O signaling. Digital I/O lines are accessed through a 68-pin connector.

The PCI-DIO24/LP has open locations where you can install a pull-up or pull-down resistor for each port. All I/O bits are set to input mode on power up and reset.

The PCI-DIO24/LP board is completely plug-and-play, with no jumpers or switches to set. All board addresses are set by your system's plug-and-play software.

Software features

For information on the features of *InstaCal* and the other software included with your PCI-DIO24/LP, refer to the *Quick Start Guide* that shipped with your device. The *Quick Start Guide* is also available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.

Check www.mccdaq.com/download.htm for the latest software version or versions of the software supported under less commonly used operating systems.


Installing the PCI-DIO24/LP

What comes with your PCI-DIO24/LP shipment?

As you unpack your board, make sure each of the items shown below is included.

Hardware

- PCI-DIO24/LP

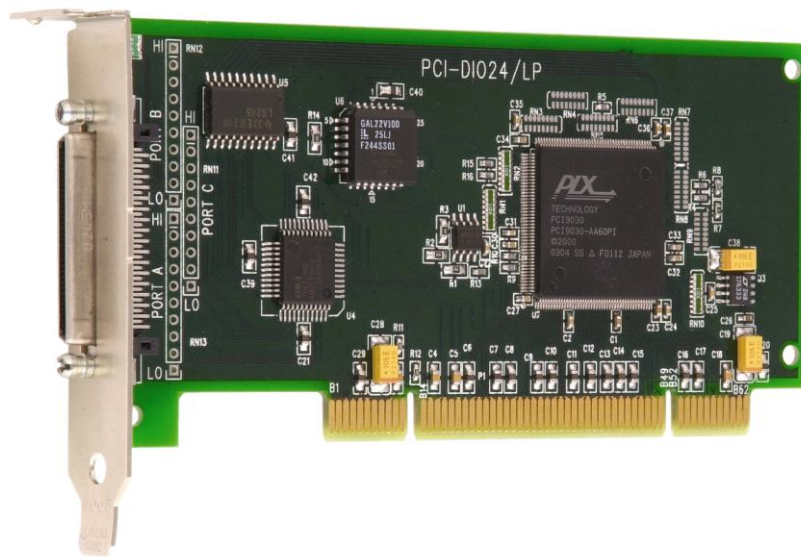

Additional documentation

In addition to this hardware user's guide, you should also receive the *Quick Start Guide* (available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf). This booklet supplies a brief description of the software you received with your PCI-DIO24/LP and information regarding installation of that software. Please read this booklet completely before installing any software or hardware.

Optional components

- Cables



C68MMS-x

- Signal termination and conditioning accessories
MCC provides signal termination and conditioning boards that you can use with the PCI-DIO24/LP. Refer to the "[Field wiring, signal termination and conditioning](#)" section on page 10 for a complete list of compatible accessory products.

Unpacking the PCI-DIO24/LP

As with any electronic device, you should take care while handling to avoid damage from static electricity. Before removing the PCI-DIO24/LP from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

If any components are missing or damaged, notify Measurement Computing Corporation immediately by phone, fax, or e-mail:

- Phone: 508-946-5100 and follow the instructions for reaching Tech Support.
- Fax: 508-946-9500 to the attention of Tech Support
- Email: techsupport@mccdaq.com

Installing the software

Refer to the *Quick Start Guide* for instructions on installing the software on the *Measurement Computing Data Acquisition Software CD*. This booklet is available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.

Installing the PCI-DIO24/LP

The PCI-DIO24/LP is completely plug-and-play, with no switches or jumpers to set. Configuration is controlled by your system's plug-and-play software. To install your board, follow the steps below.

Install the MCC DAQ software before you install your board

The driver needed to run your board is installed with the MCC DAQ software. Therefore, you need to install the MCC DAQ software before you install your board. Refer to the *Quick Start Guide* for instructions on installing the software.

1. Turn your computer off, open it up, and insert your board into an available low profile MD2 PCI slot.
2. Close your computer and turn it on.

If you are using an operating system with support for plug-and-play (such as Windows 2000 or Windows XP), a dialog box opens as the system loads, indicating that new hardware has been detected. If the information file for this board is not already loaded onto your PC, you are prompted for the disk containing this file. The *Measurement Computing Data Acquisition Software CD* supplied with your board contains this file. If required, insert the disk or CD and click **OK**.

3. To test your installation and configure your board, run the *InstaCal* utility installed in the previous section. Refer to the *Quick Start Guide* that came with your board for information on how to initially set up and load *InstaCal*.

Connecting the board for I/O operations

Connectors, cables – main I/O connector

The table below lists the board connectors, compatible cables, and compatible accessory products for the PCI-DIO24/LP.

Board connectors, cables, and accessory equipment

I/O connector type	SCSI type ultra micro DB68 VHDCI female
Compatible cable	C68MMS-x, where x = 3 or 6 feet (Figure 1)
Compatible accessory products with the C68MMS-x cable	CIO-MINI68

Pin out – main I/O connector

Main I/O connector pin out

Signal Name	Pin		Pin	Signal Name
PC +5V	68	••	34	PC +5V
GND	67	••	33	GND
n/c	66	••	32	n/c
GND	65	••	31	GND
n/c	64	••	30	n/c
n/c	63	••	29	n/c
n/c	62	••	28	n/c
n/c	61	••	27	IRQ_INPUT
n/c	60	••	26	IRQ_ENABLE
GND	59	••	25	n/c
GND	58	••	24	Port C7
GND	57	••	23	Port C6
GND	56	••	22	Port C5
GND	55	••	21	Port C4
GND	54	••	20	Port C3
GND	53	••	19	Port C2
GND	52	••	18	Port C1
GND	51	••	17	Port C0
GND	50	••	16	Port B7
GND	49	••	15	Port B6
GND	48	••	14	Port B5
GND	47	••	13	Port B4
GND	46	••	12	Port B3
GND	45	••	11	Port B2
GND	44	••	10	Port B1
GND	43	••	9	Port B0
GND	42	••	8	Port A7
GND	41	••	7	Port A6
GND	40	••	6	Port A5
GND	39	••	5	Port A4
GND	38	••	4	Port A3
GND	37	••	3	Port A2
GND	36	••	2	Port A1
GND	35	••	1	Port A0

PCI slot ↓

Cabling

The C68MMS-x cable is compatible with the PCI-DIO24/LP.

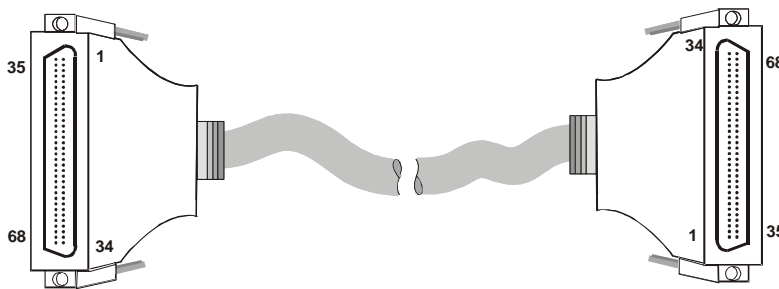


Figure 1. C68MMS-x cable

Field wiring, signal termination and conditioning

You can connect the PCI-DIO24/LP to the following screw terminal board using the C68MMS-x cable.

- **CIO-MINI68** – 68-pin screw terminal board. Details on this product is available on our web site at www.mccdaq.com/products/screw_terminal_bnc.aspx.

Functional Details

The PCI-DIO24/LP board features the following:

- 82C55 digital I/O chip interfaced to the PCI bus. The I/O pins of an 82C55 are bi-directional CMOS TTL level.
- 24-bits of digital I/O
- 68-pin I/O connector

The 82C55 provides the 24-bit digital I/O channels into three eight-bit ports labeled **Port A**, **Port B** and **Port C**. Port C is further divided into two four-bit ports—PORTCL and PORTCH. You can program each port for input or output.

PCI-DIO24/LP block diagram

PCI-DIO24/LP functions are illustrated in the block diagram shown here.

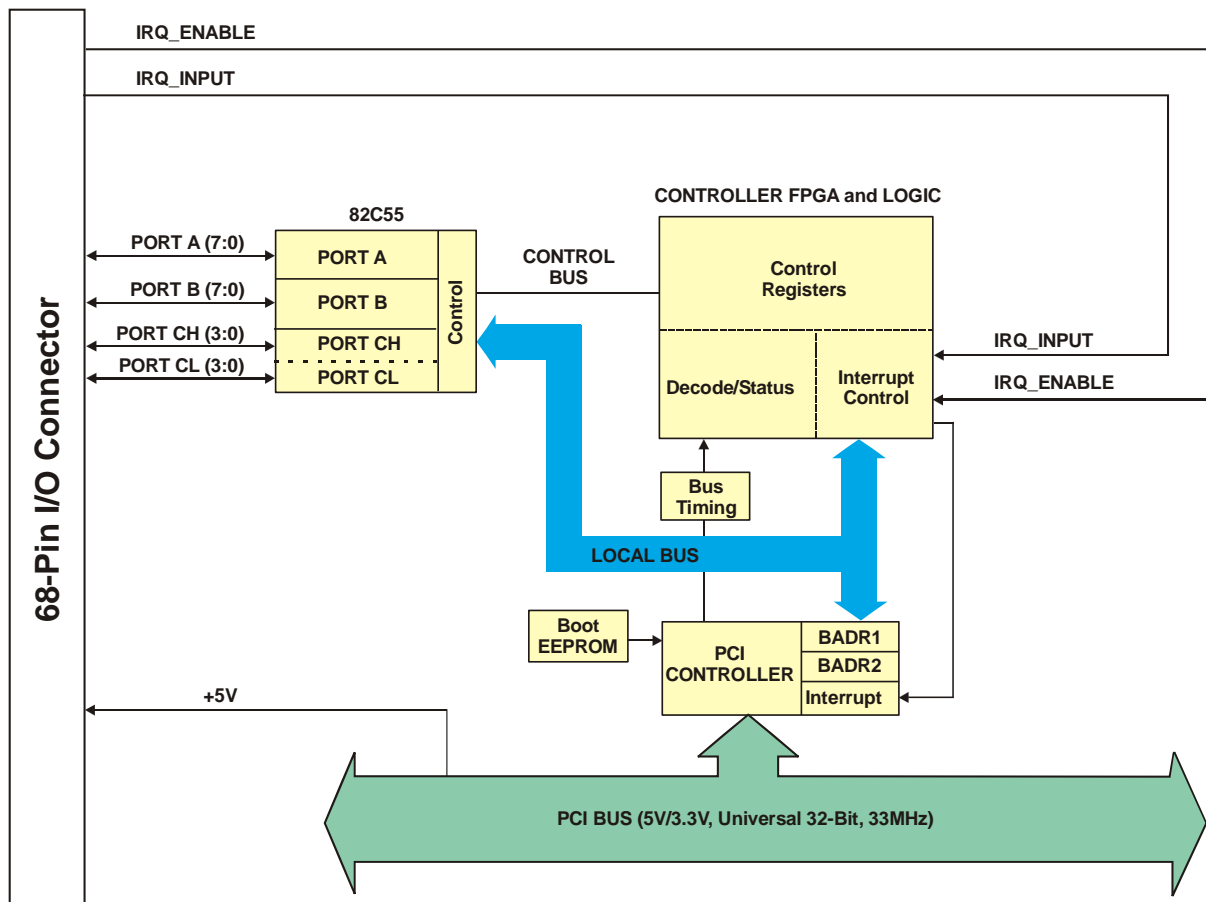


Figure 2. PCI-DIO24/LP functional block diagram

For more information on digital signal connections

For general information about digital signal connections and digital I/O techniques, refer to the *Guide to Signal Connections* (available on our web site at www.mccdaq.com/signals/signals.pdf).

Caution! Do not connect high current/voltage devices directly to the PCI-DIO24/LP or you may damage the board.

Signal level control

All I/O bits are set to a high impedance input mode on power up and reset. To prevent unwanted signal levels, and to drive all outputs on the device you are controlling to a known state after power up or reset, install pull-up or pull-down resistors.

A pull-up resistor pulls all digital pins up to +5 V (high logic level). A pull-down resistor pulls all digital pins down to 0 V (low logic level).

The PCI-DIO24/LP has open locations where you can install a 2.2 K Ω , eight-resistor single inline package (SIP) resistor network for each port. The SIP is made up of eight 2.2 K resistors. One side of each resistor is connected to a single common point and brought out to a pin. The common line is marked with a dot or line at one end of the SIP. The remaining resistor ends are brought out to the other eight pins (see Figure 3).

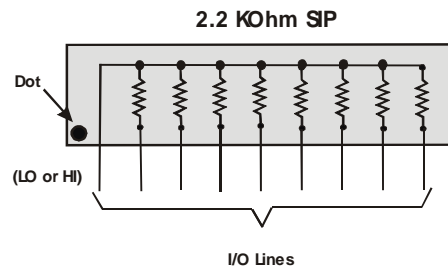


Figure 3. Eight-Resistor SIP Schematic

Each port provides 10 holes. Install an SIP on the board at the locations labeled **PORT A**, **PORT B** and **PORT C** (see Figure 4).

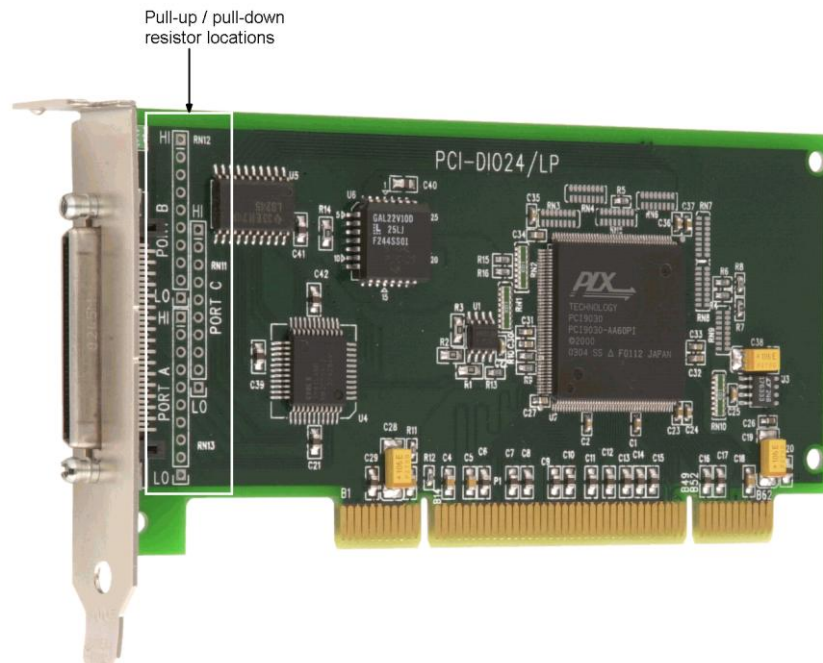


Figure 4. Pull-up/down resistor locations

The end labeled **HI** connects to +5 V. The end labeled **LO** connects to GND. The eight holes in the middle (n0 – n7) connect to the eight lines of the port (PORT A, PORT B, or PORT C). Figure 5 shows an SIP resistor network installed in both pull-up and pull-down positions.

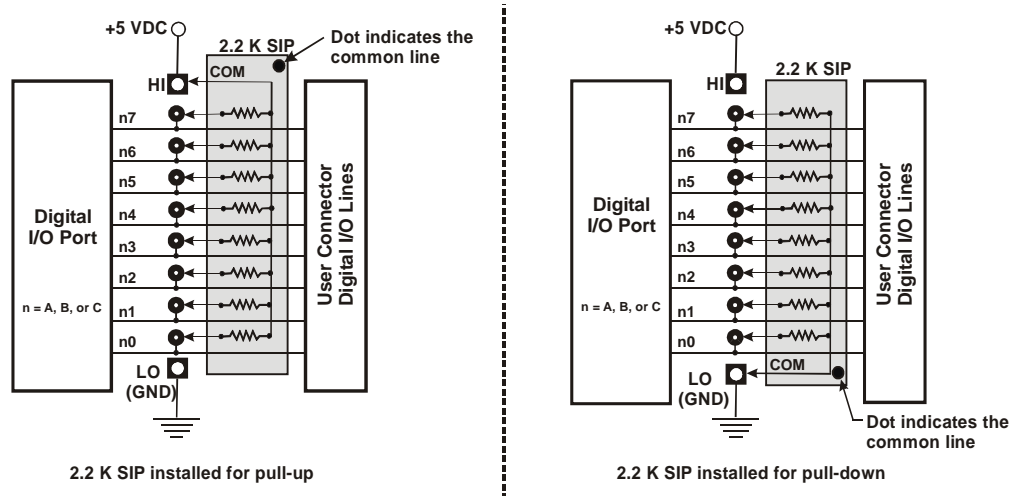


Figure 5. Pull-up and pull-down resistor SIP schematic

To pull up the digital lines for a particular port, install the resistor with the common pin at the **HI** end. To pull down the digital lines for a particular port, install the resistor with the common pin at the **LO** end. When installed, the SIP resistors establish either a high or low logic level for each port when the board is in input mode.

Install MCC SIP packs

When installing pull-up and pull-down resistor SIP packs, we recommend using a 2.2 K, eight-resistor SIP (MCC part number SP-K2.29C).

Specifications

Typical for 25 °C unless otherwise specified.

Specifications in *italic text* are guaranteed by design.

Digital input/output

Table 1. Digital I/O specifications

Digital type	82C55
Number of I/O	24 (Port A0 through Port C7)
Configuration	2 banks of 8 and 2 banks of 4 or
	3 banks of 8 or
	2 banks of 8 with handshake
<i>Input low voltage</i>	<i>0.8 V max</i>
<i>Input high voltage</i>	<i>2.2 V min</i>
<i>Output low voltage (IOL = 2.5 mA)</i>	<i>0.5 V max</i>
<i>Output high voltage (IOH = -2.5 mA)</i>	<i>2.4 V min</i>
<i>Absolute maximum input voltage</i>	<i>-0.5 V, +7 V</i>
Power-up/reset state	Input mode (high impedance)
Pull-up/pull-down resistors	Dual footprint allows pull-up or pull-down configuration.

Interrupts

Table 2. Interrupt specifications

Interrupts	INTA# - mapped to IRQ _n via PCI BIOS at boot-time
Interrupt enable	External (IRQ_ENABLE) active low, disabled by default through internal resistor to TTL high and programmable through PLX9030
Interrupt sources	<ul style="list-style-type: none"> ▪ External source (IRQ_INPUT) ▪ Polarity programmable through PLX9030 ▪ Edge or level triggered programmable through PLX9030 ▪ Assertion Time: 40 ns min

Power consumption

Table 3. Power consumption specifications

+5 V operating	240 mA typical, 350 mA max. Does not include power consumed through the I/O connector.
+5 V available at I/O connector	300 mA max, protected with a resettable fuse
Resettable fuse	Raychem type <i>miniSMDC110</i> . Hold current: 1.1 A max Series resistance: 0.21 Ohms max.

Environmental

Table 4. Environmental specifications

Operating temperature range	0 to 70 °C
Storage temperature range	-40 to 100 °C
Humidity	0 to 95% non-condensing

Mechanical

Table 5. Mechanical specifications

Card dimensions	PCI low-profile MD2 length: 131.8 mm (L) x 63.5 mm (W) x 18.4 mm (H)
Form factor	Universal PCI keying. Compatible with either 3.3 V or 5 V PCI signaling environments.

Connector and pin out

Table 6. Connector specifications

I/O connector type	SCSI type ultra micro DB68 VHDCI female
Compatible cables	MCC p/n C68MMS-x, x = 3 or 6 feet.
Compatible accessories	CIO-MINI68 CIO-MINI68/DST

Table 7. Connector pin out

Pin	Signal Name	Pin	Signal Name
1	Port A0	35	GND
2	Port A1	36	GND
3	Port A2	37	GND
4	Port A3	38	GND
5	Port A4	39	GND
6	Port A5	40	GND
7	Port A6	41	GND
8	Port A7	42	GND
9	Port B0	43	GND
10	Port B1	44	GND
11	Port B2	45	GND
12	Port B3	46	GND
13	Port B4	47	GND
14	Port B5	48	GND
15	Port B6	49	GND
16	Port B7	50	GND
17	Port C0	51	GND
18	Port C1	52	GND
19	Port C2	53	GND
20	Port C3	54	GND
21	Port C4	55	GND
22	Port C5	56	GND
23	Port C6	57	GND
24	Port C7	58	GND
25	n/c	59	GND
26	IRQ_ENABLE	60	n/c
27	IRQ_INPUT	61	n/c
28	n/c	62	n/c
29	n/c	63	n/c
30	n/c	64	n/c
31	GND	65	GND
32	n/c	66	n/c
33	GND	67	GND
34	PC +5V	68	PC +5V

CE Declaration of Conformity

Manufacturer: Measurement Computing Corporation
Address: 10 Commerce Way
Suite 1008
Norton, MA 02766
USA
Category: Electrical equipment for measurement, control and laboratory use.

Measurement Computing Corporation declares under sole responsibility that the product

PCI-DIO24/LP

to which this declaration relates is in conformity with the relevant provisions of the following standards or other documents:

EC EMC Directive 2004/108/EC: General Requirements, EN 61326-1:2006 (IEC 61326-1:2005).

Emissions:

- EN 55011 (2007) / CISPR 11(2003): Radiated emissions: Group 1, Class A
- EN 55011 (2007) / CISPR 11(2003): Conducted emissions: Group 1, Class A

Immunity: EN 61326-1:2006, Table 3.

- IEC 61000-4-2 (2001): Electrostatic Discharge immunity.
- IEC 61000-4-3 (2002): Radiated Electromagnetic Field immunity.
- IEC 61000-4-4 (2004): Electric Fast Transient Burst Immunity.
- IEC 61000-4-5 (2001): Surge Immunity.
- IEC 61000-4-6 (2003): Radio Frequency Common Mode Immunity.
- IEC 61000-4-11 (2004): Voltage Interrupts.

To maintain compliance to the standards of this declaration, the following conditions must be met.

- The host computer, peripheral equipment, power sources, and expansion hardware must be CE compliant.
- All I/O cables must be shielded, with the shields connected to ground.
- I/O cables must be less than 3 meters (9.75 feet) in length.
- The host computer must be properly grounded.
- Equipment must be operated in a controlled electromagnetic environment as defined by Standards EN 61326-1:2006, or IEC 61326-1:2005.

Declaration of Conformity based on tests conducted by Chomerics Test Services, Woburn, MA 01801, USA in March, 2009. Test records are outlined in Chomerics Test Report #EMI5299.09.

We hereby declare that the equipment specified conforms to the above Directives and Standards.



Carl Haapaoja, Director of Quality Assurance

Measurement Computing Corporation
10 Commerce Way
Suite 1008
Norton, Massachusetts 02766
(508) 946-5100
Fax: (508) 946-9500
E-mail: info@mccdag.com
www.mccdag.com