


# USB-3110

Four-channel, 16-bit high-drive analog voltage output

Eight digital I/O, one 32-bit event counter

Full-speed USB 2.0 device

## User's Guide

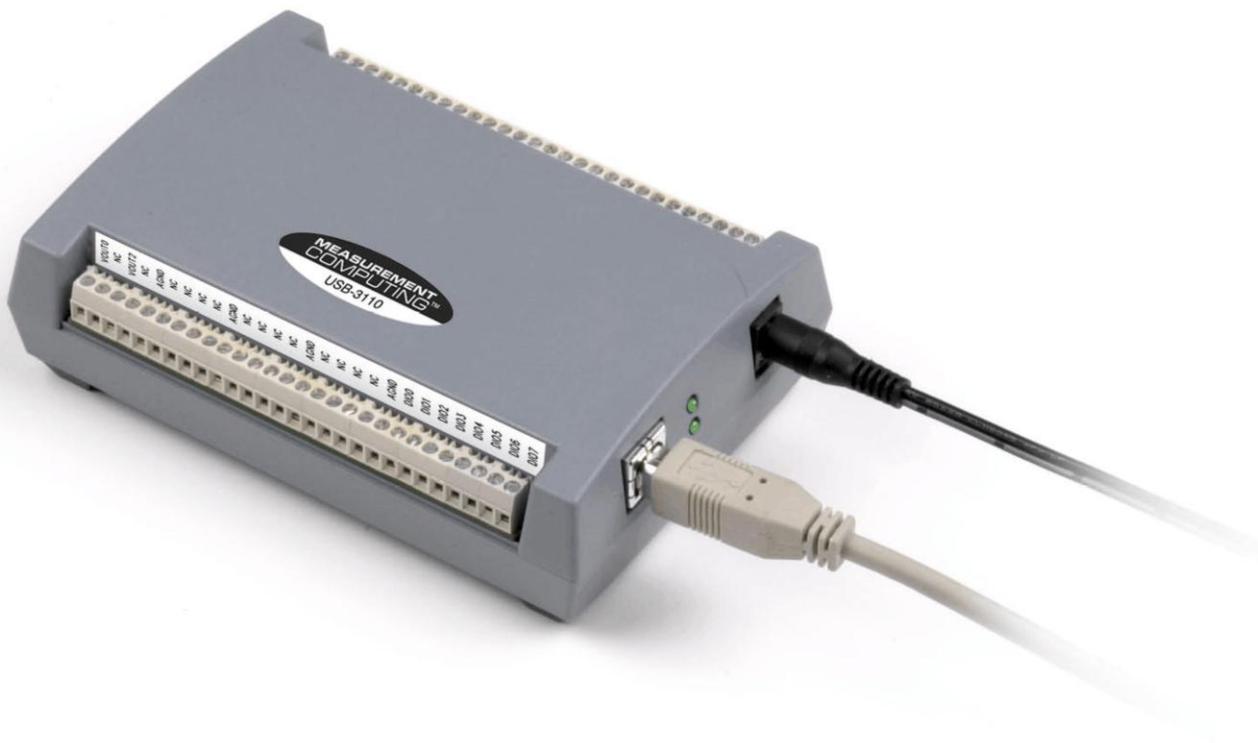

# **USB-3110**

## **USB-based Analog Output**

### **User Guide**



**MEASUREMENT  
COMPUTING™**

Document Revision 4A, January, 2011  
© Copyright 2011, Measurement Computing Corporation

## Trademark and Copyright Information

Measurement Computing Corporation, InstaCal, Universal Library, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation. Refer to the Copyrights & Trademarks section on [mccdaq.com/legal](http://mccdaq.com/legal) for more information about Measurement Computing trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies.

© 2011 Measurement Computing Corporation. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

### **Notice**

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems that, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required, and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

---

# Table of Contents

## Preface

<b>About this User's Guide .....</b>	<b>6</b>
What you will learn from this user's guide .....	6
Conventions in this user's guide .....	6
Where to find more information .....	6

## Chapter 1

<b>Introducing the USB-3110 .....</b>	<b>7</b>
Overview: USB-3110 features .....	7
USB-3110 block diagram .....	8
Software features .....	8

## Chapter 2

<b>Installing the USB-3110 .....</b>	<b>9</b>
What comes with your USB-3110 shipment? .....	9
Hardware .....	9
Additional documentation.....	10
Unpacking the USB-3110.....	10
Installing the software .....	10
Installing the hardware .....	10
Connecting the AC power adapter .....	10
Connecting the USB-3110 to your system.....	11
Calibrating the USB-3110 .....	11

## Chapter 3

<b>Functional Details .....</b>	<b>12</b>
External components .....	12
USB connector.....	12
USB LED.....	12
Power connector .....	12
Power LED .....	13
Screw terminal banks.....	13
Analog voltage output terminals (VOUT0 to VOUT3) .....	14
Digital I/O terminals (DIO0 to DIO7) .....	14
Digital I/O control terminal (DIO CTL) for pull-up/down configuration .....	15
Ground terminals (AGND, DGND).....	15
Synchronous DAC load terminal (SYNCLD).....	15
Counter terminal (CTR).....	15
Power terminal (+5V).....	15
Synchronizing multiple units.....	16
Mechanical drawings.....	17

## Chapter 4

<b>Specifications .....</b>	<b>18</b>
Analog voltage output .....	18
Analog output calibration .....	19
Digital input/output .....	20
Synchronous DAC Load.....	20
Counter .....	21
Memory .....	21
Microcontroller.....	21
Power.....	21

USB specifications .....	22
Environmental .....	22
Mechanical .....	22
Main connector and pin out .....	23
<b>Declaration of Conformity .....</b>	<b>24</b>

## About this User's Guide

### What you will learn from this user's guide

This user's guide describes the Measurement Computing USB-3110 data acquisition device and lists the specifications.

### Conventions in this user's guide

**For more information on ...**

Text presented in a box signifies additional information and helpful hints related to the subject matter you are reading.

**Caution!** Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.

**bold text**      **Bold** text is used for the names of objects on a screen, such as buttons, text boxes, and check boxes.

*italic text*      *Italic* text is used for the names of manuals and help topic titles, and to emphasize a word or phrase.

### Where to find more information

For additional information relevant to the operation of your hardware, refer to the Documents subdirectory where you installed the MCC DAQ software (C:\Program Files\Measurement Computing\DAQ by default), or search for your device on our website at [www.mccdaq.com](http://www.mccdaq.com).

---

# Introducing the USB-3110

## Overview: USB-3110 features

This user's guide contains all of the information you need to connect the USB-3110 to your computer and to the signals you want to measure. The USB-3110 is part of the Measurement Computing brand of USB-based data acquisition products.

The USB-3110 is a USB 2.0 full-speed, high-drive device that is supported under popular Microsoft® Windows® operating systems. The USB-3110 is fully compatible with both USB 1.1 and USB 2.0 ports.

The USB-3110 provides four channels of analog voltage output, eight digital I/O connections, and one 32-bit event counter.

Each of the voltage outputs of the USB-3110 incorporates high-drive current output capability. The high drive current outputs allow each of the voltage outputs to sink/source up to 40 mA (maximum) of load current.

**Caution!** The USB-3110 voltage outputs should not be kept in a short-circuit condition for longer than the specified 100 ms. For those applications that may potentially exceed the 40 mA maximum current limit or the 100 ms short-circuit condition, external current limiting must be used to prevent potential damage to the USB-3110.

The USB-3110 has a quad (4-channel) 16-bit digital-to-analog converter (DAC). You set the voltage output range of each DAC channel independently with software for either bipolar ( $\pm 10$  V) or unipolar (0 to 10 V). The analog outputs may be updated individually or simultaneously.

The USB-3110 features eight bidirectional digital I/O connections. You can configure the DIO lines as input or output in one 8-bit port. All digital pins are floating by default. A screw terminal connection is provided for pull-up (+5 V) or pull-down (0 volts) configuration.

The 32-bit counter can count TTL pulses. A bidirectional synchronization connection allows you to simultaneously update the DAC outputs on multiple devices.

The USB-3110 is powered by a 5 volt, 2 amp AC power adapter that is shipped with the board. All I/O connections are made to the screw terminals located along each side of the USB-3110.



Figure 1. USB-3110

## USB-3110 block diagram

USB-3110 functions are illustrated in the block diagram shown here.

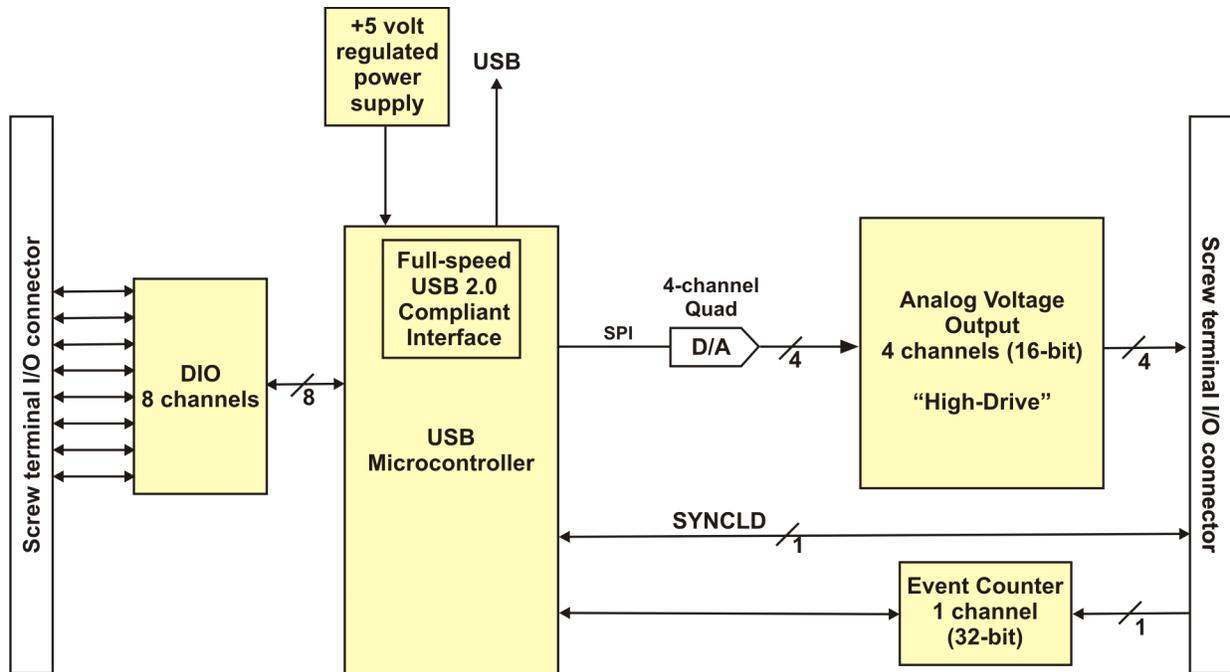


Figure 2. USB-3110 block diagram

## Software features

For information on the features of InstaCal and the other software included with your USB-3110, refer to the *Quick Start Guide* that shipped with your device.

---


# Installing the USB-3110

## What comes with your USB-3110 shipment?

The following items are shipped with the USB-3110.

### Hardware

- USB-3110 device

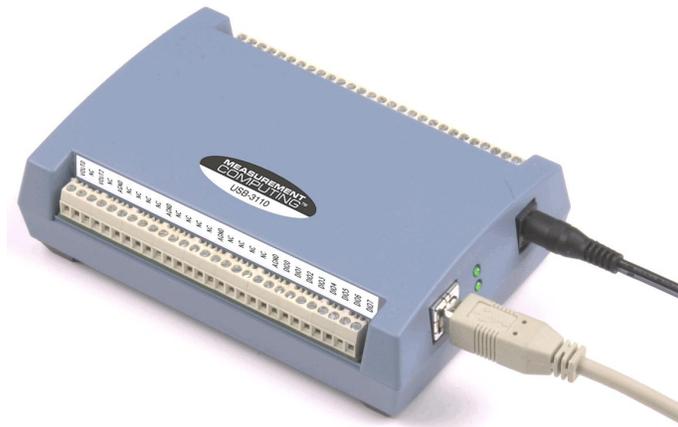

- USB cable (2 meter length)



- External power supply and cord – 10 watt AC power adapter. MCC part number PS-5V2AEPS.



## Additional documentation

In addition to this hardware user's guide, you should also receive the *Quick Start Guide* (available in PDF at [www.mccdaq.com/PDFs/manuals/DAQ-Software-Quick-Start.pdf](http://www.mccdaq.com/PDFs/manuals/DAQ-Software-Quick-Start.pdf)). This booklet supplies a brief description of the software you received with your USB-3110 and information regarding installation of that software. Please read this booklet completely before installing any software or hardware.

## Unpacking the USB-3110

As with any electronic device, you should take care while handling to avoid damage from static electricity. Before removing the USB-3110 from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

If any components are missing or damaged, notify Measurement Computing Corporation immediately by phone, fax, or e-mail:

- Phone: 508-946-5100 and follow the instructions for reaching Tech Support.
- Fax: 508-946-9500 to the attention of Tech Support
- Email: [techsupport@mccdaq.com](mailto:techsupport@mccdaq.com)

## Installing the software

Refer to the *Quick Start Guide* for instructions on installing the software on the *Measurement Computing Data Acquisition Software CD*. This booklet is available in PDF at [www.mccdaq.com/PDFs/manuals/DAQ-Software-Quick-Start.pdf](http://www.mccdaq.com/PDFs/manuals/DAQ-Software-Quick-Start.pdf).

## Installing the hardware

### Be sure you are using the latest system software

Before you connect the USB-3110, make sure that you are using the latest versions of the USB drivers.

Before installing the USB-3110, download and install the latest Microsoft Windows updates. In particular, when using Windows XP, make sure you have XP Hotfix KB822603 installed. This update is intended to address a serious error in Usbport.sys when you operate a USB device. You can run Windows Update or download the update from [www.microsoft.com/downloads/details.aspx?familyid=733dd867-56a0-4956-b7fe-e85b688b7f86&displaylang=en](http://www.microsoft.com/downloads/details.aspx?familyid=733dd867-56a0-4956-b7fe-e85b688b7f86&displaylang=en). For more information, refer to the Microsoft Knowledge Base article "Availability of the Windows XP SP1 USB 1.1 and 2.0 update." This article is available at [support.microsoft.com/?kbid=822603](http://support.microsoft.com/?kbid=822603).

## Connecting the AC power adapter

Power to the USB-3110 is provided with the 10 watt USB adapter (PS-5V2AEPS). To connect the power supply to your USB-3110, connect the USB adapter cord to the power connector on the USB-3110 device, and plug the AC adapter into a power outlet.

The power LED on the device lights up when the USB-3110 is receiving power from the AC power adapter.

## Connecting the USB-3110 to your system

To connect the USB-3110 to your system, turn your computer on, and connect the USB cable to a USB port on your computer or to an external USB hub that is connected to your computer. The USB cable provides communication to the USB-3110.

When you connect the USB-3110 to a computer for the first time, a **Found New Hardware** dialog opens when the operating system detects the device. When the dialog closes, the installation is complete. After the USB-3110 is installed, the USB LED should flash and then remain lit. This indicates that communication is established between the USB-3110 and your computer.

**Caution!** Do not disconnect **any** device from the USB bus while the computer is communicating with the USB-3110, or you may lose data and/or your ability to communicate with the USB-3110.

### If the USB LED turns off

If the USB LED is illuminated but then turns off, the computer has lost communication with the USB-3110. To restore communication, disconnect the USB cable from the computer, and then reconnect it. This should restore communication, and the LED should turn back *on*.

## Calibrating the USB-3110

The USB-3110 is shipped fully calibrated. Calibration coefficients are stored in the device FLASH memory. Return the device to Measurement Computing Corporation when calibration is required. The normal calibration interval is once per year.

## Functional Details

### External components

The USB-3110 has the following external components, as shown in Figure 3.

- USB connector
- USB LED
- Power connector
- Power LED
- Screw terminal banks (2)

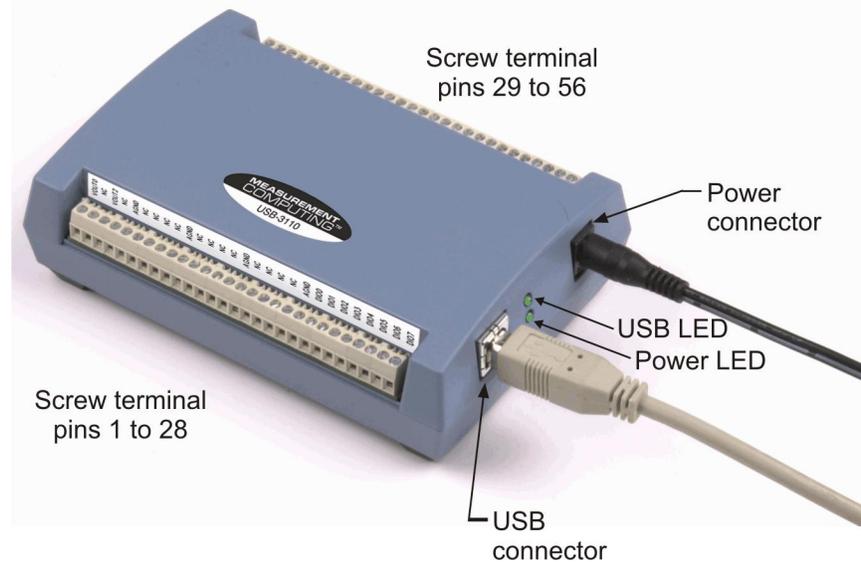


Figure 3. USB-3110 external components

### USB connector

The USB connector provides communication. Use the external power supply that shipped with the USB-3110 to power the device.

### USB LED

The USB LED indicates the communication status of the USB-3110. It uses up to 10 mA of current and cannot be disabled. The table below defines the function of the USB LED.

LED Illumination

LED Illumination	Indication
Steady green	The USB-3110 is connected to a computer or external USB hub.
Blinks continuously	Data is being transferred.

### Power connector

Connect the external power adapter (MCC part number PS-5V2AEPS) to this connector.

## Power LED

The power LED lights up when the USB-3110 is receiving power from the AC power adapter.

## Screw terminal banks

The USB-3110 has two rows of screw terminals—one row on the top edge of the housing, and one row on the bottom edge. Each row has 28 connections. Use 16 AWG to 30 AWG wire gauge when making screw terminal connections. Pin numbers are identified in Figure 4.

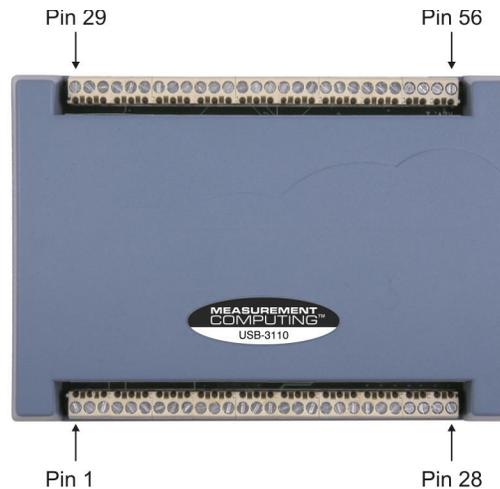


Figure 4. USB-3110 screw terminal pin numbering

### Screw terminal – pins 1-28

The screw terminals on the bottom edge of the USB-3110 (pins 1 to 28) provide the following connections:

- Two analog voltage output connections (**VOUT0**, **VOUT2**)
- Four analog ground connections (**AGND**)
- Eight digital I/O connections (**DIO0** to **DIO7**)

### Screw terminal – pins 29-56

The screw terminals on the top edge of the USB-3110 (pins 29 to 56) provide the following connections:

- Two analog voltage output connections (**VOUT1**, **VOUT3**)
- Four analog ground connections (**AGND**)
- One SYNC terminal for external clocking and multi-unit synchronization (**SYNCLD**)
- Three digital ground connections (**DGND**)
- One external event counter connection (**CTR**)
- One digital I/O pull-down resistor connection (**DIO CTL**)
- One voltage output power connection (**+5 V**)

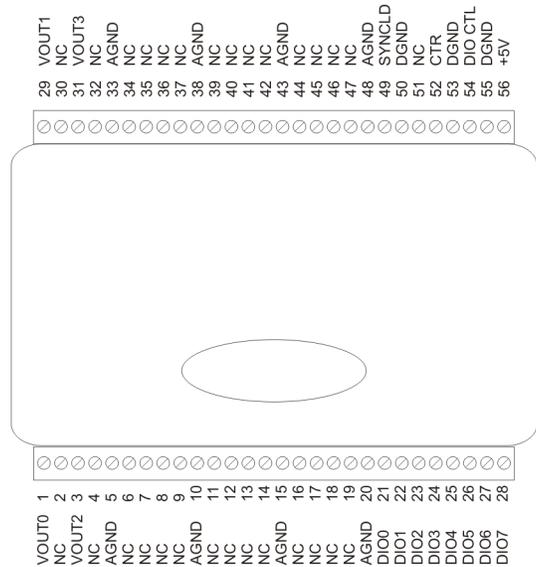


Figure 5. USB-3110 signal pin out

### Analog voltage output terminals (VOUT0 to VOUT3)

The screw terminal pins labeled **VOUT0** to **VOUT3** are voltage output terminals (see Figure 5). The voltage output range for each channel is software-programmable for either bipolar or unipolar. The bipolar range is  $\pm 10$  V, and the unipolar range is 0 to 10 V. The channel outputs may be updated individually or simultaneously.

### Digital I/O terminals (DIO0 to DIO7)

You can connect up to eight digital I/O lines to the screw terminals labeled **DIO0** to **DIO7** (pins 21 through 28). You can configure each digital port for either input or output.

When you configure the digital bits for input, you can use the digital I/O terminals to detect the state of any TTL level input. Refer to the switch shown in Figure 6 and the schematic shown in Figure 7. When the switch is set to the +5 V USER input, DIO7 reads *TRUE* (1). If you move the switch to DGND, DIO7 reads *FALSE* (0).

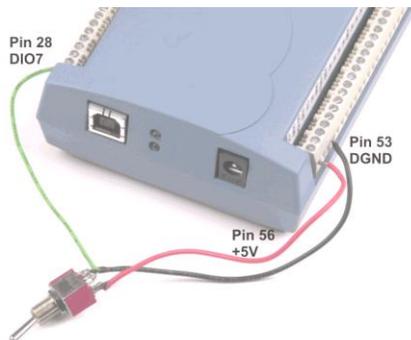


Figure 6. DIO7 detecting the state of a switch

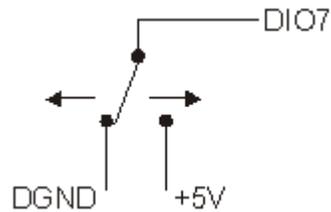


Figure 7. Schematic showing DIO7 detecting the state of a switch

**For more information on digital signal connections**

For more information on digital signal connections and digital I/O techniques, refer to the *Guide to Signal Connections* (available on our web site [www.mccdaq.com/pdfs/DAQ-Signal-Connections.pdf](http://www.mccdaq.com/pdfs/DAQ-Signal-Connections.pdf)).

## Digital I/O control terminal (DIO CTL) for pull-up/down configuration

All digital pins are floating by default. When inputs are floating, the state of unwired inputs are undefined (they may read high or low). You can configure the inputs to read a high or low value when they aren't wired. Use the **DIO CTL** connection (pin 54) to configure the digital pins for pull-up (inputs read high when unwired) or pull-down (inputs read low when unwired).

- To pull up the digital pins to +5V, wire the **DIO CTL** terminal pin to the **+5V** terminal pin (pin 56).
- To pull down the digital pins to ground (0 volts), wire the **DIO CTL** terminal pin to a **DGND** terminal pin (pin 50, 53, or 55).

## Ground terminals (AGND, DGND)

Eight analog ground (**AGND**) connections provide a common ground for all analog voltage output channels. Three digital ground (**DGND**) connections provide a common ground for the **DIO**, **CTR**, **SYNCLD** and **+5V** connections.

## Synchronous DAC load terminal (SYNCLD)

The synchronous DAC load connection (pin 49) is a bidirectional I/O signal that allows you to simultaneously update the DAC outputs on multiple devices. You can use this pin for two purposes:

- Configure as an input (slave mode) to receive the D/A LOAD signal from an external source.  
When the SYNCLD pin receives the trigger signal, the analog outputs are updated simultaneously.

### **SYNCLD pin must be logic low in slave mode for immediate update of DAC outputs**

When the SYNCLD pin is in slave mode, the analog outputs can be updated immediately or when a positive edge is seen on the SYNCLD pin (this is under software control.)

The SYNCLD pin must be at a low logic level for DAC outputs to update immediately. If the external source supplying the D/A LOAD signal is pulling the SYNCLD pin high, no update will occur.

Refer to the "USB-3100 Series" section in the *Universal Library User's Guide* for information on how to update DAC outputs immediately.

- Configure as an output (master mode) to send the internal D/A LOAD signal to the SYNCLD pin.  
You can use the SYNCLD pin to synchronize with a second USB-3110 and simultaneously update the DAC outputs on each device. Refer to [Synchronizing multiple units](#) section on page 16.

Use InstaCal to configure the SYNCLD mode as master or slave. On power up and reset the SYNCLD pin is set to slave mode (input).

Refer to the "USB-3100 Series" section in the *Universal Library User's Guide* for information on how to configure the USB-3110 with the Universal Library.

## Counter terminal (CTR)

The **CTR** connection (pin 52) is the input to the 32-bit event counter. The internal counter increments when the TTL levels transition from low to high. The counter can count frequencies of up to 1 MHz.

## Power terminal (+5V)

The **+5 V** connection (pin 56) draws power from the external power connector. This terminal is a +5V output.

**Caution!** The +5V terminal is an output. Do not connect to an external power supply or you may damage the USB-3110 and possibly the computer.

## Synchronizing multiple units

You can connect the **SYNCLD** terminal pin (pin 49) of two USB-3110 units together in a master/slave configuration and simultaneously update the DAC outputs of both devices. Do the following.

1. Connect the SYNCLD pin of the master USB-3110 to the SYNCLD pin of the slave USB-3110.
2. Configure the SYNCLD pin on the slave device for input to receive the D/A LOAD signal from the master device. Use InstaCal to set the direction of the SYNCLD pin.
3. Configure the SYNCLD pin on the master device for output to generate an output pulse on the SYNCLD pin.

Set the Universal Library `SIMULTANEOUS` option for each device. Refer to the *Universal Library User's Guide* for information on how to configure the USB-3110 with the Universal Library.

When the SYNCLD pin on the slave device receives the signal, the analog output channels on each device are updated simultaneously.

An example of a master/slave configuration is shown here.

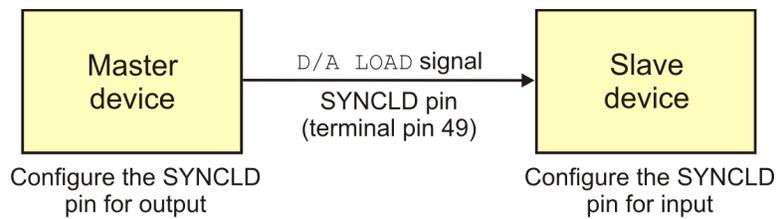


Figure 8. Synchronizing the update of multiple units

### Mechanical drawings

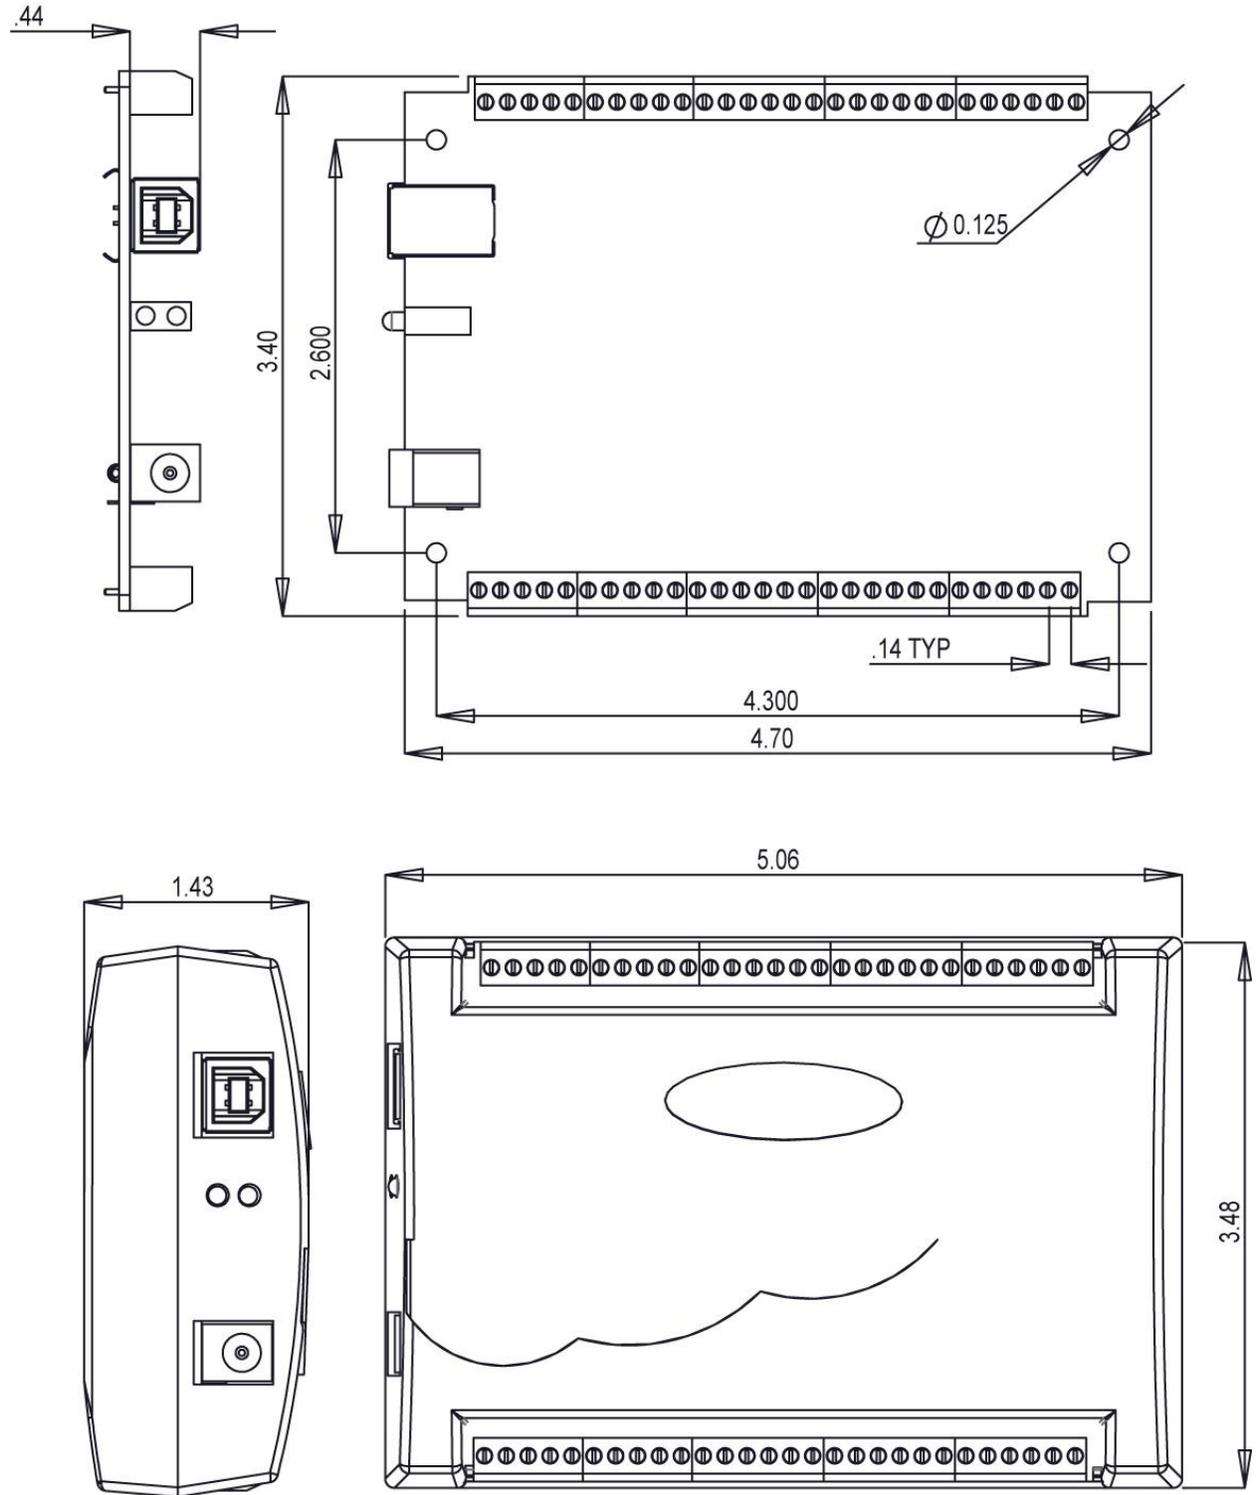


Figure 9. Circuit board (top) and housing dimensions

## Specifications

Typical for 25 °C unless otherwise specified.

Specifications in *italic text* are guaranteed by design.

### Analog voltage output

Table 1. Analog voltage output specifications

Parameter	Conditions	Specifications
Digital to Analog converter		DAC8554
Number of channels		4
Resolution		16 bits
Output ranges	Calibrated	$\pm 10$ V, 0 to 10 V Software configurable
	Un-calibrated	$\pm 10.2$ V, -0.04 to 10.08 V Software configurable
Output Transient	$\pm 10$ V to (0 to 10 V) or (0 to 10 V) to $\pm 10$ V range selection (Note 1)	Duration 5 $\mu$ S typ. Amplitude 5 V p-p typ.
	Host PC is reset, powered up, suspended or a reset command is issued to device. (Note 2)	Duration 2 S typ. Amplitude 2 V p-p typ.
	Initial power on.	Duration 50 mS typ. Amplitude 5 V peak typ
Differential non-linearity (Note 3)	Calibrated	$\pm 1.25$ LSB typ. -2 LSB to +1 LSB max.
	Un-calibrated	$\pm 0.25$ LSB typ. $\pm 1$ LSB max.
Current output (Note 4)	VOUTx pins	$\pm 40$ mA max.
Output short-circuit protection (Note 4)	VOUTx connected to AGND	100 mS max.
Output coupling		DC
Power on and reset state		DACs clear to zero-scale: 0 V, $\pm 50$ mV typ.
		Output Range: 0-10V
Output noise	0 to 10 V range	14.95 $\mu$ Vrms typ.
	$\pm 10$ V range	31.67 $\mu$ Vrms typ.
<i>Settling time</i>	<i>to 1 LSB accuracy</i>	<i>25 <math>\mu</math>S typ.</i>
Slew rate	0 to 10 V range	2.0 V/ $\mu$ S typ.
	$\pm 10$ V range	4.0 V/ $\mu$ S typ.
Throughput	single channel	100 Hz max., system dependent
	multi-channel	100 Hz/#ch max., system dependent

**Note 1:** The USB-3110 output voltage level defaults to 0V whenever the output voltage range is reconfigured.

The USB-3110 output voltage level will also default to 0V:

1. Whenever the host PC is reset, shut down or suspended
2. If a reset command is issued to the device.

**Note 2:** The duration of this particular output transient is highly dependent on the enumeration process of the host PC. Typically the output of the USB-3110 is stable after 2 seconds.

**Note 3:** The maximum differential non-linearity specification applies to the entire 0 to 50 °C temperature range of the USB-3110. This specification also accounts for the maximum errors due to the software calibration algorithm (in Calibrated mode only) and the DAC8554 digital to analog converter non-linearities.

**Note 4:** The USB-3110 voltage outputs should not be kept in a short-circuit condition for longer than the specified limit of 100 ms. For those applications that may potentially exceed the 40 mA maximum current limit or the 100 ms short-circuit condition, external current limiting must be used to prevent potential damage to the USB-3110.

Table 2. Absolute accuracy specifications – calibrated output,  $V_{OUTx}$  Rload = 20 mA fixed resistive load

Range	Accuracy ( $\pm$ LSB)
$\pm 10$ V	14.0
0 to 10 V	22.0

Table 3. Absolute accuracy components specifications – calibrated output

Range	% of reading	Offset ( $\pm$ mV)	Temp drift (%/°C)	Absolute accuracy at FS ( $\pm$ mV)
$\pm 10$ V	$\pm 0.0183$	1.831	0.00055	3.661
0 to 10 V	$\pm 0.0183$	0.915	0.00055	2.746

Table 4. Relative accuracy specifications

Range	Relative accuracy ( $\pm$ LSB)
$\pm 10$ V, 0 to 10 V	4.0 typ.      12.0 max.

## Analog output calibration

Table 5. Analog output calibration specifications

Parameter	Conditions	Specifications
Recommended warm-up time		15 minutes min.
On-board precision reference		DC level: 5.000 V $\pm$ 1 mV max.
		Tempco: $\pm 10$ ppm/°C max.
		Long term stability: $\pm 10$ ppm/SQRT(1000 hrs)
Calibration method	$V_{outx}$ Rload = 20 mA fixed resistive load	Software calibration
Calibration interval		1 year

## Digital input/output

Table 6. Digital I/O specifications

Digital logic type	CMOS
Number of I/O	8
Configuration	Independently configured for input or output
Pull-up/pull-down configuration (Note 5)	User configurable All pins floating (default)
Digital I/O input loading	TTL (default) 47K ohms (pull-up/pull down configurations)
Digital I/O transfer rate (system paced)	System dependent, 33 to 1000 port reads/writes or single bit reads/writes per second.
Input high voltage	2.0 V min, 5.5 V absolute max
Input low voltage	0.8 V max, -0.5 V absolute min
Output high voltage (IOH = -2.5 mA)	3.8 V min
Output low voltage (IOL = 2.5 mA)	0.7 V max
Power on and reset state	Input

**Note 5:** Pull up and pull down configuration area available using the DIO CTL terminal block pin 54. The pull down configuration requires the DIO CTL pin (pin 54) to be connected to a DGND pin (pin 50, 53 or 55). For a pull up configuration, the DIO CTL pin should be connected to the +5V terminal pin (pin 56).

## Synchronous DAC Load

Table 7. SYNCLD I/O specifications

Parameter	Conditions	Specification
Pin name		SYNCLD (terminal block pin 49)
Power on and reset state		Input
Pin type		Bidirectional
Termination		Internal 100K ohms pull-down
Software selectable direction	Output	Outputs internal D/A LOAD signal.
	Input	Receives D/A LOAD signal from external source.
Input clock rate		100 Hz max
Clock pulse width	Input	1 $\mu$ s min
	Output	5 $\mu$ s min
<i>Input leakage current</i>		$\pm 1.0 \mu$ A <i>typ.</i>
Input high voltage		4.0 V min, 5.5 V absolute max
Input low voltage		1.0 V max, -0.5 V absolute min
Output high voltage (Note 6)	IOH = -2.5 mA	3.3 V min
	No load	3.8 V min
Output low voltage (Note 6)	IOL = 2.5 mA	1.1 V max
	No load	0.6 V max

**Note 6:** SYNCLD is a Schmitt trigger input and is over-current protected with a 200 Ohm series resistor.

**Note 7:** When SYNCLD is in input mode, the analog outputs may either be updated immediately or when a positive edge is seen on the SYNCLD pin (this is under software control.) However, the pin must be at a low logic level in order for the DAC outputs to be updated immediately. If an external source is pulling the pin high, no update will occur.

## Counter

Table 8. CTR I/O specifications

Parameter	Conditions	Specification
Pin name		CTR
Number of channels		1
Resolution		32-bits
Counter type		Event counter
Input type		TTL, rising edge triggered
Counter/timer read/writes rates (software paced)	Counter read	System dependent, 33 to 1000 reads per second.
	Counter write	System dependent, 33 to 1000 reads per second.
Schmidt trigger hysteresis		20 mV to 100 mV
Input leakage current		$\pm 1.0 \mu\text{A typ.}$
Input frequency		1 MHz max.
High pulse width		500 ns min.
Low pulse width		500 ns min.
Input high voltage		4.0 V min, 5.5 V absolute max
Input low voltage		1.0 V max, -0.5 V absolute min

## Memory

Table 9. Memory specifications

EEPROM	256 bytes		
EEPROM configuration	Address range	Access	Description
	0x000-0x0FF	Read/write	256 bytes user data

## Microcontroller

Table 10. Microcontroller specifications

Type	High performance 8-bit RISC microcontroller
Program memory	16,384 words
Data memory	2,048 bytes

## Power

Table 11. Power specifications

Parameter	Conditions	Specification
Supply current	USB enumeration	< 100 mA
Supply current (Note 8)	Quiescent current	160 mA typ.
+5V user output voltage range (Note 9)	Available at terminal block pin 56	4.5 V min, 5.25 V max.
+5V user output current (Note 10)	Available at terminal block pin 56	10 mA max.
<b>AC Power Adapter Requirements (Note 11)</b>		
Output voltage		5V, $\pm 5\%$
Output wattage		10 watts
Power jack configuration		Two conductor
Power jack barrel diameter		6.3 mm
Power jack pin diameter		2.0 mm
Power jack polarity		Center positive

**Note 8:** This is the total quiescent current requirement for the USB-3110 which includes up to 10 mA for the status LED. This does not include any potential loading of the digital I/O bits, +5V user terminal or the VOUTx outputs.

**Note 9:** Output voltage range assumes external input power supply is within specified limits.

**Note 10:** This refers to the total amount of current that can be sourced from the +5V user terminal (pin 56) for general use. This specification also includes any additional contribution due to DIO loading.

**Note 11:** The USB-3110 product includes an AC power adapter (MCC part number PS-5V2AEPS).

## USB specifications

Table 12. USB specifications

USB device type	USB 2.0 (full-speed)
USB device compatibility	USB 1.1, 2.0
USB cable length	3 meters max.
USB cable type	A-B cable, UL type AWM 2527 or equivalent (min 24 AWG VBUS/GND, min 28 AWG D+/D-).

## Environmental

Table 13. Environmental specifications

Operating temperature range (Note 12)	0 to 50 °C
Storage temperature range	-40 to 85 °C
Humidity	0 to 90% non-condensing

**Note 12:** The environmental specifications listed in Table 13 apply only to the USB-3110 and not the AC power adapter.

## Mechanical

Table 14. Mechanical specifications

Dimensions	127 mm (L) x 88.9 mm (W) x 35.56 (H)
------------	--------------------------------------

## Main connector and pin out

Table 15. Main connector specifications

Connector type	Screw terminal
Wire gauge range	16 AWG to 30 AWG

Pin	Signal Name	Pin	Signal Name
1	VOUT0	29	VOUT1
2	NC	30	NC
3	VOUT2	31	VOUT3
4	NC	32	NC
5	AGND	33	AGND
6	NC	34	NC
7	NC	35	NC
8	NC	36	NC
9	NC	37	NC
10	AGND	38	AGND
11	NC	39	NC
12	NC	40	NC
13	NC	41	NC
14	NC	42	NC
15	AGND	43	AGND
16	NC	44	NC
17	NC	45	NC
18	NC	46	NC
19	NC	47	NC
20	AGND	48	AGND
21	DIO0	49	SYNCLD
22	DIO1	50	DGND
23	DIO2	51	NC
24	DIO3	52	CTR
25	DIO4	53	DGND
26	DIO5	54	DIO CTL
27	DIO6	55	DGND
28	DIO7	56	+5V

# CE Declaration of Conformity

Manufacturer: Measurement Computing Corporation  
Address: 10 Commerce Way  
Suite 1008  
Norton, MA 02766  
USA

Category: Electrical equipment for measurement, control and laboratory use.

Measurement Computing Corporation declares under sole responsibility that the product

## USB-3110

to which this declaration relates is in conformity with the relevant provisions of the following standards or other documents:

EU EMC Directive 89/336/EEC: Electromagnetic Compatibility, EN 61326 (1997) Amendment 1 (1998)

Emissions: Group 1, Class A

- EN 55011 (1990)/CISPR 11: Radiated and Conducted emissions.

Immunity: EN61326, Annex A

- IEC 61000-4-2 (1995): Electrostatic Discharge immunity, Criteria C.
- IEC 61000-4-3 (1995): Radiated Electromagnetic Field immunity Criteria A.
- IEC 61000-4-4 (1995): Electric Fast Transient Burst immunity Criteria A.
- IEC 61000-4-5 (1995): Surge immunity Criteria A.
- IEC 61000-4-6 (1996): Radio Frequency Common Mode immunity Criteria A.
- IEC 61000-4-8 (1994): Power Frequency Magnetic Field immunity Criteria A.
- IEC 61000-4-11 (1994): Voltage Dip and Interrupt immunity Criteria A.

Declaration of Conformity based on tests conducted by Chomerics Test Services, Woburn, MA 01801, USA in April, 2006. Test records are outlined in Chomerics Test Report #EMI4498.06.

We hereby declare that the equipment specified conforms to the above Directives and Standards.



Carl Haapaoja, Director of Quality Assurance

**Measurement Computing Corporation**  
10 Commerce Way  
Norton, Massachusetts 02766  
(508) 946-5100  
Fax: (508) 946-9500  
E-mail: [info@mccdaq.com](mailto:info@mccdaq.com)  
[www.mccdaq.com](http://www.mccdaq.com)

**NI Hungary Kft**  
H-4031 Debrecen, Hátar út 1/A, Hungary  
Phone: +36 (52) 515400  
Fax: +36 (52) 515414  
<http://hungary.ni.com/debrecen>