


# WBK41

## Multifunction I/O Module

### Features

- Provides TC inputs, digital I/O and frequency/timer I/O for WaveBook/516E systems
- Attaches to the WaveBook/516E parallel expansion port
- WBK41 measurements do not consume measurement bandwidth from the WaveBook/516E
- Optional analog output capability
- Optional TC detection
  - $\pm 100$  mV input module

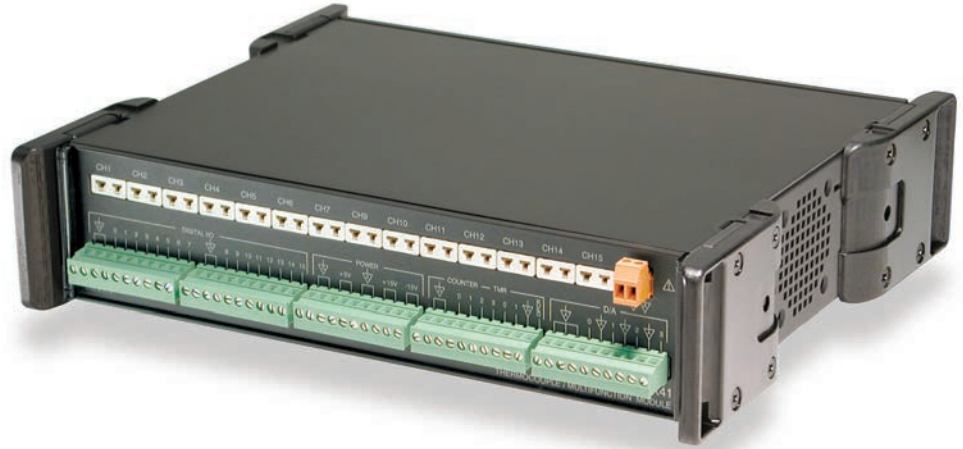

The WBK41 attaches to the parallel expansion port on the WaveBook/516E, and provides 14 thermocouple inputs, 40 digital I/O lines, 4 counter inputs, and 2 timer outputs. The WBK41 can also be supplied with an internal, 4-channel, 16-bit, 100kHz analog output option.

*The WBK41 provides thermocouple inputs, counter inputs, timer outputs, digital I/O, and analog output for WaveBook systems*


The WBK41 includes a 16-bit, 200 kHz A/D converter, and thus the WBK41 does not consume valuable sampling time from the WaveBook's 1 MHz A/D converter. Measurements with the WBK41 are made synchronous with the WaveBook/516E, providing precise time correlation between readings from both measurement devices.

The built-in TC channels on the WBK41 are accessed via mini-TC connectors on the front panel. The counter/timer functions and 16 bits of digital I/O are accessed via removable front panel screw-terminal connectors. Additional digital I/O and expansion connectors are located at the rear of the WBK41.

The WBK41 can be easily expanded beyond its built-in channel capacity. A maximum WBK41 system can include up to 224 TC input channels, 272 digital I/O channels, 4 analog output channels, 4 counter input channels and 2 timer output channels.

In synchronous master/slave systems or when using a WBK41 module, it is possible to run the slave units at a slower clock rate than that of the master device in the system. This configuration may be necessary when it is desirable to have a systems which has signals that need to be sampled at widely varying rates while remaining time synchronous to the master unit.

### WBK41 Multifunction I/O Module Block Diagram

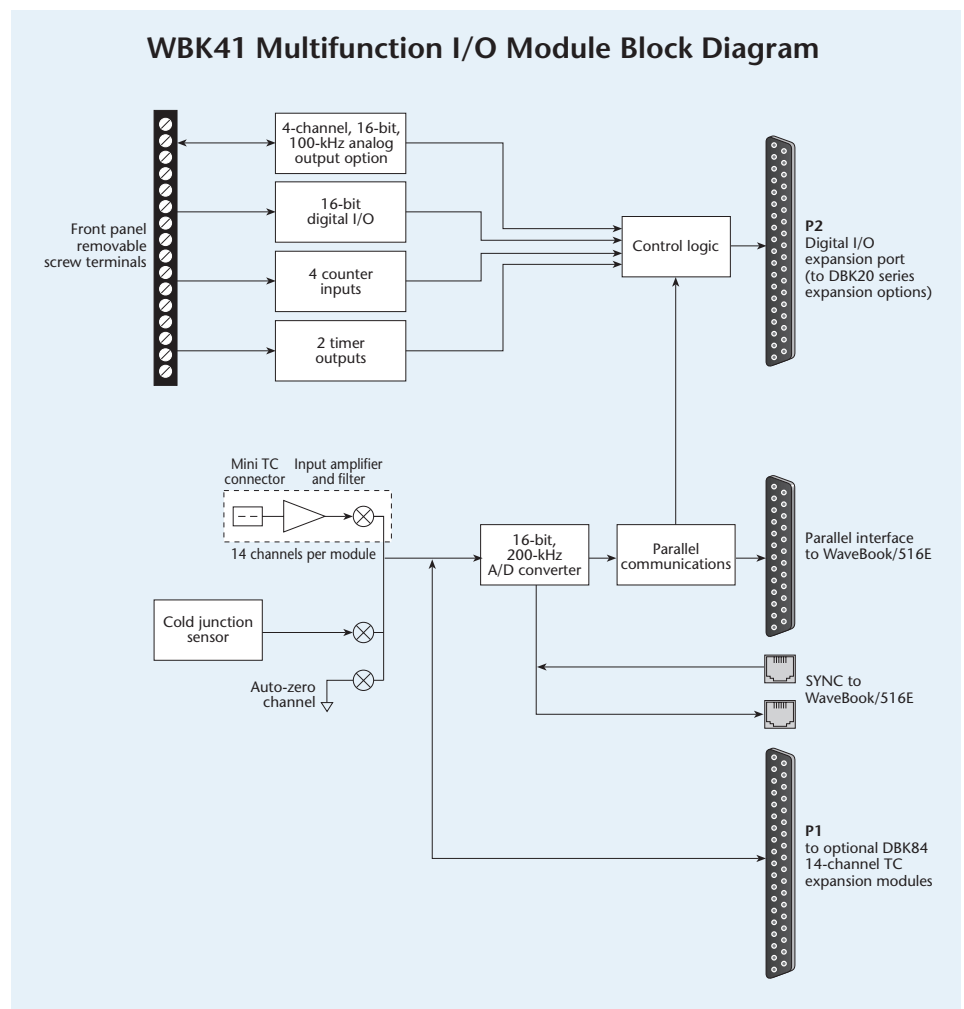

# WBK41

## General Information



When such a configuration exists the master unit is connected to the slave or WBK41 via the SYNC ports. The SYNC ports allow the master unit to pass its trigger and acquisition clock signals to the slave devices. When the slave devices receive the clock they can divide the master clock by 1 to 65535 to determine their own acquisition clock rate. Each slave can be programmed to a clock divider independent of other slave units in the system. For example, suppose that a high speed system is configured with 8 accelerometers on the master WaveBook system but we also need to scan 8 much slower moving temperature using a WBK40. In this example, suppose the 8 accelerometer channels are scanned at 100 kHz each while we need to only scan the WBK40 temperature channels at 10 kHz. Here, since we wish to scan the temperature channels 10 times slower than the accelerometer channels, the WBK40 clock divider would be set to 10. This configuration results in the 8 accelerometer channels to be scanned every 10  $\mu$ s while the temperature channels on the WBK40 will be scanned every 100  $\mu$ s.

### Thermocouple Measurements

The 14-channel thermocouple inputs on the WBK41 can accept any type of TC, including types J, K, S, T, E, B, R, and N thermocouples as well as voltage up to  $\pm 100$  mV. The WBK41 automatically converts the TC measurement into temperature readings, including cold-junction compensation and linearization. Open TC detection and overload protection up to  $\pm 40$ V is also included on every channel. To expand beyond the built-in 14 TC input channels, up to fifteen DBK84 expansion modules can be attached to one WBK41, providing an additional 14 TC input channels per module, or a total of 224 TC channels.

### Digital I/O

Forty digital I/O lines are built-into the WBK41. Sixteen of the I/O are accessible via front-panel removable screw terminal connectors, and can be defined under program control as all inputs or all outputs. As inputs, these channels can be scanned synchronously during an acquisition, or asynchronously under program control. As outputs, these lines can be set prior to an acquisition, or changed during an acquisition (if used with a programming environment such as Visual Basic®, C, or LabVIEW®).

In addition to the 16 front-panel digital I/O lines, 24 additional lines are also provided on the rear panel 37-pin D connector. These lines are logically divided into three 8-bit ports, with each port programmable as input or output. As with the front-panel digital I/O, these lines can be scanned as inputs along with other channels in a scan group, or read during an acquisition when a programming environment is being used.

The rear digital I/O port can also be used as a digital I/O expansion port, where it can be expanded up to 256 digital I/O lines using our DBK20 Series of DBK options. These options provide additional signal I/O, including optical isolation and relay closure.

### Frequency Inputs

Four 16-bit counters are built into the WBK41, each capable of counting up to 65,536 TTL-level transitions. Each of the four counters will accept frequency inputs up to 10 MHz. The counters can also be cascaded, allowing over four billion counts to be accumulated. The counter inputs can be read asynchronously under program control, or synchronously as part of an analog scan group. All frequency input lines are accessible via removable front-panel screw-terminal blocks.

### Timer Outputs

Two 16-bit TTL-level timer outputs are built into the WBK41, each capable of generating a square wave with a programmable frequency range from 16 Hz to 1 MHz. Timer outputs are accessible via removable front-panel screw-terminal blocks.

# WBK41

## Specifications



| TC Accuracy at Measurement Temperature in °C (± °C) |      |      |      |     |     |     |     |     |     |      |      |
|---|------|------|------|-----|-----|-----|-----|-----|-----|------|------|
| Type  | Min  | Max  | -100 | 0   | 100 | 300 | 500 | 700 | 900 | 1100 | 1400 |
| J   | -200 | 760  | 0.8  | 0.7 | 0.7 | 0.8 | 0.9 | 0.9 | —   | —    | —    |
| K   | -200 | 1200 | 0.9  | 0.8 | 0.8 | 0.9 | 1.1 | 1.1 | 1.2 | 1.3  | —    |
| T   | -200 | 400  | 0.9  | 0.8 | 0.8 | 0.8 | —   | —   | —   | —    | —    |
| E   | -270 | 650  | 0.8  | 0.7 | 0.7 | 0.7 | 0.8 | —   | —   | —    | —    |
| S   | -50  | 1768 | —    | 3.1 | 2.4 | 2.0 | 2.0 | 1.9 | 2.0 | 2.1  | 2.1  |
| R   | -50  | 1768 | —    | 3.1 | 2.1 | 2.0 | 1.9 | 1.9 | 1.7 | 1.9  | 2.0  |
| B   | 50   | 1780 | —    | —   | —   | 4.9 | 3.2 | 2.8 | 2.4 | 2.3  | 2.0  |
| N28   | -270 | 400  | 1.2  | 0.9 | 0.9 | 0.9 | —   | —   | —   | —    | —    |
| N14   | 0    | 1300 | —    | 0.9 | 0.9 | 0.9 | 1.1 | 1.1 | 1.2 | 1.3  | —    |

## Specifications

### General

**Supply Voltage Range:** 10 to 30 VDC  
**Power Available for DBK84 Expansion Options:** Up to eight DBK84 options can be powered from the WBK41; for applications with 9 to 15 options, a DBK32A must be added to the system  
**Operating Temperature:** 0 to +50 °C  
**Storage Temperature:** -40 to +80 °C  
**Relative Humidity:** 0 to 95%, non-condensing  
**Vibration:** MIL STD 810E  
**System Connector:** DB37 male for P1  
**TC/mV Connector:** Mini-TC connectors  
**Dimensions:** 285 mm W x 220 mm D x 70 mm H (11" x 8.5" x 2.70")  
**Weight:** 1.6 kg (3.5 lbs)

### A/D Specifications

**Type:** Successive approximation  
**Resolution:** 16 bit  
**Conversion Time:** 5 µs  
**Maximum Sample Rate:** 200 kHz  
**Nonlinearity (Integral):** ±1 LSB  
**Nonlinearity (Differential):** No missing codes

### Thermocouple Inputs

**Functions:** TC types J, K, S, T, E, B, R, N; x100 (voltage)  
**Inputs:** 14 differential TC/mV inputs  
**Input Voltage Range:** ±100 mV  
**Input Impedance:** 40M Ohm (differential)  
**Input Bandwidth:** 4 Hz  
**Input Bias Current:** 10 nA typ  
**CMRR:** 100dB typ  
**Maximum Working Voltage (signal + common mode):** ±10V  
**Over-Voltage Protection:** ±40V  
**Voltage Accuracy:** ±(0.2% of rdg +50 µV)  
**TC Accuracy\*:** Valid for one year, 18 to 28 °C, see table above  
**Minimum Resolution:** 0.1 °C for all TC types

### Input Sequencer

Analog, digital and frequency inputs can be scanned synchronously, based on either an internal programmable timer, or an external clock source.  
**Scan Clock Sources:** 2  
 1. Internal, programmable from 5 µs to 5.96 hours in 5 µs steps\*\*  
 2. External, TTL level input up to 200 kHz max  
**Depth:** 512 locations  
**Channel-to-Channel Scan Rate:** 5 µs  
**Data Buffer:** 64 Ksample FIFO

### External Acquisition Scan Clock Input

**Maximum Rate:** 200 kHz  
**Clock Signal Range:** 0V to +5V  
**Minimum Pulse Width:** 50 ns high, 50 ns low  
**External SYNC Port:** Available on rear panel, allows multiple DaqBook/2000 units to be scan-synchronous (post trigger)

### Digital I/O

**Channels:** 40  
**Input Scanning Modes:** 2  
 1. Asynchronous, under program control at any time relative to input scanning  
 2. Synchronous with input scanning  
**Ports:** 3 x 8-bit (rear panel DB37 connector), and 1 x 16-bit (front panel screw terminal); each port is programmable as input or output  
**Input Protection:** ±8KV ESD clamp diodes parallel  
**I/O Levels:** TTL  
**Sampling/Update Rate:** 200 kHz max

### Frequency/Pulse Counters

Counter inputs can be scanned synchronously along with analog and digital scanned inputs, based either on internal programmable timer, or an external clock source. Counters can be configured to clear when read, or to totalize and clear under program control.  
**Channels:** 4 x 16-bit; cascadable as 2 x 32-bit  
**Frequency Measurement Rate:** 10 MHz max  
**Input Signal Range:** -15V to +15V  
**Trigger Level:** TTL  
**Minimum Pulse Width:** 50 ns high, 50 ns low

### Frequency/Pulse Generators

**Channels:** 2 x 16-bit  
**Output Waveform:** Square wave  
**Output Rate:** 1 MHz base rate divided by 1 to 65535 (programmable)  
**High-Level Output Voltage:** 2.0V min @ -3.75 mA; 3.0V min @ -2.5 mA  
**Low-Level Output Voltage:** 0.4V max @ 2.5 mA

## Ordering Information

| Description                                    | Part No. |
|--|----------|
| Multifunction I/O module for the WaveBook/516E | WBK41    |
| 14-channel TC expansion module for the WBK41   | DBK84    |
| 56-channel thermocouple input module           | DBK90    |

### Accessories & Cables

| Description  | Part No. |
|--|----------|
| Rack mount kit   | RackDBK4 |
| Expansion cable for connecting DBK84 options; specify number of DBK84 options (x) to be connected                      | CA-37-x  |
| SYNC cable for multi-unit synchronization; 1 ft.   | CA-74-1  |
| 5-pin male DIN to 5-pin male DIN provides convenient connection between WBK41 power input connectors and battery packs | CA-115   |
| 5-pin DIN to automobile cigarette lighter power cable, 8 ft.   | CA-116   |

### Male Connectors for Subminiature TC Jacks

| Description           | Part No.  |
|-----------------------|-----------|
| Type J male connector | CN-144-JM |
| Type K male connector | CN-144-KM |
| Type T male connector | CN-144-TM |

### Product Compatibility

✓ WaveBook

\* Accuracy conditions:  
 - Exclusive of thermocouple errors  
 - Exclusive of noise  
 - VCM=0  
 - 25 °C ambient temperature, stabilized for 1 hour  
 \*\* Clock does not apply when SYNC'd to a WaveBook

**Note:** The WBK40 and WBK41 are not currently supported in WaveView. We recommend using DASYLab® when using these modules, which includes full support for the WBK40/41. The WBK40/41 are also supported in LabVIEW®, and DaqCOM. If it is necessary to use these modules in conjunction with a WaveView application, then it is necessary that a second, concurrent application be launched to acquire data from the WBK40/41 into separate data files.