

# **CB-7000 DIO**

## **User's Manual**

**CB-7041/7041D**

**CB-7042/7042D**

**CB-7043/7043D**

**CB-7044/7044D**

**CB-7050/7050D**

**CB-7052/7052D**

**CB-7053/7053D**

**CB-7060/7060D**

**CB-7063/7063D/A/AD/B/BD**

**CB-7065/7065D/A/AD/B/BD**

**CB-7066/7066D**

**CB-7067/7067D**

**Measurement Computing Corp.**

Copyright September, 2000. All rights are reserved.

# Table of Contents

<b>1. Introduction</b>	<b>4</b>
1.1 More Information	4
1.2 Pin Assignments	5
1.3 Specifications	9
1.4 Block Diagrams	13
1.5 Wire Connection	21
1.6 Quick Start	24
1.7 Default Settings	24
1.8 Jumper Settings	24
1.9 Configuration Tables	24
<b>2. Command</b>	<b>26</b>
2.1 %AANNTTCFF	28
2.2 #**	29
2.3 #AABBDD	30
2.4 #AAN	33
2.5 \$AA2	34
2.6 \$AA4	35
2.7 \$AA5	36
2.8 \$AA6	37
2.9 \$AAF	38
2.10 \$AAM	39
2.11 \$AAC	40
2.12 \$AACN	41

2.13 \$AALS .....	42
2.14 @AA .....	43
2.15 @AA(Data) .....	44
2.16 ~AAO(Data) .....	46
2.17 ~** .....	47
2.18 ~AA0 .....	48
2.19 ~AA1 .....	49
2.20 ~AA2 .....	50
2.21 ~AA3EVV .....	51
2.22 ~AA4V .....	53
2.23 ~AA5V .....	55
<b>3. Application Note.....</b>	<b>57</b>
3.1 INIT* pin Operation .....	57
3.2 Module Status .....	57
3.3 Dual Watchdog Operation .....	58
3.4 Reset Status.....	58
3.5 Digital Output .....	58
3.6 Latch Digital Input .....	59
<b>4 DN Module.....</b>	<b>60</b>
4.1 DN-SSR4 .....	60
4.2 DN-PR4 .....	61
4.3 RM-104, RM-108, RM-116 .....	62
4.4 RM-204, RM-208, RM-216 .....	63
4.5 Application .....	64

# 1. Introduction

CB-7000 is a family of network data acquisition and control modules. They provide analog-to-digital, digital-to-analog, digital input/output, timer/counters and other functions. These modules can be remotely controlled by a set of commands. The DIO modules support TTL signals, photo-isolated digital inputs, relay contact outputs, solid-state relay outputs, PhotoMOS outputs, and open-collector outputs. Refer to *Sec. 1.3* for detailed information.

## 1.1 More Information

**1.1 CB-7000 Overview**





**1.2 CB-7000 Pin Assignments**





**1.3 CB-7000 Specifications**





**1.4 CB-7000 Block Diagrams**


**1.5 CB-7000 Connections**

# 1.2 Pin Assignments

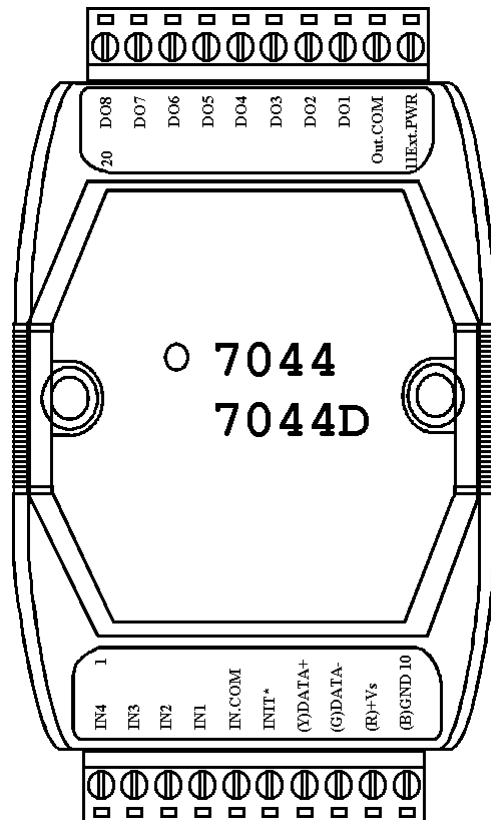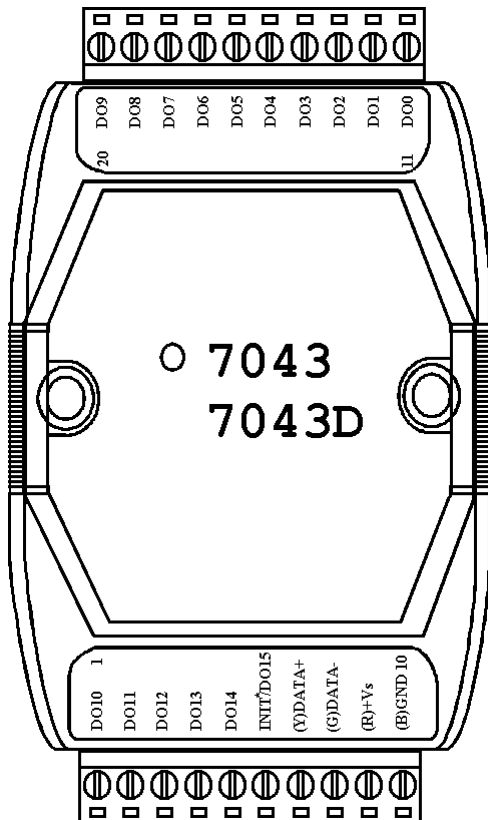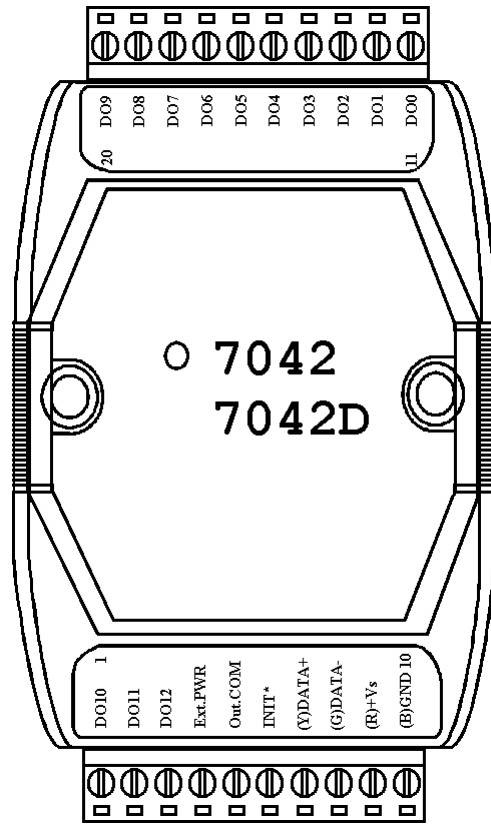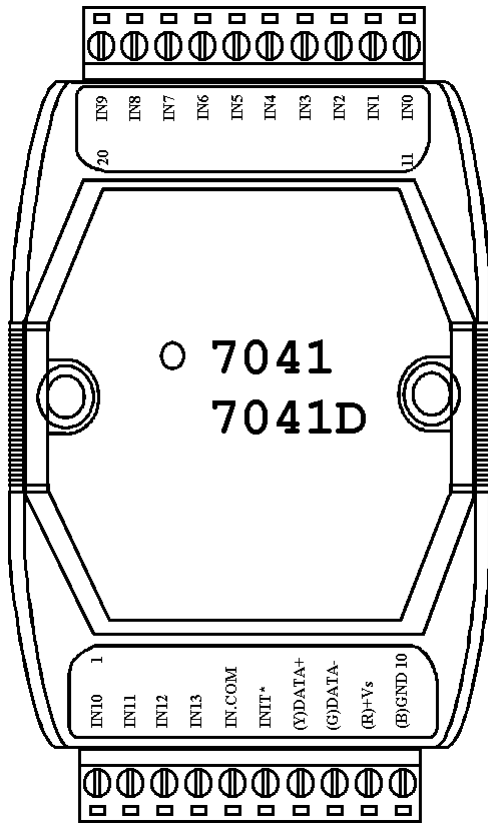

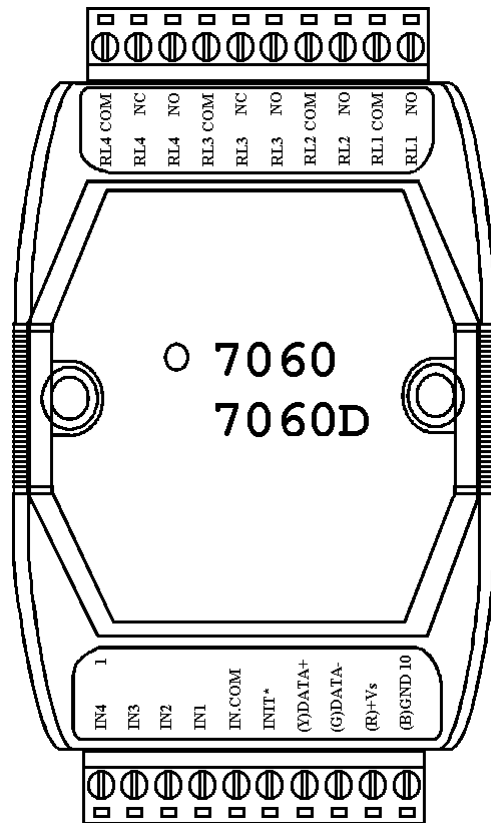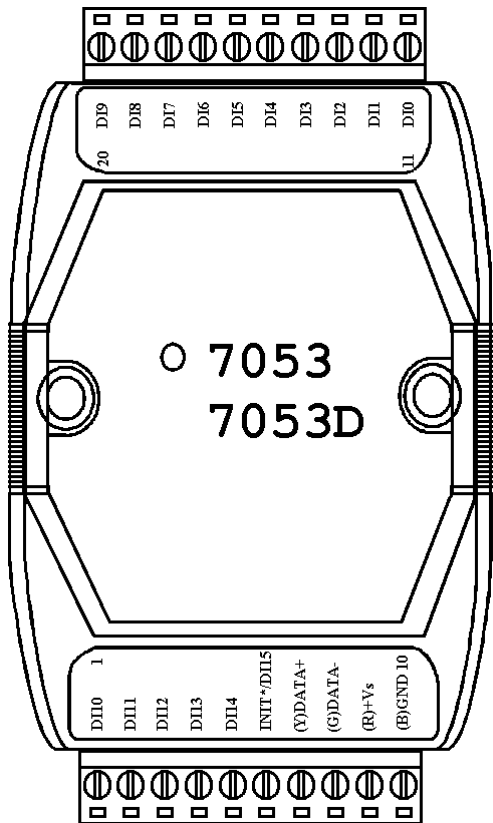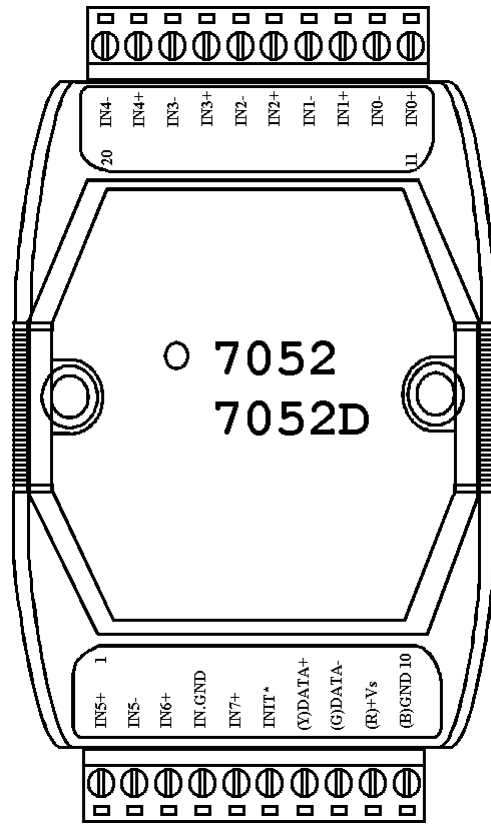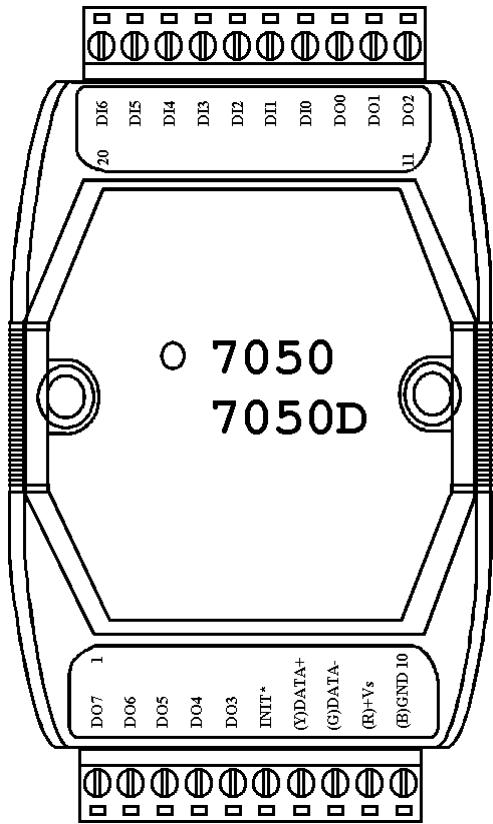

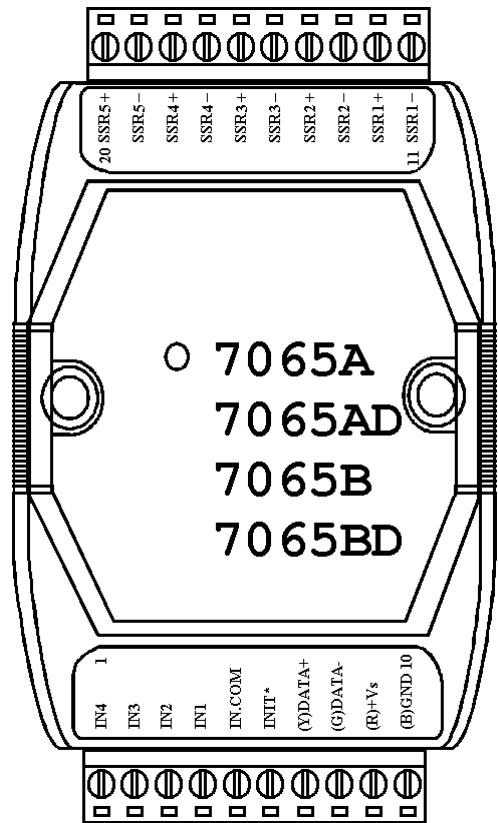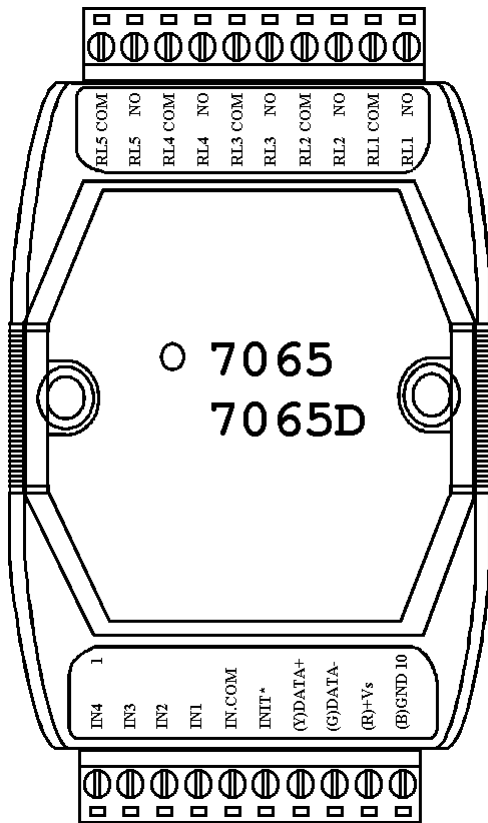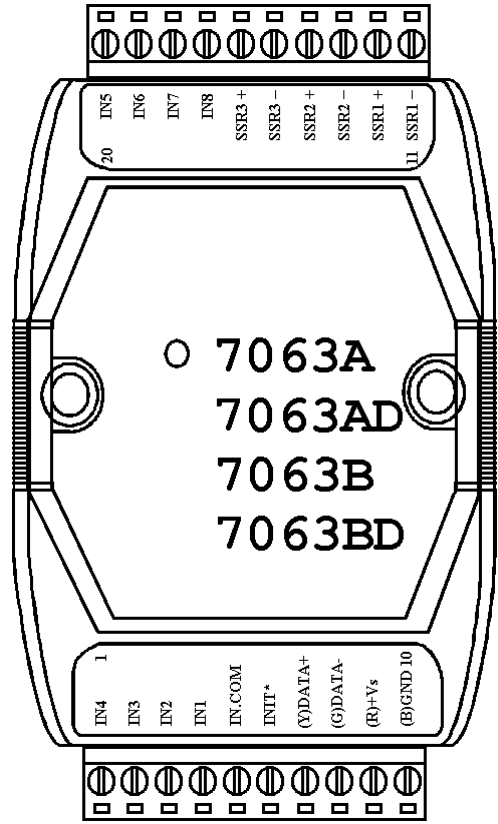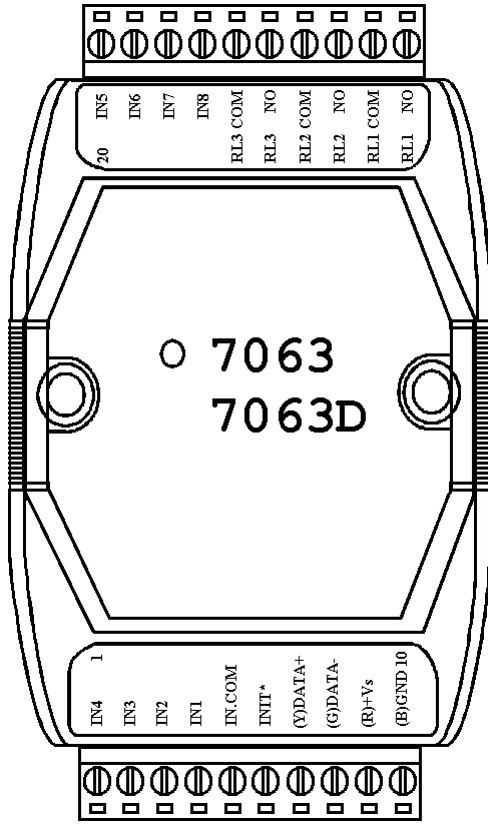

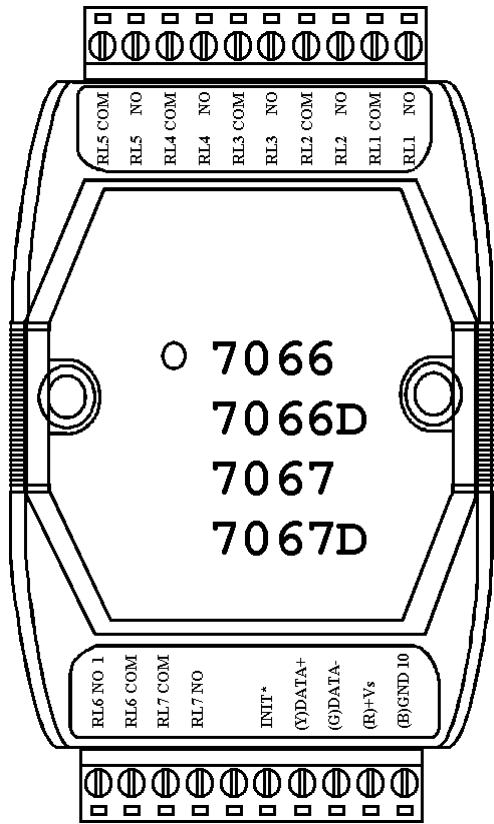



# 1.3 Specifications

Digital Input Modules			
	I-7041/41D	I-7052/52D	I-7053/53D
Input Channels	14	8	16
Isolation	Isolation with Common Source	6 differential and 2 common ground	Non-Isolated
Isolation Voltage	3750 Vrms	5000 Vrms	Non-Isolated
Digital Level 0	+1V max	+1V max	+2V max
Digital Level 1	+4 to +30 V	+4 to +30 V	+4 to +30 V
Input Impedance	3K ohms	3K ohms	820 ohms
Power Input	+10 to +30 VDC		
Power Consumption	0.2W(I-7041) 0.9W(I-7041D)	0.2W(I-7052) 0.6W(I-7052D)	0.7W(I-7053) 0.9W(I-7053D)

PhotoMOS Output Module	
	I-7066/66D
Output Channels	7
Load Current	0.13A
Load Voltage	350V max
Isolation Voltage	5000VAC
TurnOn Time	0.7mS typ
TurnOff Time	0.05mS typ
Power Input	+10 to +30 VDC
Power Consumption	0.5W(I-7066) 0.8W(I-7066D)



Open Collector Output Modules				
	I-7042 I-7042D	I-7043 I-7043D	I-7044 I-7044D	I-7050 I-7050D
Output Channels	13	16	8	8
Isolation	Isolation with Common Power	Non-Isola- tion	Isolation with Common Power	Non-Isola- tion
Isolation Voltage	3750 Vrms		3750 Vrms	
Load Voltage	Max +30V			
Max Load Current	100mA		375mA	30mA
Input Channels	No-Inputs		4	7
Isolation			Isolation with Common Source	Non-Isola- tion
Isolation Voltage			3750 Vrms	
Digital Level 0			1V max	1V max
Digital Level 1			4 to 30V	3.5 to 30V
Input Impedance			3K ohms	
Power Input			+10 to +30 VDC	
Power Consumption	1.0W (I-7042) 1.7W (I-7042D)	0.4W (I-7043) 1.1W (I-7043D)	1.0W (I-7044) 1.7W (I-7044D)	0.4W (I-7050) 1.1W (I-7050D)



Relay Output Modules				
	I-7060 I-7060D	I-7063 I-7063D	I-7065 I-7065D	I-7067 I-7067D
Output Channels	4	3	5	7
Relay Type	RL1, RL2 : Form A RL3, RL4 : Form C	Form A	Form A	Form A
Contact Rating	0.6A @125VAC 2A @30VDC	5A@250VAC 5A@30VDC		0.5A @120VAC 1.0A @24VDC
Surge Strength	500V	4000V		1500V
Operate Time	3mS	6mS Max.		5mS Max.
Release Time	2mS	3mS Max.		2mS Max.
Min. Life	5*10 <sup>5</sup> ops.	10 <sup>5</sup> ops.		10 <sup>5</sup> ops.
Input Channels	4	8	4	No input
Isolation	Isolation with Common Source			
Isolation Voltage	3750Vrms			
Digital Level 0	+1V max			
Digital Level 1	+4 to +30 V			
Input Impedance	3K ohms			
Power Input	+10 to +30 VDC			
Power Consumption	1.3W (I-7060) 1.9W (I-7060D)	1.0W (I-7063) 1.5W (I-7063D)	1.3W (I-7065) 2.2W (I-7065D)	1.5W (I-7067) 2.2W (I-7067D)



Solid-State Relay Output Modules				
	I-7063A I-7063AD	I-7065A I-7065AD	I-7063B I-7063BD	I-7065B I-7065BD
Output Channels	3	5	3	5
SSR Type	AC-SSR, Normal Open		DC-SSR, Normal Open	
Load Voltage Range	24 to 265 Vrms		3 to 30 VDC	
Leakage Current	1.5 mArms		0.1 mA	
Max Load Current	1.0 Arms		1.0 A	
Min. Operate Time	1mS			
Min. Release Time	1/2 cycle + 1mS		1mS	
Dielectric Strength	2500 Vrms			
Input Channels	8	4	8	4
Isolation	Isolation with Common Source			
Isolation Voltage	3750Vrms			
Digital Level 0	+1V max			
Digital Level 1	+4 to +30 V			
Input Impedance	3K ohms			
Power Input	+10 to +30 VDC			
Power Consumption	0.7W (I-7063A) 1.5W (I-7063AD)	0.8W (I-7065A) 1.6W (I-7065AD)	0.6W (I-7063B) 1.4W (I-7063BD)	0.7W (I-7065B) 1.5W (I-7065BD)



Note: Model numbers “I-nnnn” and model numbers “CB-nnnn” are identical.

# 1.4 Block Diagrams

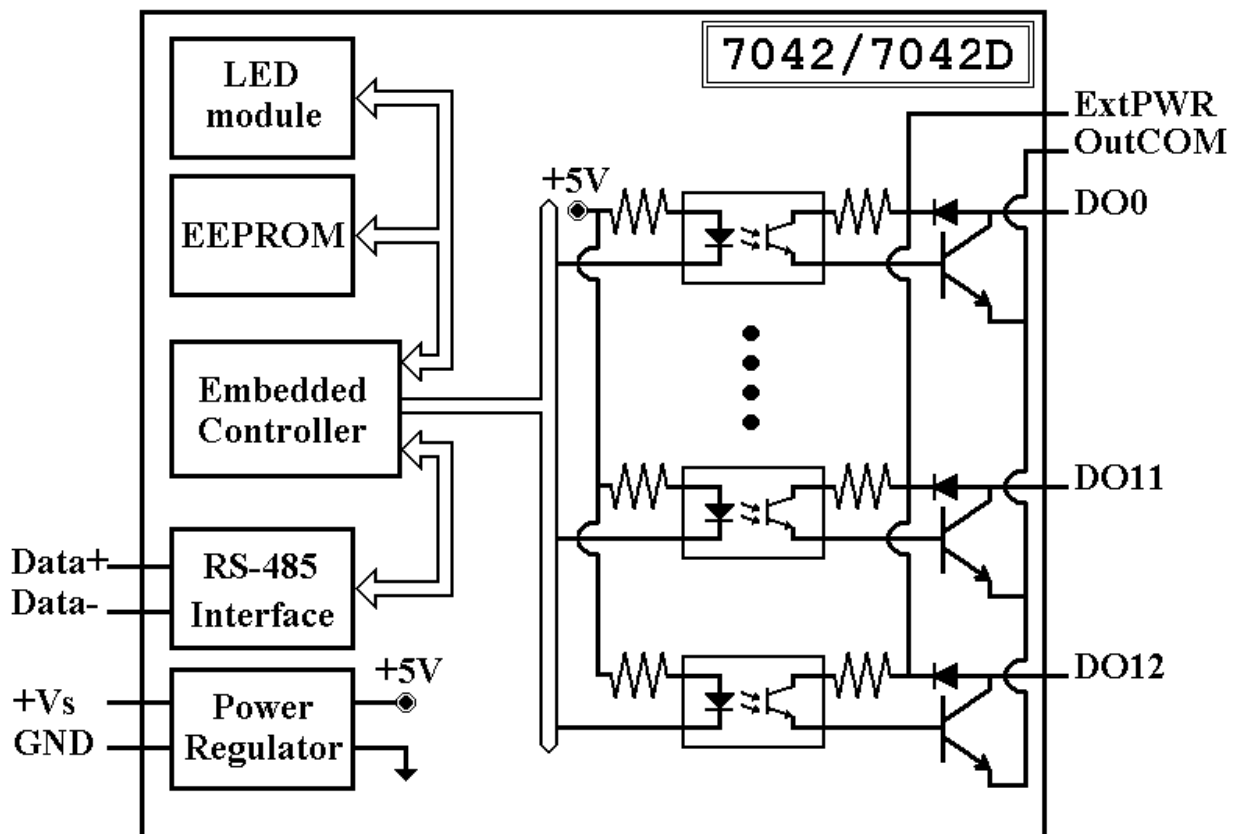
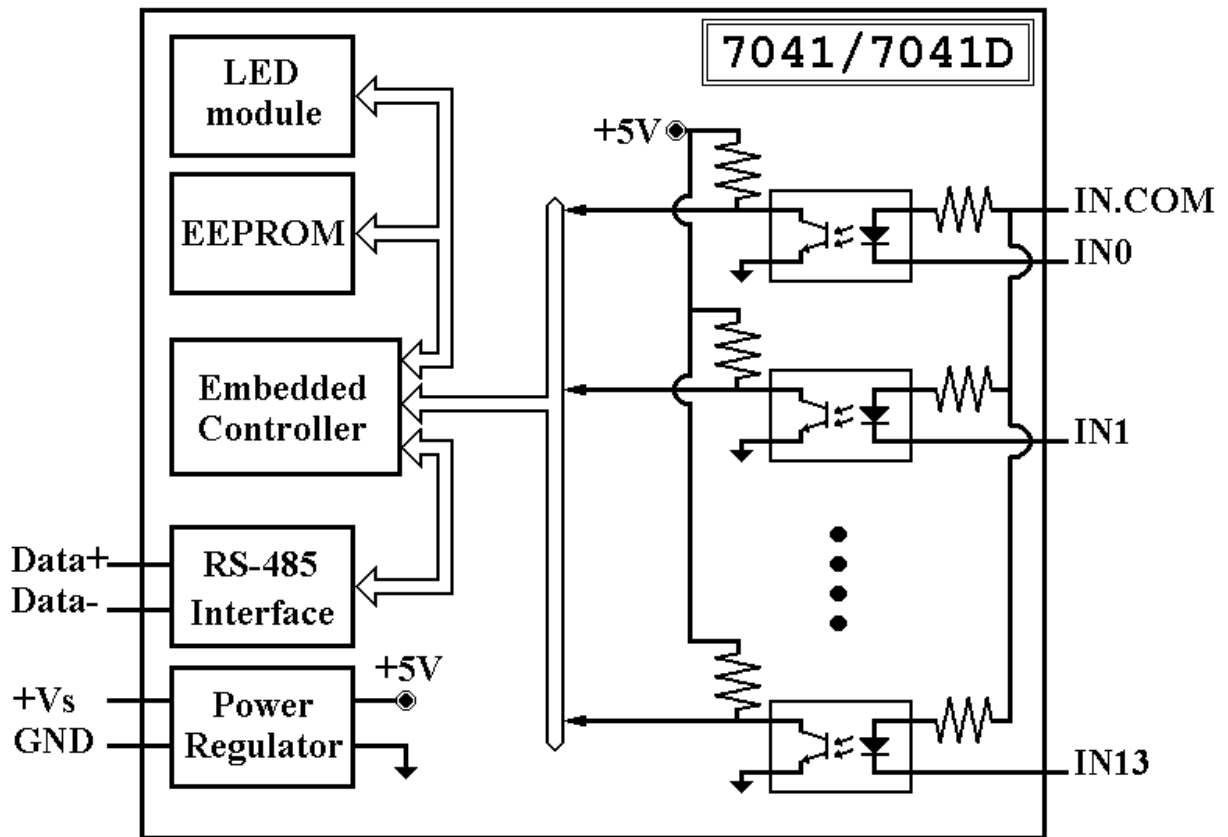


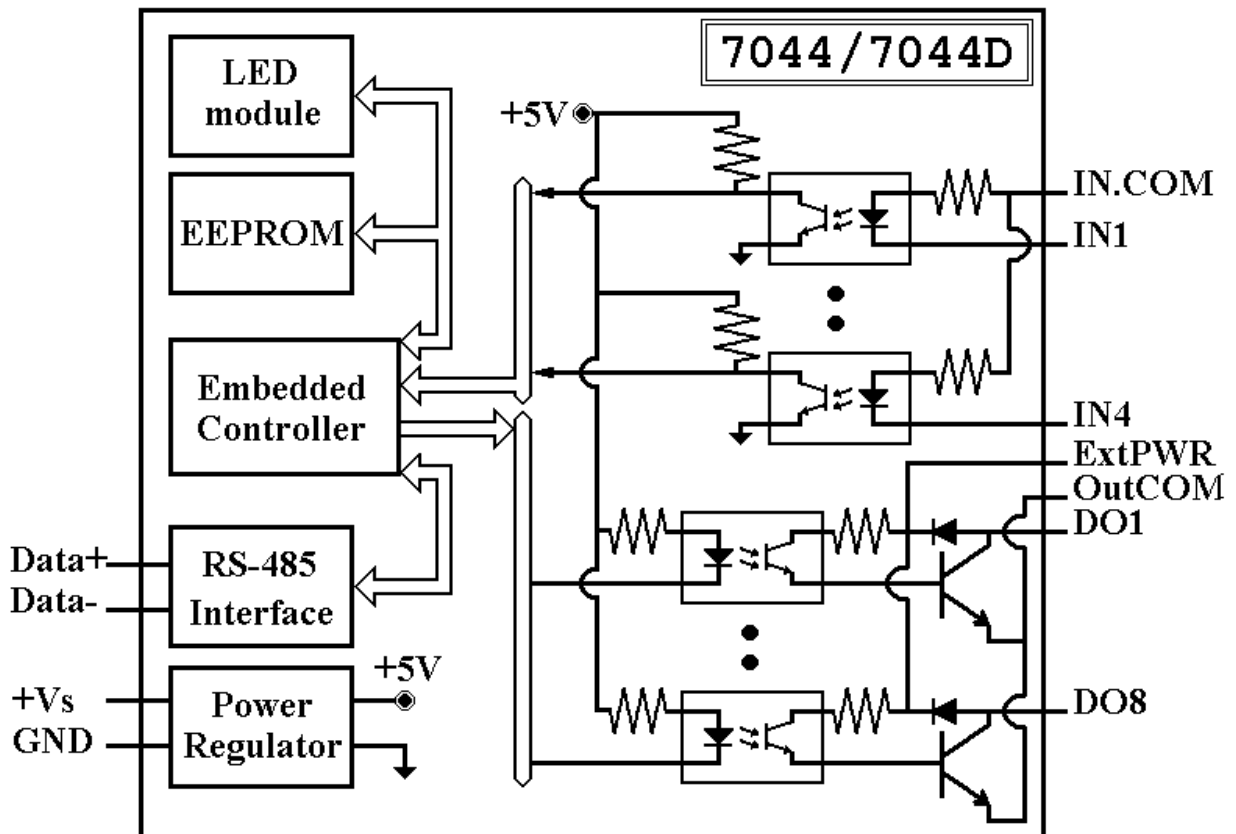
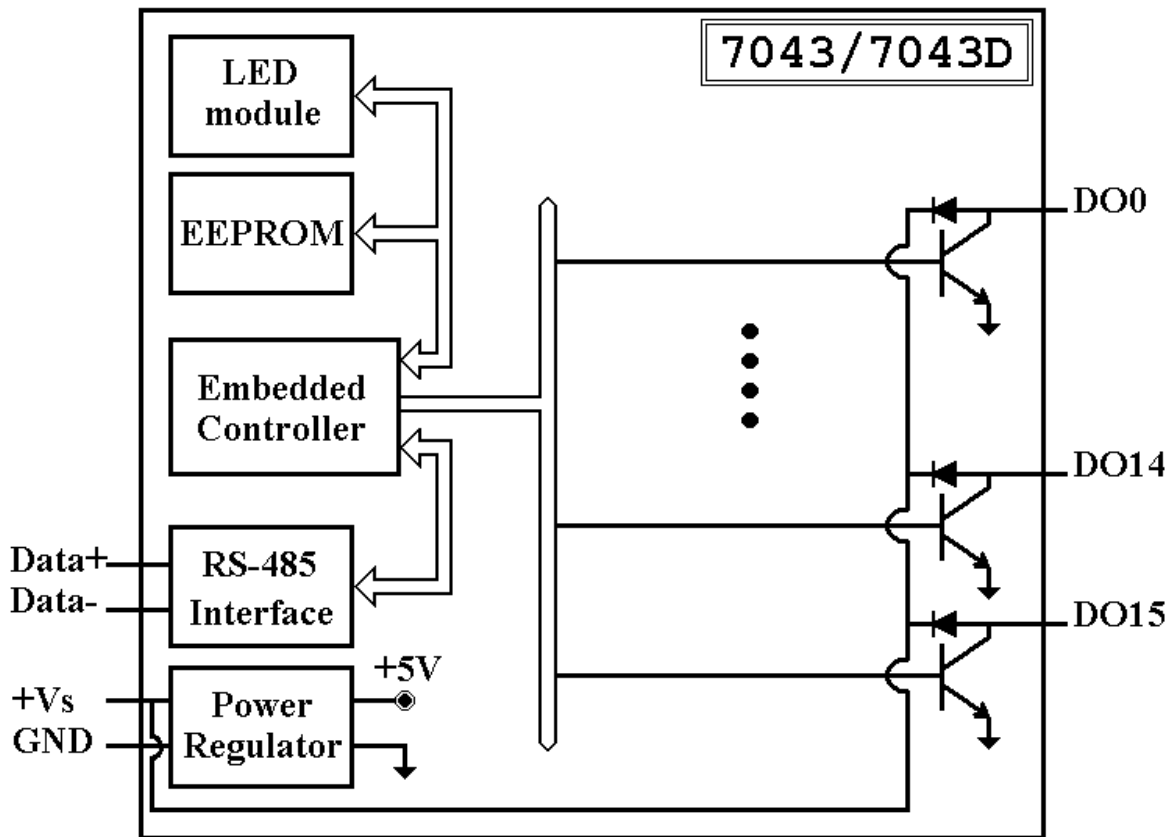


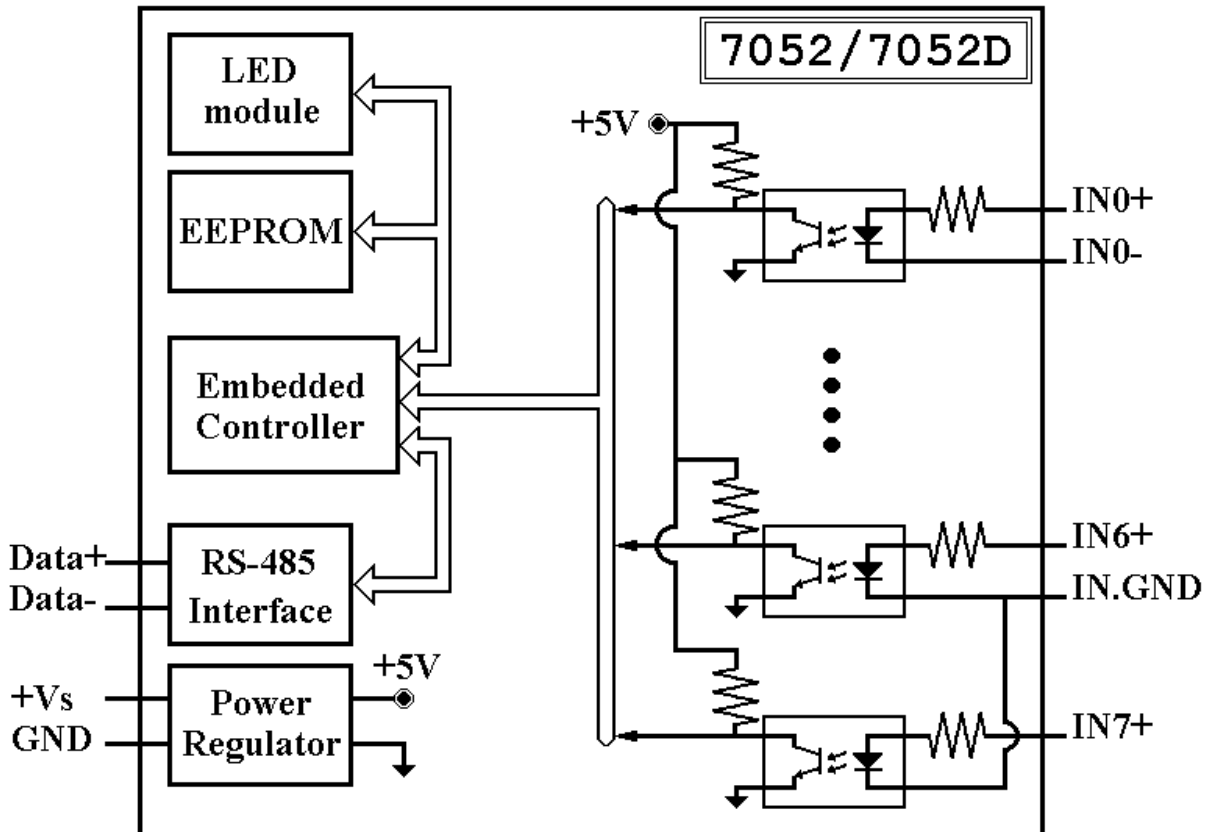
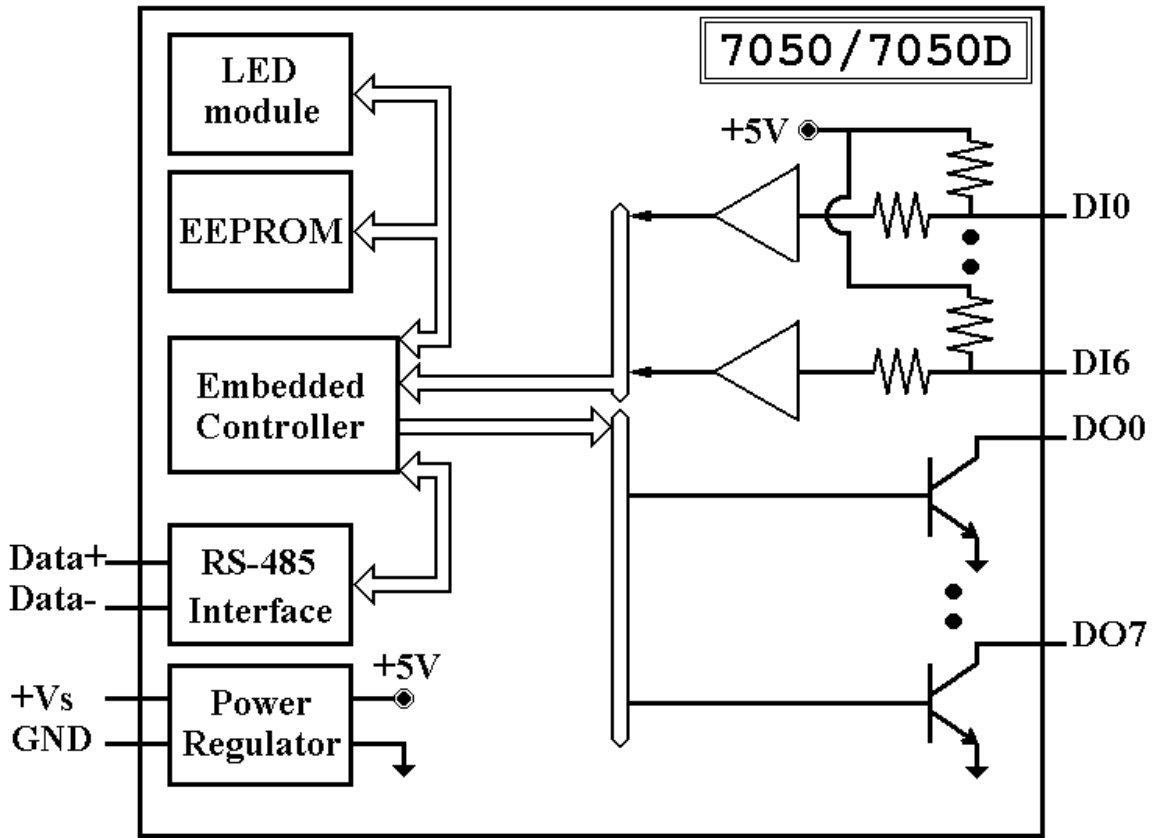


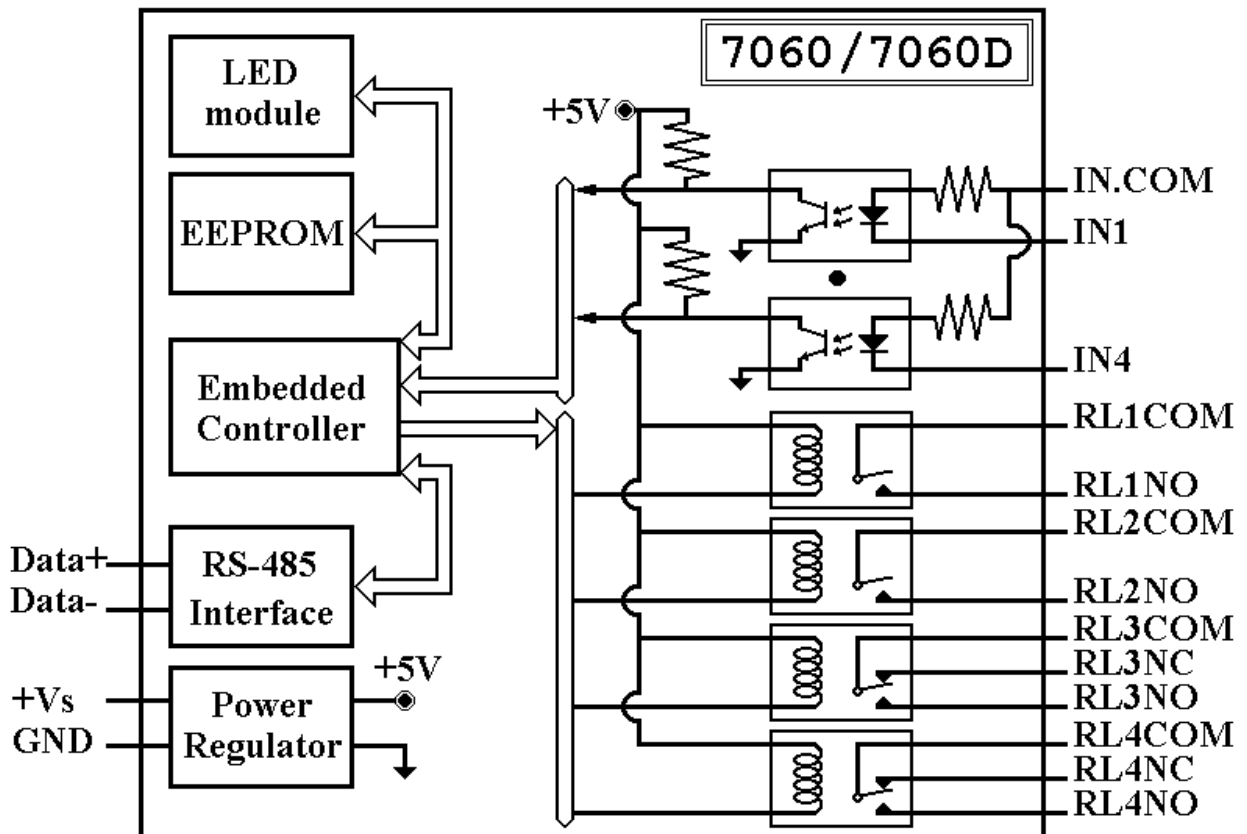
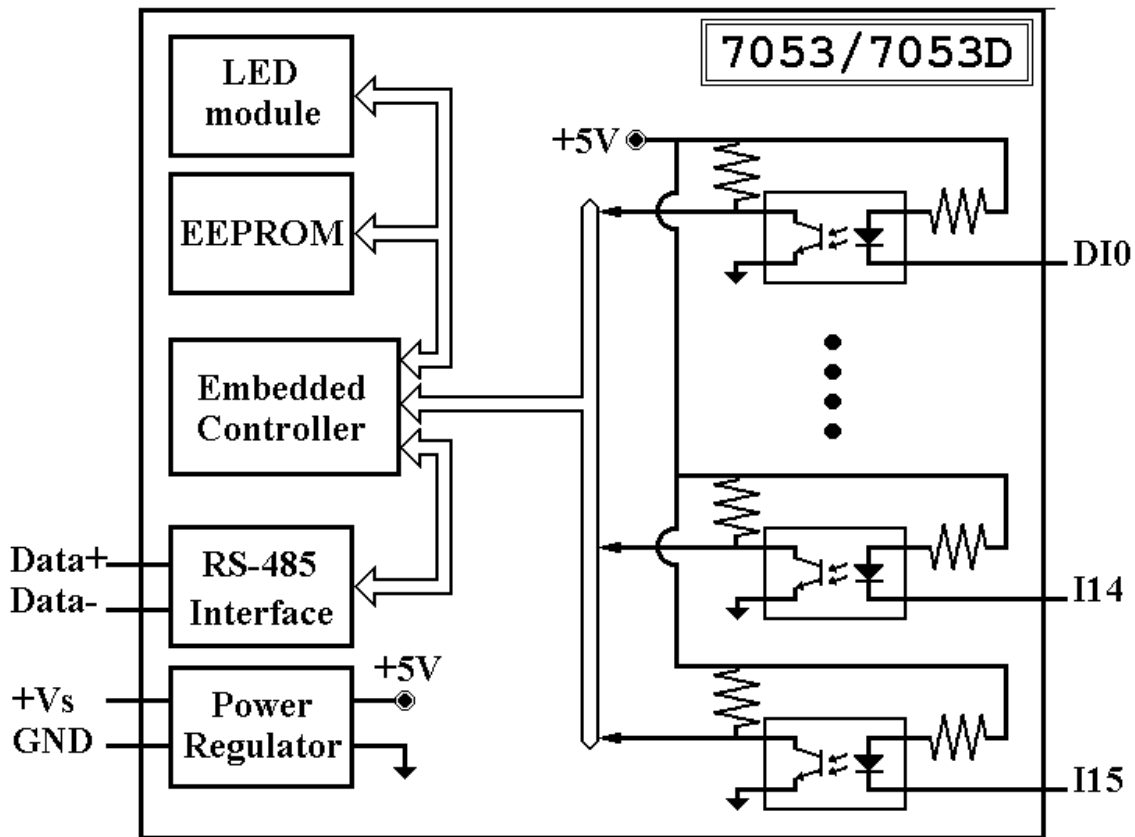




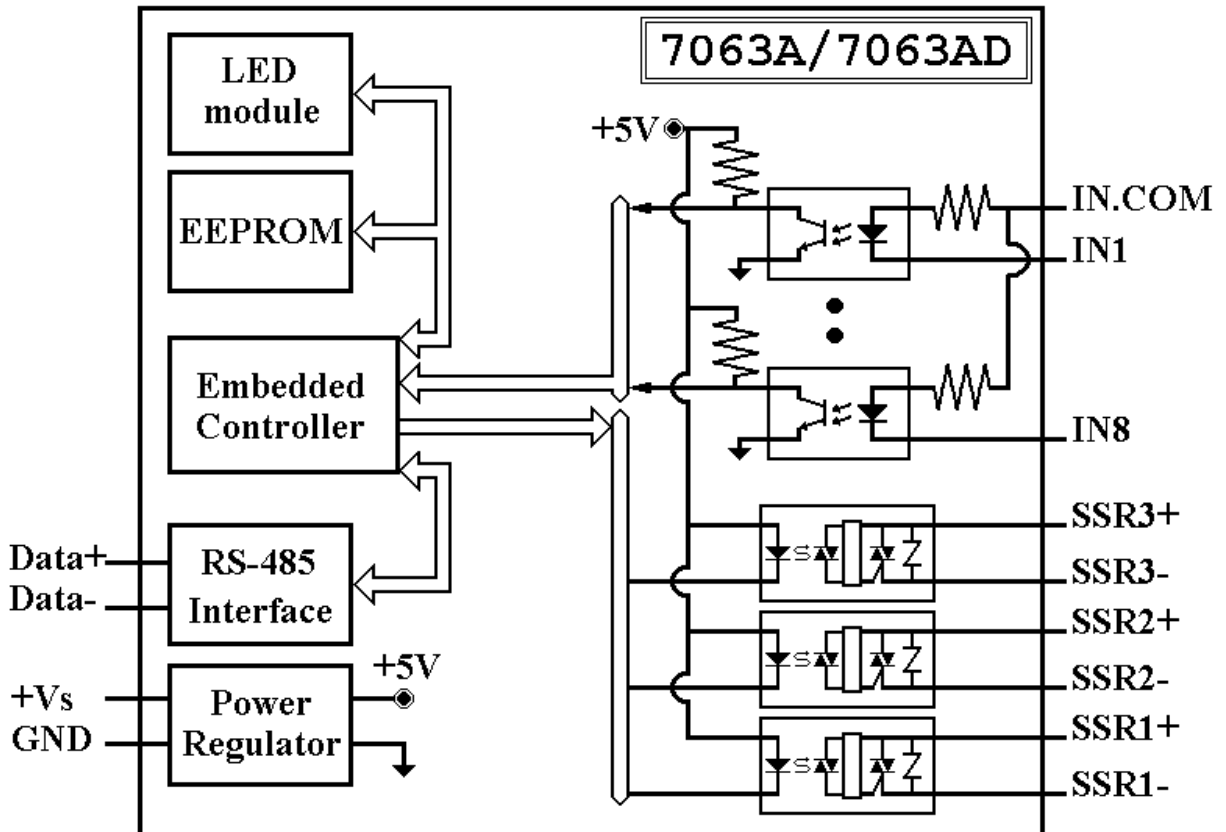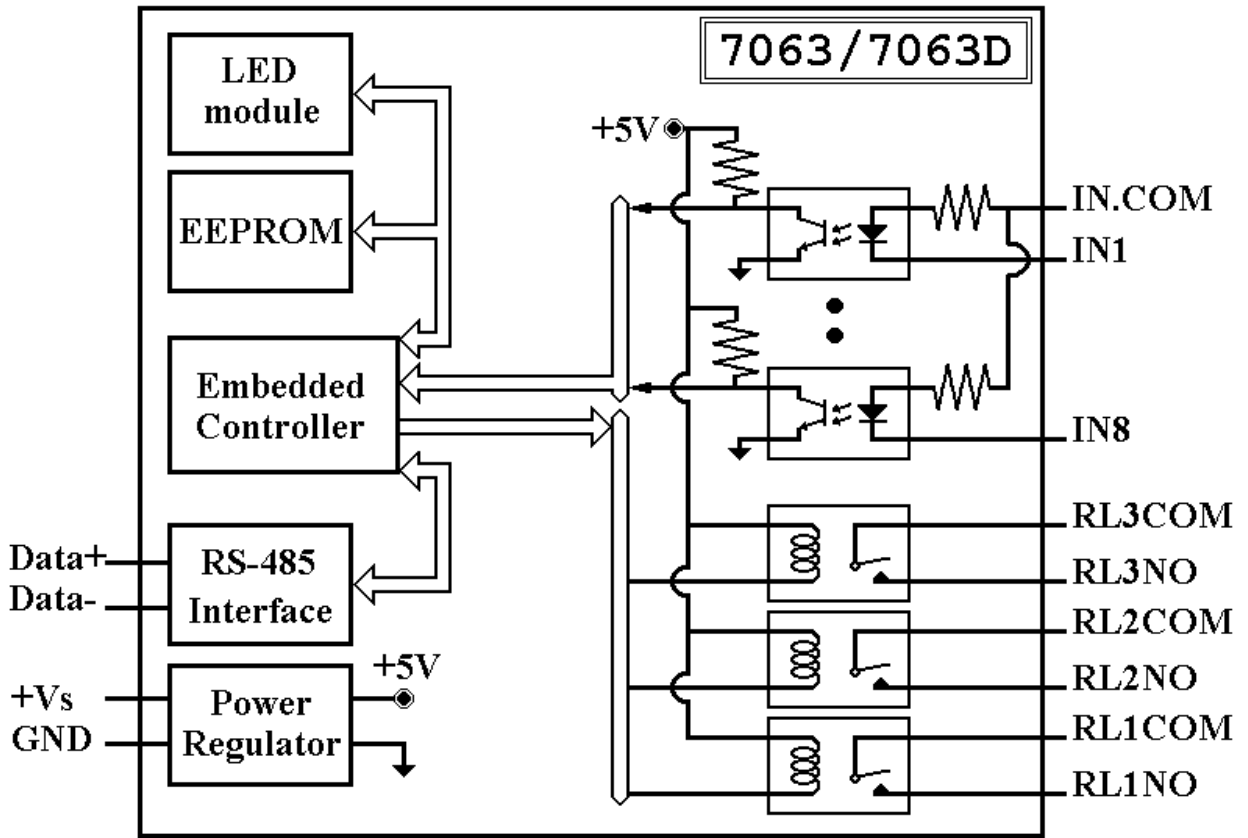

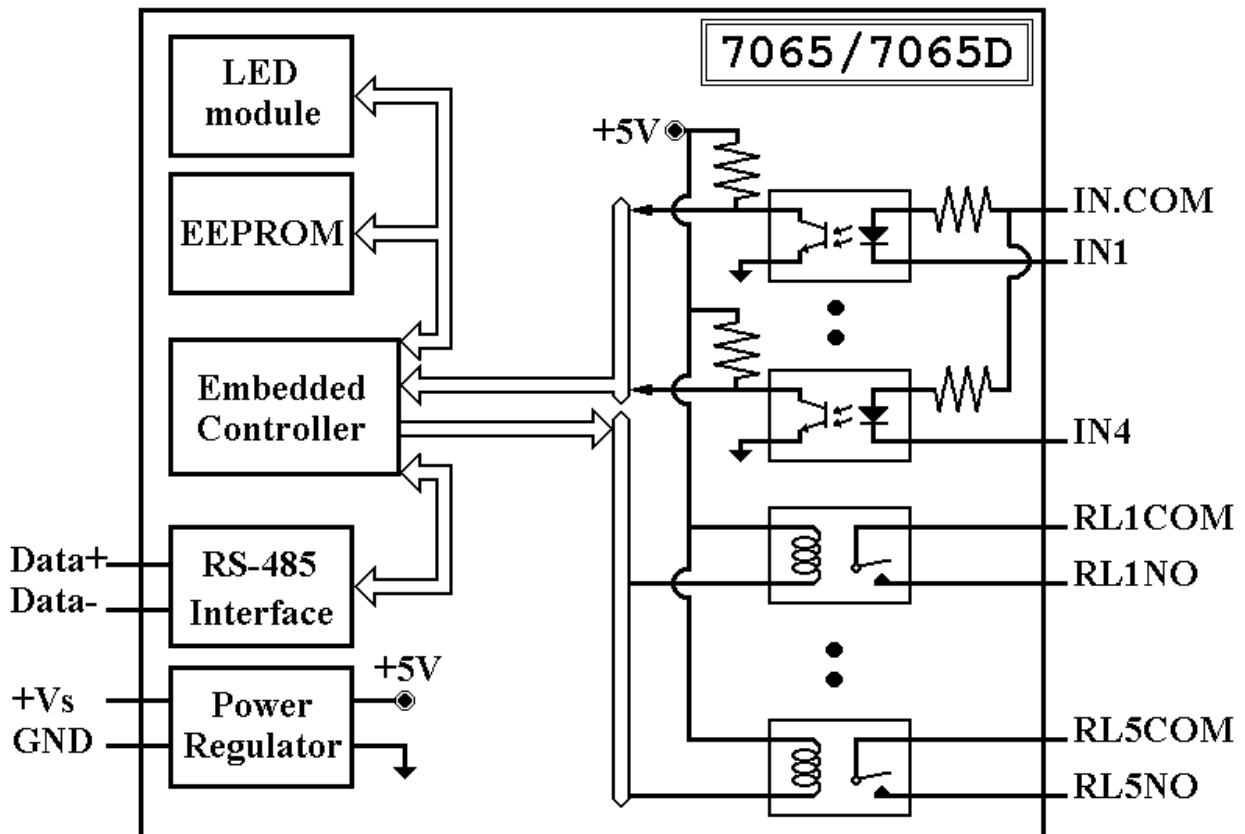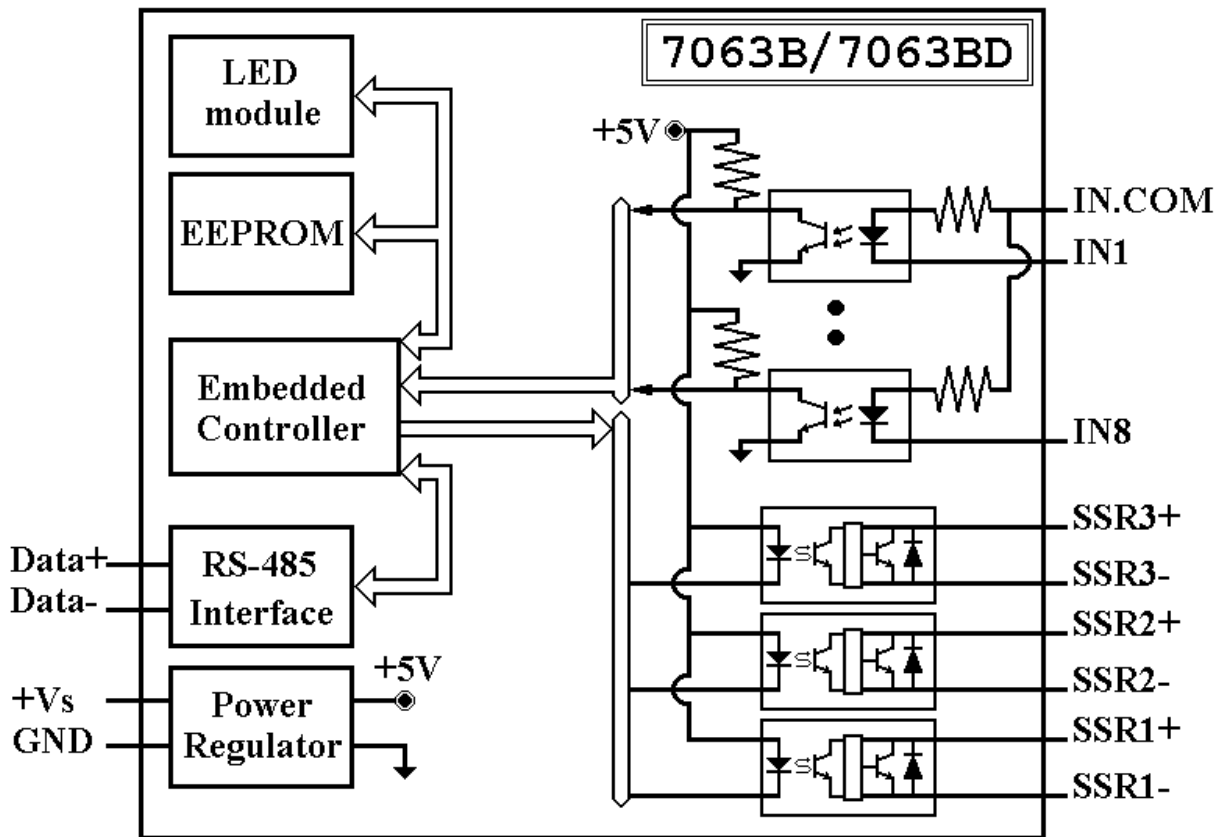

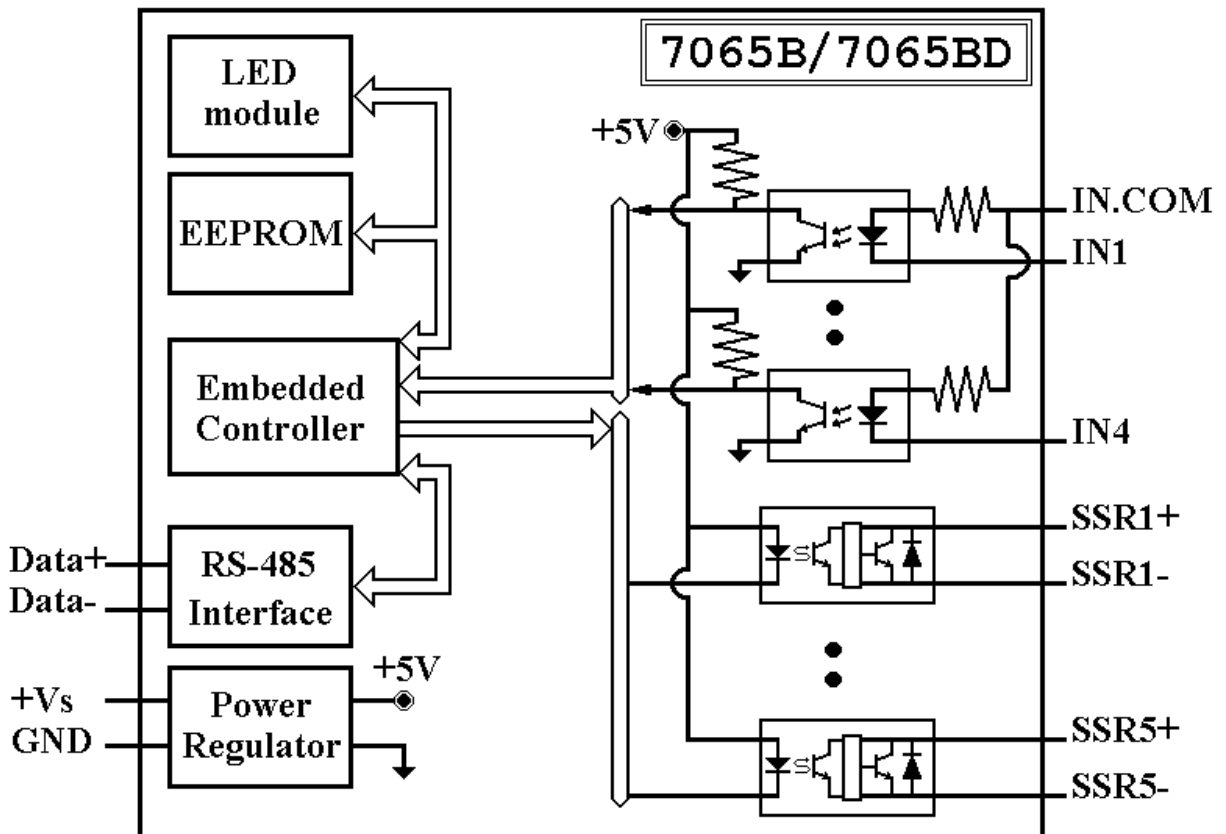
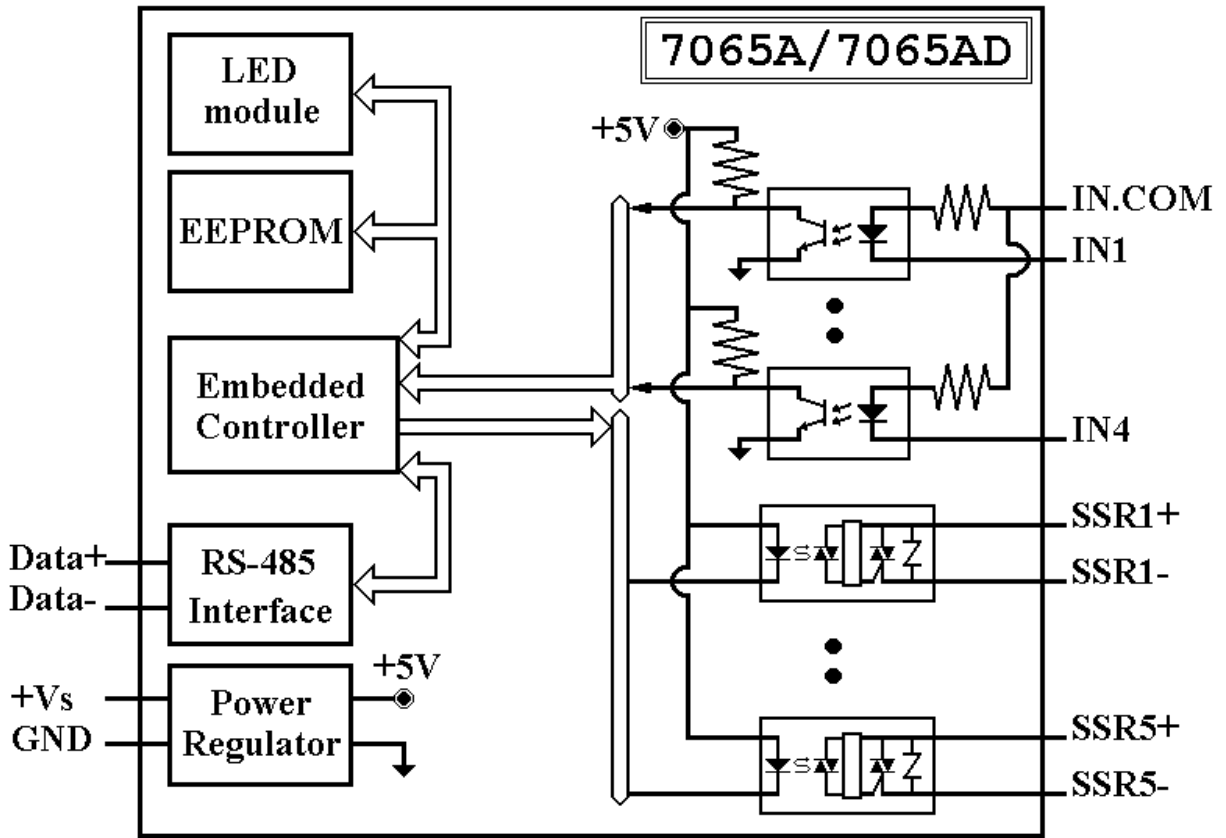


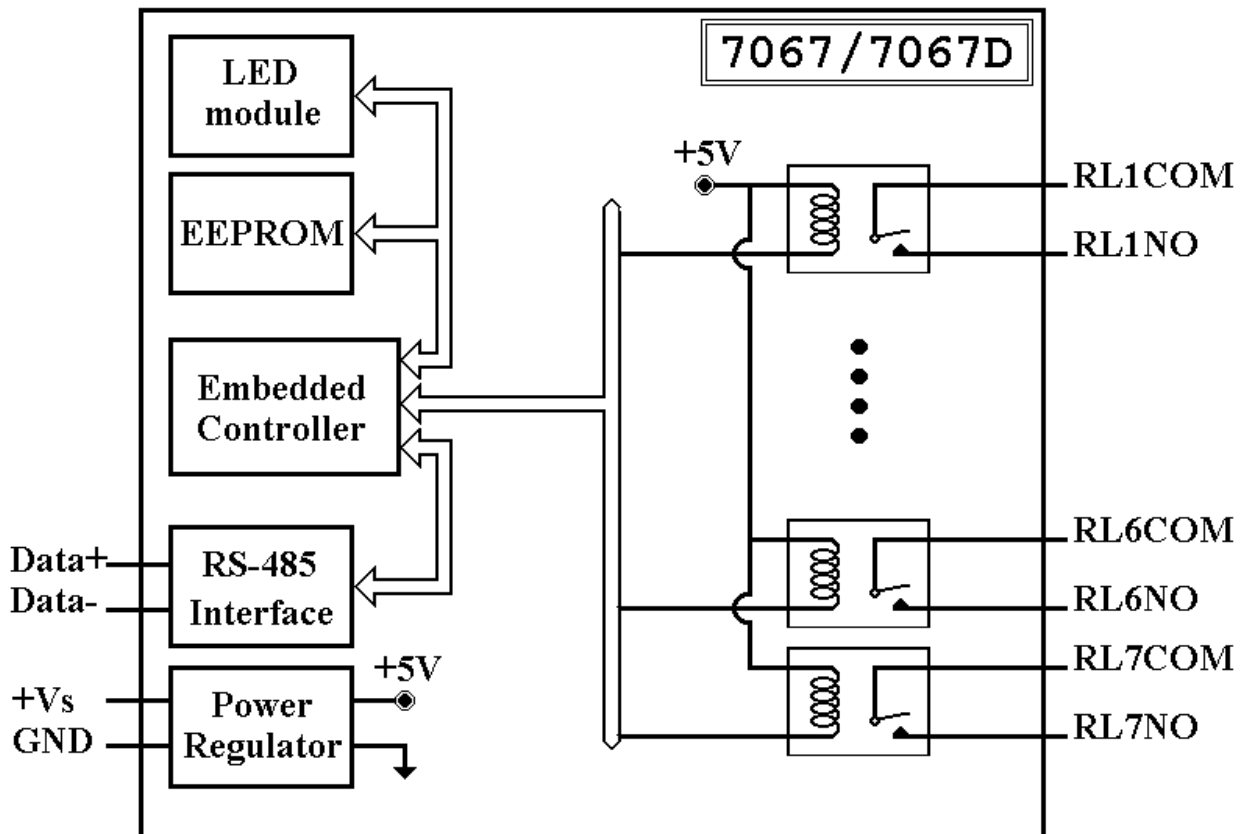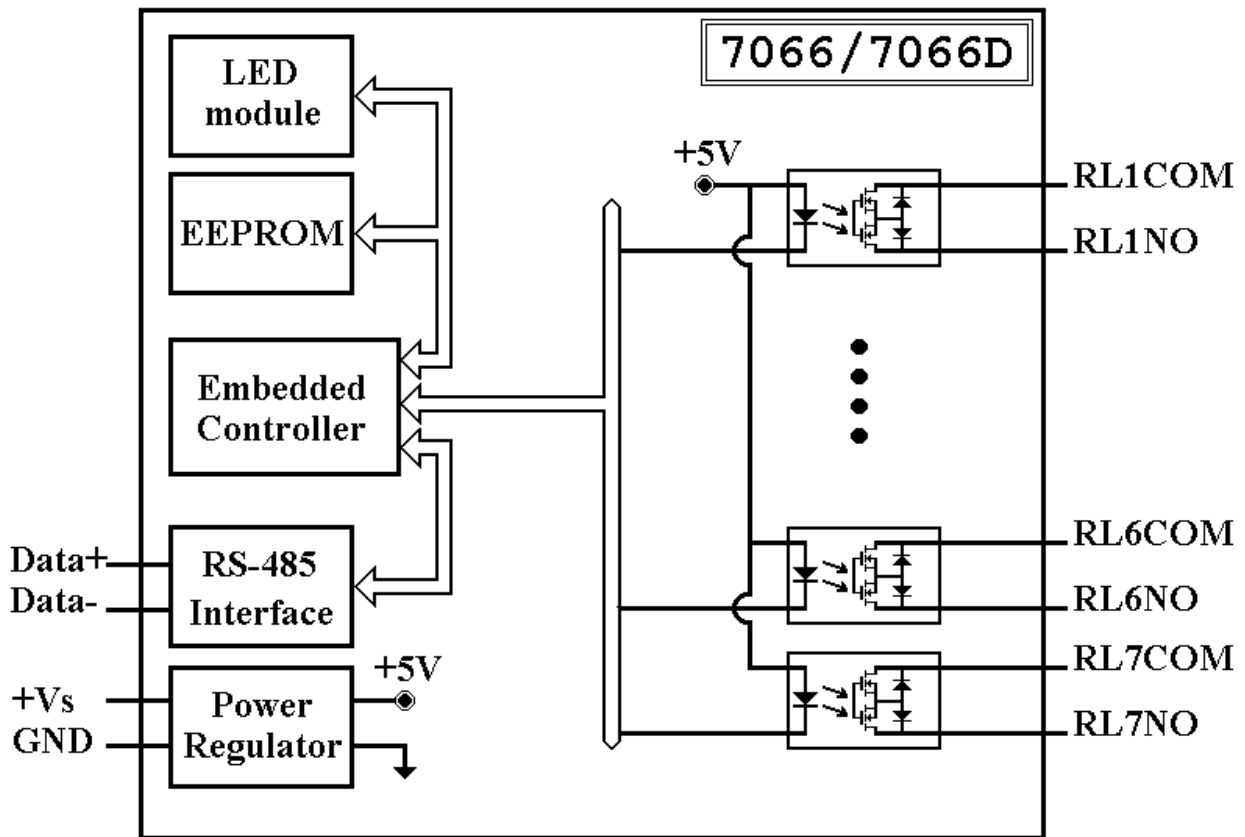

# 1.5 Connections



## Dry Contact signal input

CB-7052/52D

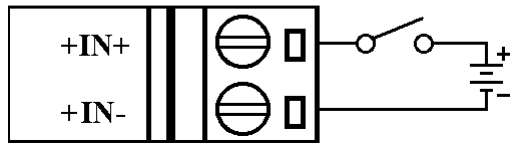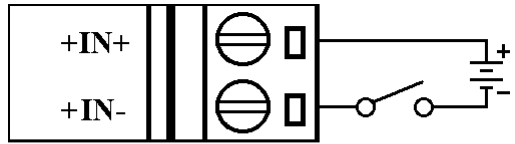


## TTL/CMOS signal input


CB-7052/52D

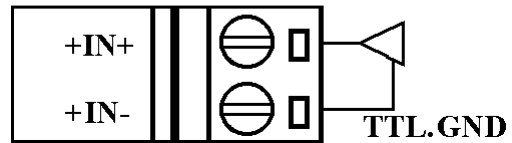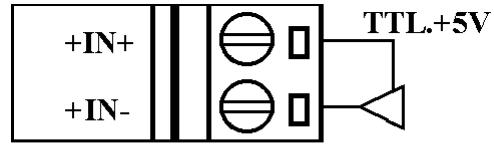


CB-7050/50D/53/53D

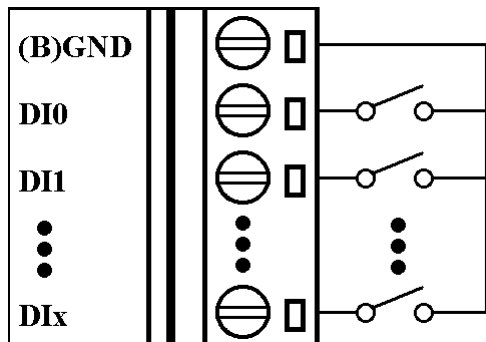


CB-7050/50D/53/53D

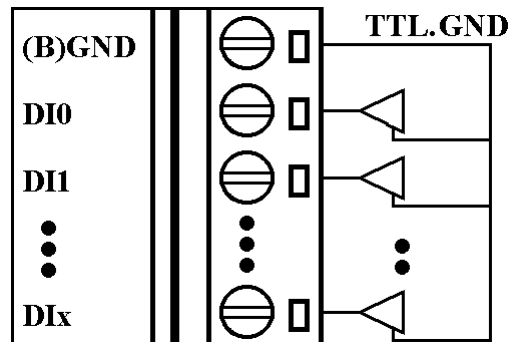

CB-7041/41D/44/44D/60/60D/  
63/63D/63A/63AD/63B/63BD/  
65/65D/65A/65AD/65B/65BD



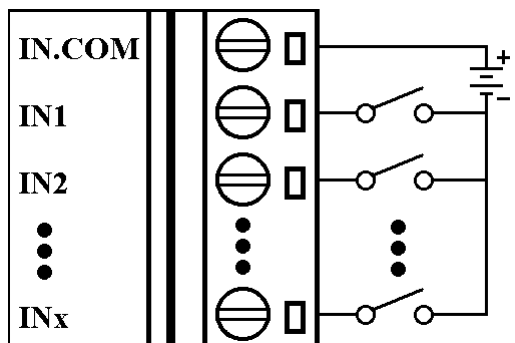


CB-7041/41D/44/44D/60/60D/  
63/63D/63A/63AD/63B/63BD/  
65/65D/65A/65AD/65B/65BD


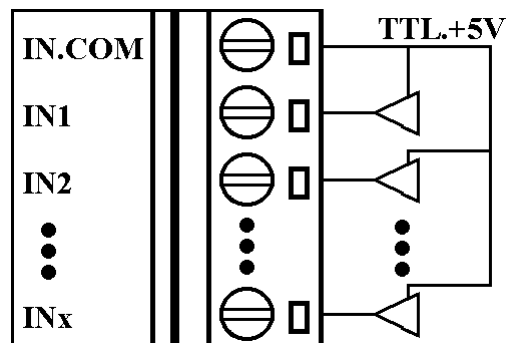


## Open Collector signal input



CB-7052/52D

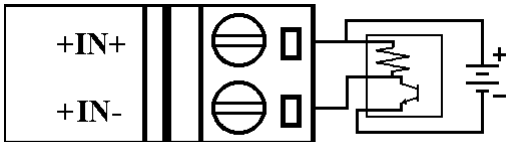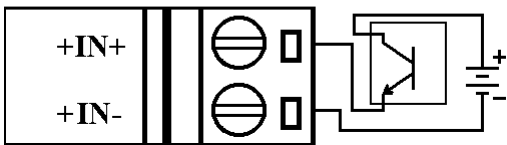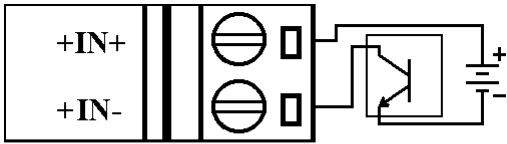

CB-7050/50D/53/53D

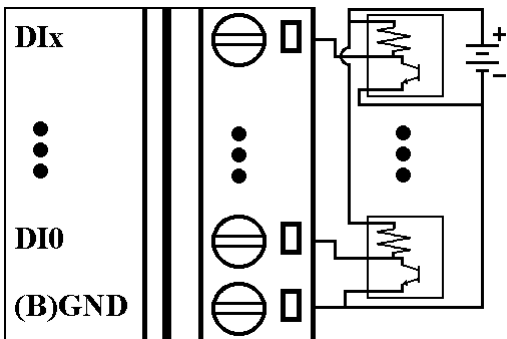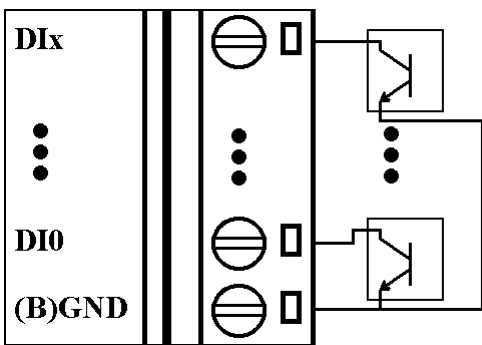



CB-7041/41D/44/44D/60/60D/  
63/63D/63A/63AD/63B/63BD/  
65/65D/65A/65AD/65B/65BD

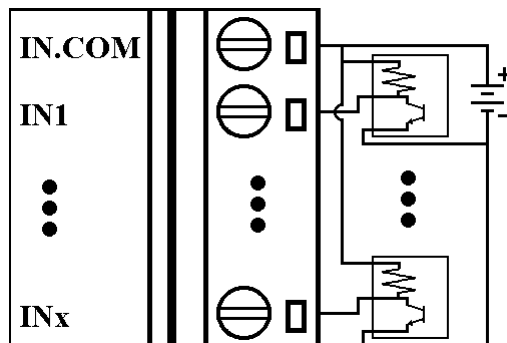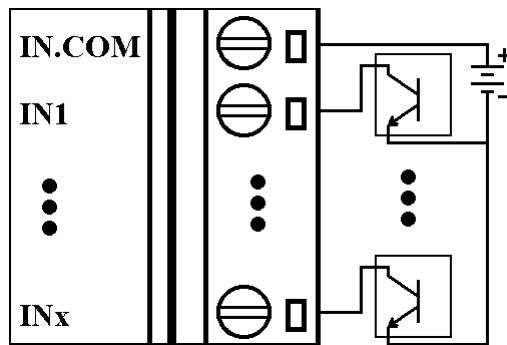


## Open Collector output

### CB-7050/50D


Note: When connecting inductive loads (for example, a relay), install a diode to prevent counter EMF kickback.

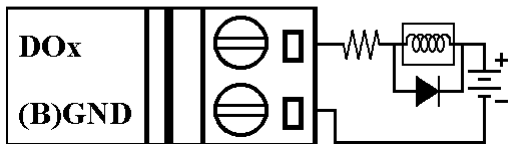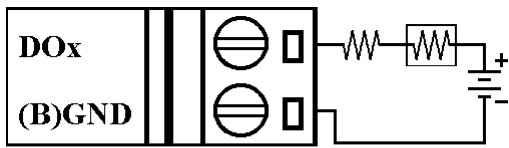

### CB-7043/43D

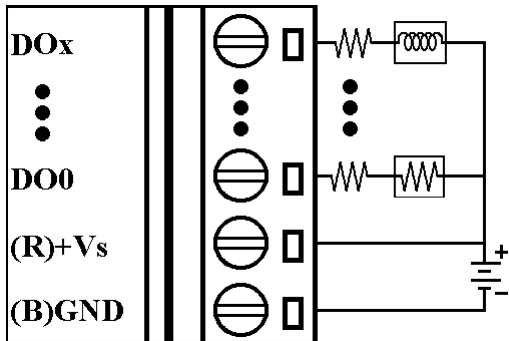

### CB-7042/42D/44/44D

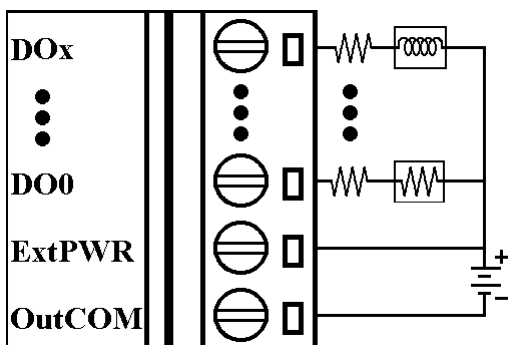

# 1.6 Quick Start

Refer to “CBCOM Series Network Setup and Quick Start Manual” and “Getting Started” for details.

# 1.7 Default Setting

Default setting for CB-7000 DIO modules:

- Address: 01
- Baud rate: 9600 bps
- Type: Type 40 for DIO mode
- Checksum Disable
- CB-7043/43D jumper setting at INIT\*
- CB-7053/53D jumper setting at INIT\*

# 1.8 Jumper Setting

CB-7043/43D: Jumper J3 for select the pin INIT\*/DO15

Select DO15      DO15  INIT\*

Select INIT\*      DO15  INIT\* (default)

CB-7053/53D: Jumper J1 for select the pin INIT\*/DI15

Select DI15      DI15  INIT\*

Select INIT\*      DI15  INIT\* (default)

# 1.9 Configuration Tables

Configuration Table of CB-7000 DIO modules

## Baud rate Setting (CC)

Code	03	04	05	06	07	08	09	0A
Baudrate	1200	2400	4800	9600	19200	38400	57600	115200



## Type Setting (TT)

Type = **40** for DIO mode

## Data Format Setting (FF)

7	6	5	4	3	2	1	0
*1	*2	0	0	0	*3		

\*1: Counter Update Direction: 0=Falling Edge, 1=Rising Edge

\*2: Checksum Bit: 0=Disable, 1=Enable

\*3: 7050 = 0 (Bit[2.1.0] = 000), 7060 = 1 (Bit[2.1.0] = 001)

7052 = 2 (Bit[2.1.0] = 010), 7053 = 3 (Bit[2.1.0] = 011)

## Read Digital Input/Output Data Format

Data of \$AA6,\$AA4,\$AALS: (First Data)(Second Data)00

Data of @AA: (First Data)(Second Data)

	First Data		Second Data	
I-7041/41D	DI(8-13)	00 to 3F	DI(0-7)	00 to FF
I-7042/42D	DO(8-12)	00 to 1F	DO(0-7)	00 to FF
I-7043/43D	DO(8-15)	00 to FF	DO(0-7)	00 to FF
I-7044/44D	DO(1-8)	00 to FF	DI(1-4)	00 to 0F
I-7050/50D	DO(0-7)	00 to FF	DI(0-6)	00 to 7F
I-7052/52D	DI(0-7)	00 to FF	00	00
I-7053/53D	DI(8-15)	00 to FF	DI(0-7)	00 to FF
I-7060/60D	DO(1-4)	00 to 0F	DI(1-4)	00 to 0F
I-7063s *1	DO(1-3)	00 to 07	DI(1-8)	00 to FF
I-7065s *2	DO(1-5)	00 to 1F	DI(1-4)	00 to 0F
I-7066/66D	DO(1-7)	00 to 7F	00	00
I-7067/67D	DO(1-7)	00 to 7F	00	00
*1 I-7063s include : I-7063/63D/63A/63AD/63B/63BD				
*2 I-7065s include : I-7065/65D/65A/65AD/65B/65BD				

## 2. Commands

Command Format: **(Leading)(Address)(Command)[CHK](cr)**

Response Format: **(Leading)(Address)(Data)[CHK](cr)**

**[CHK]** 2-character checksum

**(cr)** end-of-Command character, character return(0x0D)

### Calculate Checksum:

1. Calculate ASCII sum of all characters of command (or response) string except the carriage return (cr).
2. Mask the sum of string with 0ffh.

### Example:

Command string: \$012(cr)

Sum of string = '\$'+ '0'+ '1'+ '2' = 24h+30h+31h+32h = B7h

The checksum is B7h, and [CHK] = "B7"

Command string with checksum: \$012B7(cr)

Response string: !01400600(cr)

Sum of string: '!'+ '0'+ '1'+ '4'+ '0'+ '0'+ '6'+ '0'+ '0'

= 21h+30h+31h+34h+30h+30h+36h+30h+30h = 1ACh

The checksum is ACh, and [CHK] = "AC"

Response string with checksum: !01400600AC(cr)

<b>General Command Sets</b>			
<b>Command</b>	<b>Response</b>	<b>Description</b>	<b>Section</b>
%AANN TTCCFF	!AA	Set Module Configuration	<i>Sec.2.1</i>
#**	No Response	Synchronized Sampling	<i>Sec.2.2</i>
#AABBDD	>	Digital Output	<i>Sec.2.3</i>
#AAN	!AA(Data)	Read Digital Input Counter	<i>Sec.2.4</i>
\$AA2	!AATTCFF	Read Configuration	<i>Sec.2.5</i>
\$AA4	!S(Data)	Read Synchronized Data	<i>Sec.2.6</i>
\$AA5	!AAS	Read Reset Status	<i>Sec.2.7</i>
\$AA6	!(Data)	Read Digital I/O Status	<i>Sec.2.8</i>
\$AAF	!AA(Data)	Read Firmware Version	<i>Sec.2.9</i>
\$AAM	!AA(Data)	Read Module Name	<i>Sec.2.10</i>
\$AAC	!AA	Clear Latched Digital Input	<i>Sec.2.11</i>
\$AACN	!AA	Clear Digital Input Count	<i>Sec.2.12</i>
\$AALS	!(Data)	Read Latched Digital Input	<i>Sec.2.13</i>
@AA	>(Data)	Read Digital Input	<i>Sec.2.14</i>
@AA(Data)	>	Set Digital Output	<i>Sec.2.15</i>
~AAO(Data)	!AA	Set Module Name	<i>Sec.2.16</i>

<b>Host Watchdog Command Sets</b>			
<b>Command</b>	<b>Response</b>	<b>Description</b>	<b>Section</b>
~**	No Response	Host OK	<i>Sec.2.17</i>
~AA0	!AASS	Read Module Status	<i>Sec.2.18</i>
~AA1	!AA	Reset Module Status	<i>Sec.2.19</i>
~AA2	!AAVV	Read Host Watchdog Timeout Value	<i>Sec.2.20</i>
~AA3EVV	!AA	Set Host Watchdog Timeout Value	<i>Sec.2.21</i>
~AA4V	!AA(Data)	Read PowerOn/Safe Value	<i>Sec.2.22</i>
~AA5V	!AA	Set PowerOn/Safe Value	<i>Sec.2.23</i>

## 2.1 %AANNTCCFF

**Description:** Set module Configuration

**Syntax:** %AANNTCCFF[CHK](cr)

% Delimiter character  
AA Address of setting module (00 to FF)  
NN New Address for setting module (00 to FF)  
TT Type 40 for DIO module  
CC New baud rate for setting module (Ref. *Sec. 1.9*). Short INIT\* to ground when changing baud rate. (Ref *Sec. 3.1*)  
FF New data format for setting module (Ref. *Sec. 1.9*). Short the INIT\* to ground to change checksum setting. (Ref. *Sec. 3.1*)

**Response:** Valid Command: !AA[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

**Example:**

Command: %0102400600 Receive: !02

Set module Address 01 to 02; return successful.

**Related Command:**

*Sec. 2.5 \$AA2*

**Related Topics:**

*Sec. 1.9 Configuration Tables, Sec. 3.1 INIT\* pin Operation*

## 2.2 #\*\*

**Description:** Synchronized Sampling

**Syntax:** #\*\*[CHK](cr)

# Delimiter character

\*\* Synchronized sampling Command

**Response:** No response

**Example:**

Command: #\*\* No response

Send synchronized sampling Command to all modules.

Command: \$014 Receive: !10F0000

Read synchronized data from Address 01, return S=1, first read and data.

Command: \$014 Receive: !00F0000

Read synchronized data from Address 02, return S=0, have read data.

**Related Command:**

*Sec. 2.6 \$AA4*

## 2.3 #AABBDD

**Description:** Digital Output

**Command:** #AABBDD[CHK](cr)

# Delimiter character

AA Address of reading module(00 to FF)

BBDD Output command and parameter

For multichannel outputs, set BB = 00, 0A, or 0B. It selects the output group. DD is the output value.

Parameter for Multi-Channel Output					
	Output Channels	DD for command #AABBDD			
		BB=00/0A		BB=0B	
I-7042/42D	13	00 to FF	DO(0-7)	00 to 1F	DO(8-12)
I-7043/43D	16	00 to FF	DO(0-7)	00 to FF	DO(8-15)
I-7044/44D	8	00 to FF	DO(1-8)	NA	NA
I-7050/50D	8	00 to FF	DO(0-7)	NA	NA
I-7060/60D	4	00 to 0F	RL(1-4)	NA	NA
I-7063s <sup>*1</sup>	3	00 to 07	RL(1-3)	NA	NA
I-7065s <sup>*2</sup>	5	00 to 1F	RL(1-5)	NA	NA
I-7066/66D	7	00 to 7F	RL(1-7)	NA	NA
I-7067/67D	7	00 to 7F	RL(1-7)	NA	NA
*1 I-7063s include : I-7063/63D/63A/63AD/63B/63BD					
*2 I-7065s include : I-7065/65D/65A/65AD/65B/65BD					

To output a single-channel, set BB = 1c, Ac, or Bc where c is the selected channel. Set DD to 00 to clear output and 01 to set the output.



Assume module is CB-7067, set Address 02 channel 0 on, return is successful.

Command: #021701                      Receive: ?

Set Address 02 channel 7 on, return the channel is invalid for CB-7067; it only has seven outputs (0 to 6).

Command: #0300FF                      Receive: !

Set Address 03 output value FF, return ignore. The module's host watchdog timeout status is set, and the output is set to Safe Value.

**Related Command:**

*Sec. 2.15 @AA(Data), Sec. 2.18 ~AA0, Sec. 2.19 ~AA1*

**Related Topics:**

*Sec. 1.9 Configuration Tables, Sec. 3.2 Module Status, Sec. 3.3 Dual Watchdog Operation*

**Note:**

The Command is not for CB-7041/41D/52/52D/53/53D.









## 2.7 \$AA5

**Description:** Read Reset Status

**Command:** \$AA5[CHK](cr)

\$ Delimiter character

AA Address of reading module (00 to FF)

5 Command for read reset status

**Response:** Valid Command: !AAS[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

S Reset status, 1 = the module has been reset,  
0 = the module has not been reset.

**Example:**

Command: \$015                      Receive: !011

Read Address 01 reset status, return first read.

Command: \$015                      Receive: !010

Read Address 01 reset status, return no reset occurred.

**Related Topics:**

*Sec3.4, Reset Status*

## 2.8 \$AA6

**Description:** Read Digital I/O Status

**Command:** \$AA6[CHK](cr)

\$ Delimiter character

AA Address of reading module (00 to FF)

6 Command for read digital input/output status

**Response:** Valid Command: !(Data)[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

(Data) Digital input/output value (Ref. *Sec. 1.9*)

**Example:**

Command: \$016

Receive: !0F0000

Assume module is CB-7060. Read Address 01 DIO status, return 0F00; digital input IN1 to IN4 are open, digital output RL1 to RL4 are off.

**Related Command:**

*Sec. 2.14, @AA*

**Related Topics:**

*Sec. 1.9, Configuration Tables*





## 2.11 \$AAC

**Description:** Clear Latched Digital Input

**Command:** \$AAC[CHK](cr)

\$ Delimiter character

AA Address of setting module (00 to FF)

C Command for clear latched digital input

**Response:** Valid Command: !AA[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

**Example:**

Command: \$01L0                      Receive: !01FFFF00

Read Address 01 latch-low data, return FFFF.

Command: \$01C                      Receive: !01

Clear Address 01 latched data, return successful.

Command: \$01L0                      Receive: !01000000

Read Address 01 latch-low data, return 0000.

**Related Command:**

*Sec. 2.13, \$AALS*

**Note:**

The Command is not for CB-7042/42D/43/43D/66/66D/67/67D.



## 2.12 \$AACN

**Description:** Clear Digital Input Counter

**Command:** \$AACN[CHK](cr)

\$ Delimiter character

AA Address of setting module (00 to FF)

C Command for clear digital input counter

N Digital counter channel N to clear

**Response:** Valid Command: !AA[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

**Example:**

Command: #010                      Receive: !0100123

Read Address 01 input channel 0 counter value, return 123.

Command: \$01C0                      Receive: !01

Clear Address 01 input channel 0 counter value, return successful.

Command: #010                      Receive: !0100000

Read Address 01 input channel 0 counter value, return 0.

**Related Command:**

*Sec. 2.4, #AAN*

**Note:**

The Command is not for CB-7042/42D/43/43D/66/66D/67/67D.

## 2.13 \$AALS

**Description:** Read Latched Digital Input

**Command:** \$AALS[CHK](cr)

\$ Delimiter character

AA Address of reading module (00 to FF)

L Command for reading latched digital input

S 1 = select latched high status, 0 = select latched low

**Response:** Valid Command: **!(Data)[CHK](cr)**

Invalid Command: **?AA[CHK](cr)**

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

(Data) read status (Ref. *Sec. 1.9*) 1= the input channel is latched,  
0=the input channel is not latched.

**Example:**

Command: \$01L1                      Receive: !012300

Read Address 01 latch-high data, return 0123.

Command: \$01C                      Receive: !01

Clear Address 01 latched data, return successful.

Command: \$01L1                      Receive: !000000

Read Address 01 latch-high data, return 0.

**Related Command:**

*Sec. 2.11*, \$AAC

**Note:**

The Command is not for CB-7042/42D/43/43D/66/66D/67/67D.



## 2.15 @AA(Data)

**Description:** Set Digital Output

**Command:** @AA(Data)[CHK](cr)

@ Delimiter character

AA Address of setting module (00 to FF)

(Data) output value, the data format is following:

(Data) is one character for output channel less than 4

For CB-7060/60D, from 0 to F

For CB-7063/63D/63A/63AD/63B/63BD, from 0 to 7

(Data) is two characters for output channel less than 8

For CB-7044/44D/50/50D, from 00 to FF

For CB-7065/65D/65A/65AD/65B/65BD, from 00 to 1F

For CB-7066/66D/67/67D, from 00 to 7F

(Data) is four characters for output channel less than 16

For CB-7042/42D, from 0000 to 1FFF

For CB-7043/43D, from 0000 to FFFF

**Response:** Valid Command: >[CHK](cr)

Invalid Command: ?[CHK](cr)

Ignore Command: ![CHK](cr)

Syntax or communication error may get no response.

> Delimiter for valid Command.

? Delimiter for invalid Command.

! Delimiter for ignore Command. The module is in Host Watchdog Timeout Mode, and the output is set to Safe Value.

**Example:**

Command: @017

Receive: >

Output Address 02 value 7, return successful.(The example is suitable for CB-7060/60D/63/63D/63A/63AD/63B/63BD)

Command: @0200                      Receive: >

Output Address 01 value 00, return successful.(The example is suitable for CB-7044/44D/50/50D/65/65D/65A/65AD/65B/65BD/66/66D/67/67D)

Command: @030012                      Receive: !

Output Address 03 value 0012, return the module is in host watchdog timeout mode, the output Command is ignored. (The example is suitable for CB-7042/42D/43/43D)

**Related Command:**

*Sec. 2.3, #AABBDD; Sec. 2.18, ~AA0; Sec. 2.19, ~AA1*

**Related Topics:**

*Sec. 1.9, Configuration Tables; Set.3.2, Module Status; Sec. 3.3 Dual Watchdog Operation; Sec. 3.5, Digital Output*

**Note:**

The Command is not for CB-7041/41D/52/52D/53/53D.

## 2.16 ~AAO(Data)

**Description:** Set Module Name

**Command:** ~AAO(Data)[CHK](cr)

~ Delimiter character

AA Address of setting module (00 to FF)

O Command for set module name

(Data) New name for module, max 6 characters

**Response:** Valid Command: !AA[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

### **Example:**

Command: ~01O7050                      Receive: !01

Set Address 01 module name 7050, return successful.

Command: \$01M                          Receive: !017050

Read Address 01 module name, return name 7050.

### **Related Command:**

*Sec. 2.10, \$AAM*



## 2.18 ~AA0

**Description:** Read Module Status

**Command:** ~AA0[CHK](cr)

~ Delimiter character

AA Address of reading module (00 to FF)

0 Command for read module status

**Response:** Valid Command: !AASS[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

SS Module status, 00=host watchdog timeout status is clear, 04=host watchdog timeout status is set. The status will store into EEPROM and only may reset by the Command ~AA1.

### **Example:**

Refer to *Sec. 2.21*, ~AA3EVV example.

### **Related Command:**

*Sec. 2.17*, ~\*\*;  
*Sec. 2.19*, ~AA1;  
*Sec. 2.20*, ~AA2;  
*Sec. 2.21*, ~AA3EVV;  
*Sec. 2.22*, ~AA4V;  
*Sec. 2.23*, ~AA5V

### **Related Topic:**

*Sec. 3.2*, Module Status;  
*Sec. 3.3*, Dual Watchdog Operation



## 2.19 ~AA1

**Description:** Reset Module Status

**Command:** ~AA1[CHK](cr)

~ Delimiter character

AA Address of setting module (00 to FF)

1 Command for reset module status

**Response:** Valid Command: !AA[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module (00 to FF)

### **Example:**

Refer to *Sec. 2.21*, ~AA3EVV example.

### **Related Command:**

*Sec. 2.17*, ~\*\*;  
*Sec. 2.18*, ~AA0;  
*Sec. 2.20*, ~AA2;  
*Sec. 2.21*, ~AA3EVV;  
*Sec. 2.22*, ~AA4V;  
*Sec. 2.23*, ~AA5V

### **Related Topic:**

*Sec. 3.2*, Module Status;  
*Sec. 3.3*, Dual Watchdog Operation

## 2.20 ~AA2

**Description:** Read Host Watchdog Timeout Value

**Command:** ~AA2[CHK](cr)

~ Delimiter character

AA Address of reading module (00 to FF)

2 Command for read host watchdog timeout value

**Response:** Valid Command: !AAEVV[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

E Host watchdog enable status, 1 = Enable, 0 = Disable

VV Timeout value in HEX format, each count is 0.1 second, 01h = 0.1 second and FFh = 25.5 seconds

### **Example:**

Refer to *Sec. 2.21*, ~AA3EVV example.

### **Related Command:**

*Sec. 2.17*, ~\*\*;  
*Sec. 2.18*, ~AA0;  
*Sec. 2.19*, ~AA1;  
*Sec. 2.21*, ~AA3EVV;  
*Sec. 2.22*, ~AA4V;  
*Sec. 2.23*, ~AA5V

### **Related Topic:**

*Sec. 3.2*, Module Status;  
*Sec. 3.3*, Dual Watchdog Operation

## 2.21 ~AA3E VV

**Description:** Set Host Watchdog Timeout Value

**Command:** ~AA3E VV[CHK](cr)

~ Delimiter character  
AA Address of setting module (00 to FF)  
3 Command for set host watchdog timeout value  
E 1 = Enable, 0 = Disable host watchdog  
VV Timeout value, from 01 to FF, each for 0.1 second

**Response:** Valid Command: !AA[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module (00 to FF)

### **Example:**

Command: ~010                      Receive: !0100

Read Address 01 module status, return host watchdog timeout status is clear.

Command: ~013164                  Receive: !01

Set Address 01 host watchdog timeout value 10.0 seconds and enable host watchdog, return successful.

Command: ~012                      Receive: !01164

Read Address 01 host watchdog timeout value; return that host watchdog is enabled, and time interval is 10.0 seconds.

Command: ~\*\*                      No response



## 2.22 ~AA4V

**Description:** Read PowerOn/Safe Value.

**Command:** ~AA4V[CHK](cr)

~ Delimiter character

AA Address of reading module (00 to FF)

4 Command for read PowerOn/Safe Value

V P = read PowerOn value, S = read Safe Value

**Response:** Valid Command: !AA(Data)[CHK](cr)

Invalid Command: ?AA[CHK](cr)

Syntax or communication error may get no response.

! Delimiter for valid Command

? Delimiter for invalid Command

AA Address of response module(00 to FF)

(Data) PowerOn Value or Safe Value

For CB-7042/42D/43/43D (Data) is VVVV, where VVVV is the PowerOn Value (or Safe Value).

For other modules, (Data) is VV00, where VV is the PowerOn Value(or Safe Value).

**Example:**

Command: @010000                      Receive: >

Output Address 01 value 0000, return successful.

Command: ~015S                        Receive: !01

Set Address 01 Safe Value, return successful.

Command: @01FFFF                     Receive: >

Output Address 01 value FFFF, return successful.

Command: ~015P                        Receive: !01



## 2.23 ~AA5V

**Description:** Set PowerOn/Safe Value.

**Command:** ~AA5V[CHK](cr)

~           Delimiter character  
AA          Address of setting module (00 to FF)  
5            Command for set PowerOn/Safe Value  
V            P = set current output as PowerOn Value, S = set current  
             output as Safe Value

**Response:**   Valid Command:            !**AA[CHK](cr)**

              Invalid Command:         ?**AA[CHK](cr)**

              Syntax or communication error may get no response.

!            Delimiter for valid Command

?            Delimiter for invalid Command

AA          Address of response module(00 to FF)

**Example:**

Command: @01AA                    Receive: >

      Output Address 01 value AA, return successful.

Command: ~015P                    Receive: !01

      Set Address 01 PowerOn Value, return successful.

Command: @0155                    Receive: >

      Output Address 01 value 55, return successful.

Command: ~015S                    Receive: !01

      Set Address 01 Safe Value, return successful.

Command: ~014P                    Receive: !01AA00

      Read Address 01 PowerOn Value, return PowerOn Value AA.

Command: ~014S                    Receive: !015500

Read Address 01 Safe Value, return Safe Value 55.

**Related Command:**

*Sec. 2.17, ~\*\*;* *Sec. 2.18, ~AA0;* *Sec. 2.19, ~AA1;* *Sec. 2.20, ~AA2;*  
*Sec. 2.21, ~AA3Evv;* *Sec. 2.22, ~AA4V*

**Related Topic:**

*Sec. 3.2, Module Status;* *Sec. 3.3, Dual Watchdog Operation*

**Note:**

The Command is not for CB-7041/41D/52/52D/53/53D.



# 3. Application Notes

## 3.1 INIT\* pin Operation

Each CB-7000 module has a build-in EEPROM to store configuration information such as address, type, baud rate and other information. Sometimes, a user may forget the configuration of the module. Therefore, the CB-7000 have a special mode named “**INIT mode**”, to help user to resolve the problem. The “**INIT mode**” is setting as **Address=00, baud rate=9600bps, no checksum**

To enable INIT mode, please follow these steps:

- Step 1. Power-down the module.
- Step 2. Connect the INIT\* pin to the GND pin.
- Step 3. Power-up the module.
- Step 4. Send Command \$002(cr) in 9600 bps to read the configuration stored in the module’s EEPROM.

Refer to “**7000 Bus Converter User Manual**” *Sec. 5.1* and “**Getting Started**” for more information.

## 3.2 Module Status

**PowerOn Reset** or **Module Watchdog Reset** will set all outputs to the **PowerOn Value**. The module can accept the host’s Command to change the output value.

**Host Watchdog Timeout** will set all output to the **Safe Value**. The module’s status (read by Command ~AA0) will be 04, and the output Command will be ignored.

## 3.3 Dual Watchdog Operation

**Dual Watchdog = Module Watchdog + Host Watchdog**

The Module Watchdog is a hardware reset circuit that monitors the module's operating status. When working in harsh or noisy environment, the module may go down by a noise signal. The Module Watchdog times out and sets output to PowerOn value.

The Host Watchdog is a software function to monitor the host's operating status. Its purpose is to detect a network communication problem or a halted host. When the timeout interval expired, the module will put all outputs to the predefined Safe Value. This places the controlled element in a known-safe condition.

The CB-7000 module with Dual Watchdog makes the control system more reliable and stable.

## 3.4 Reset Status

The Reset Status is set while the module power on or reset by Module Watchdog, and is cleared when the Command read Reset Status (\$AA5) is applied. This is useful for user to check the module's working status. When the Reset Status is set means the module is reset and the output may be changed to the PowerOn Value. When the Reset Status is clear means the module is not reset, and the output cannot be changed.

## 3.5 Digital Output

A module's output can have one of three values:

1. **Safe Value.** If the host watchdog timeout status is set, the output is set to Safe Value. If the module receives an output

Command, such as @AA(Data) or #AABBDD, the module ignores the command and returns '!', and will not change the output to the output command value. **The host watchdog timeout status is set and stored in EEPROM when the host watchdog timeout interval expired, and only can be cleared by Command ~AA1.** If user wants to change the output, he first needs to clear the host watchdog timeout status, then send an output command to change the output to a desired value.

2. **PowerOn Value.** When the Module Watchdog Timer is set, and the host watchdog timeout status is clear, the module's output is set to the predefined PowerOn Value.

3. **Output Command value.** If the host watchdog timeout status is clear, the user issues a digital output command such as @AA(Data) or #AABBDD to the module for changing the output value. The module will respond successful (receive >).

## 3.6 Latched Digital Inputs

If, for example, the user connects a PB switch to a digital I/O module input channel and wants to read the switch stroke. The input is a pulse digital input, and user will lose the data. When read by Command \$AA6 in A or B position, the response is that no input occurred and he will lose the pulse information. However, the read latch-low digital input Command \$AAL0 will solve this problem. When \$AAL0 Command in A and B position is issued, the response indicates that there was a low pulse between A and B position for a switch closure.



# 4 DN Module

## 4.1 DN-SSR4

Output Channel: Four Solid State Relay Contacts

Output Specification:

Type: Zero-Cross AC Solid-State Relay Output

Rated Load Voltage: 200 to 240 VAC

Rated Load Current: 4 Amps

Surge Current: 50 A,


Max. Off-State Leakage Current: 5.0 mA

Operate Time: 1/2 cycle of voltage sine wave + 1ms

Input Impedance: 1.5K Ohms

DIN-Rail mounted

Power Input: +24VDC

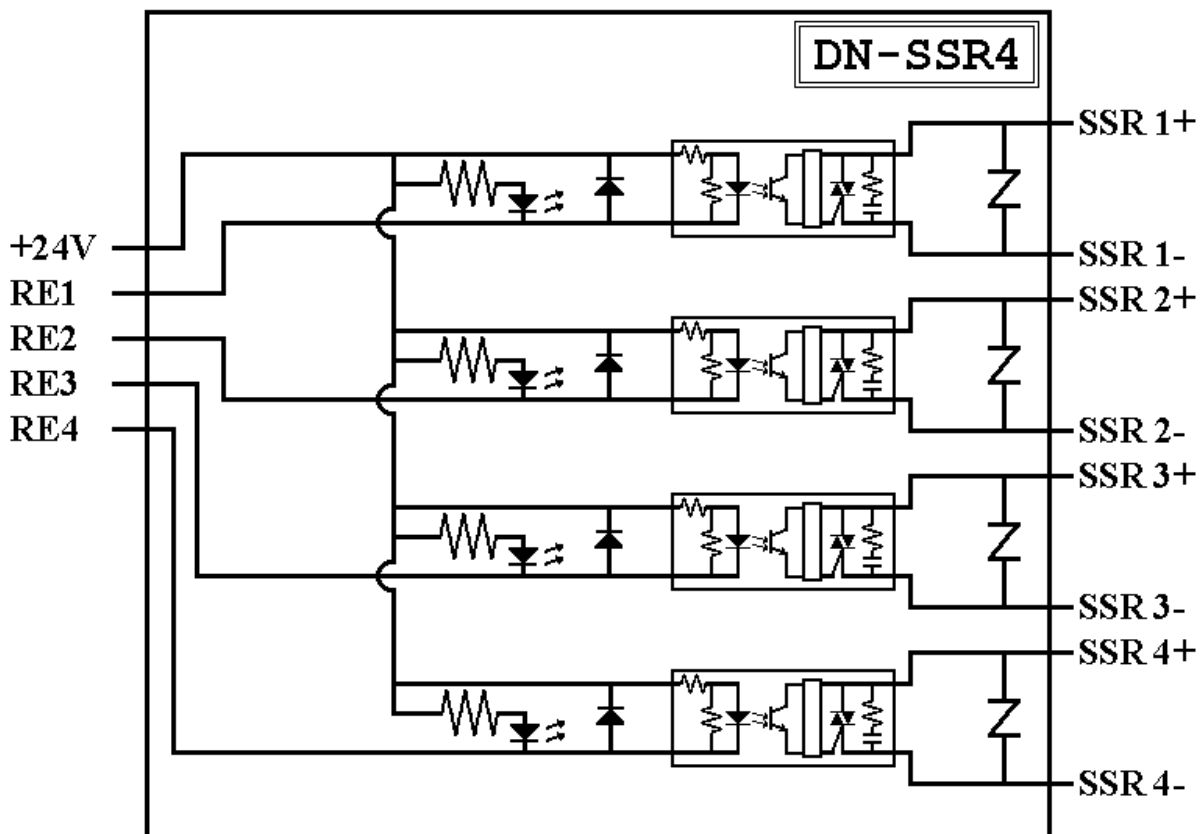

## 4.2 DN-PR4

Output Channel: Four Mechanical Relay Contacts

Output Specification:

Type: 1 form-C Relay Contact

Nominal Load: 5A@250VAC, 5A@30VDC

Max. Switching Power: 1250VAC

Max. Switching Voltage: 250VAC, 150VDC

Max. Switching Current: 5 A.

Mechanical/Electrical Life: Min.  $10 \times 10^6 / 10 \times 10^4$  operations.


Operate/Release Time: Max. 10 ms/5 ms

Dielectric Strength: 2000VAC 1 minute

Nominal Coil Power: 360 mW

DIN-Rail mounted

Power Input: 24VDC

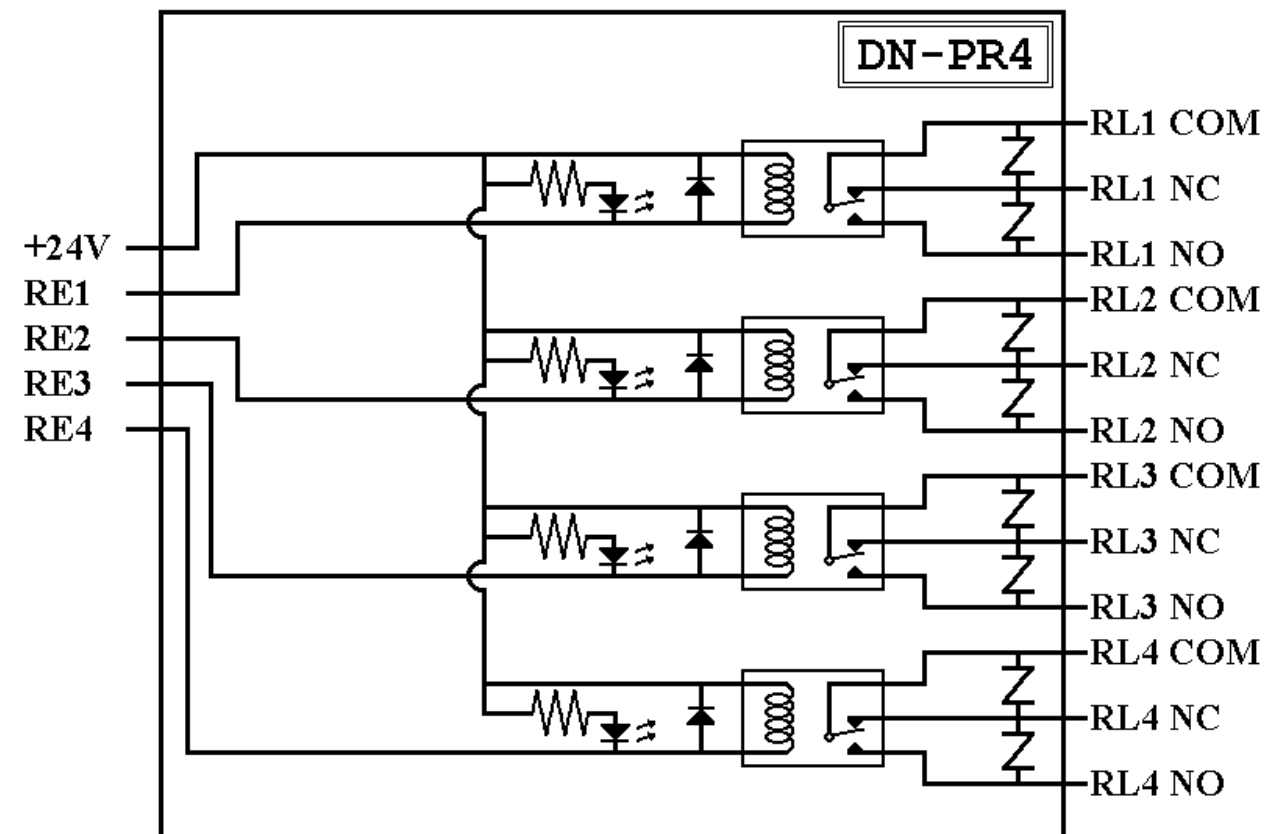

# 4.3 RM-104, RM-108, RM-116

Output Channel: 4/8/16 Relay Contacts

Output Specification:

- Type: 1 Form-C Relay Contact
- Rated Load: 16 A. @250VAC
- Max. Switching Voltage: 400VAC
- Max. Peak Current: 30 A.
- Standard Contact Material: AgCd0
- Min. Life: 100,000 operations.


Din-Rail mounted

Dimension:

RM-104: 78 x 77mm                      RM-108: 135 x 77mm

RM-116: 270 x 77mm

Power Input: 24VDC

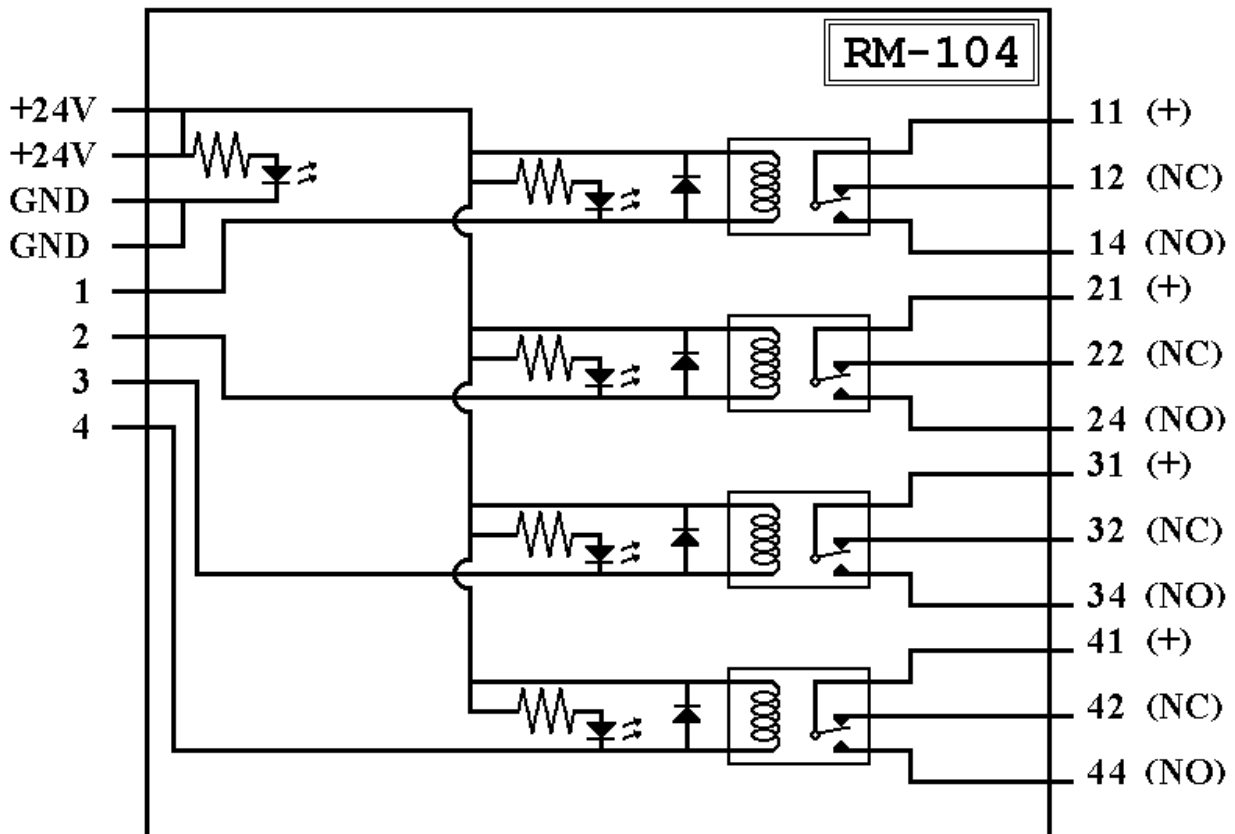

## 4.4 RM-204, RM-208, RM-216

Output Channel: 4/8/16 Relay Contacts

Relay Specification:

Type: 2 Form-C

Rated Load: 5 A. @250VAC

Max. Switching Voltage: 400VAC

Max. Peak Current: 10 A.

Standard Contact Material: Ag Nt

Min. Life: 100,000 operations.

Din-Rail mounted


Dimension:

RM-204: 78 x 77mm

RM-208: 135 x 77mm


RM-216: 270 x 77mm

Power Input: 24VDC

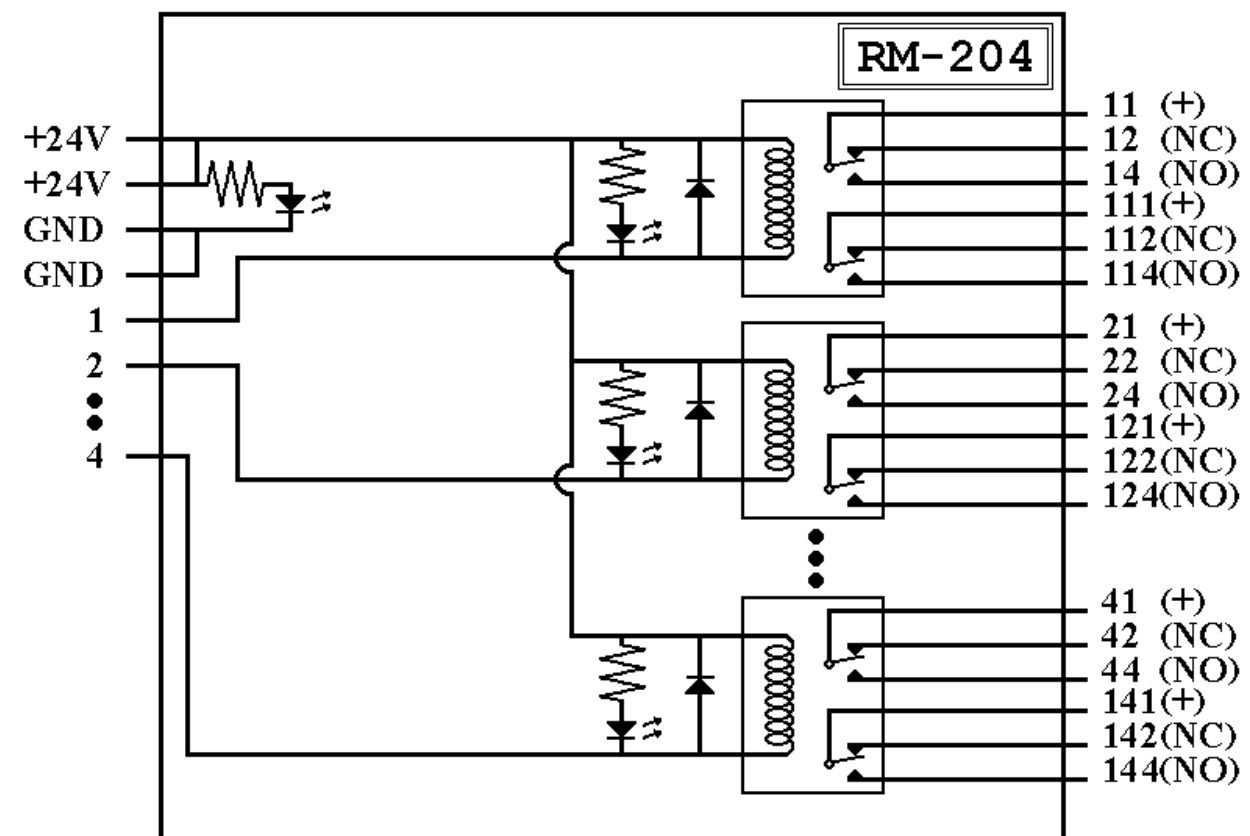

# 4.5 Application

The DN Modules are the IO extension of CB-7000 modules. These modules can drive more power and heavy loads. User may use CB-7000 modules, like CB-7043 or others, to control the DN modules to drive loads.

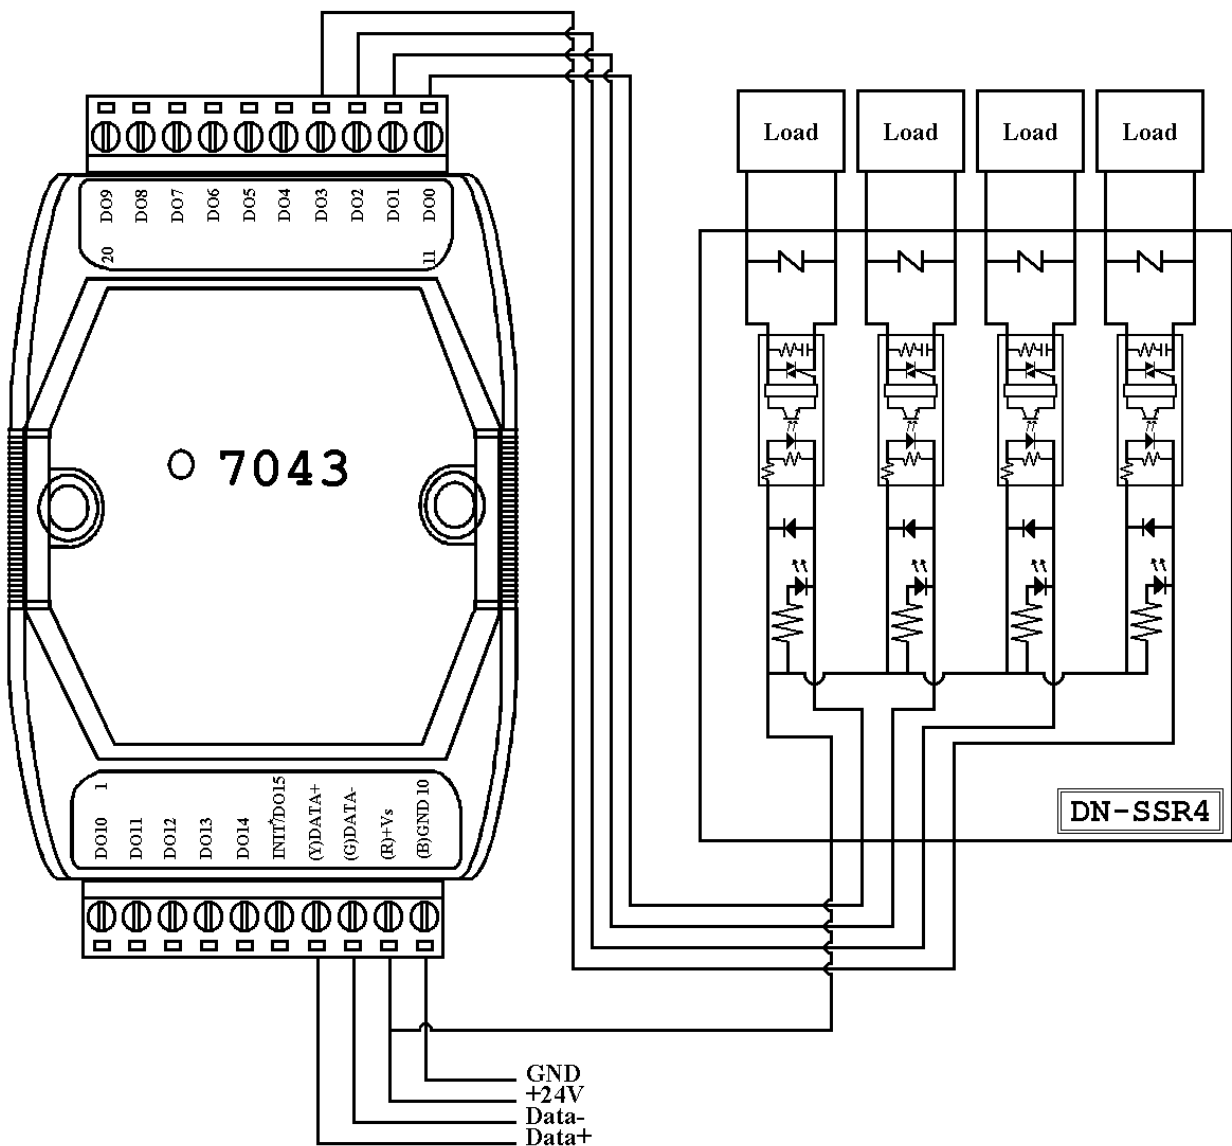



For your notes.

## Trademark and Copyright Information

Measurement Computing Corporation, InstaCal, Universal Library, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation. Refer to the Copyrights & Trademarks section on [mccdaq.com/legal](http://mccdaq.com/legal) for more information about Measurement Computing trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies.

© 2000 Measurement Computing Corporation. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

### Notice

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems that, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required, and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

## EC Declaration of Conformity

We, Measurement Computing Corp., declare under sole responsibility that the product:

CB-7041/42/43/44/50/52/      Digital I/O Modules  
53/60/63/65/66/67

Part Number	Description
-------------	-------------

to which this declaration relates, meets the essential requirements, is in conformity with, and CE marking has been applied according to the relevant EC Directives listed below using the relevant section of the following EC standards and other normative documents:

**EU EMC Directive 89/336/EEC:** Essential requirements relating to electromagnetic compatibility.

**EU 55022 Class B:** Limits and methods of measurements of radio interference characteristics of information technology equipment.

**EN 50082-1:** EC generic immunity requirements.

**IEC 801-2:** Electrostatic discharge requirements for industrial process measurement and control equipment.

**IEC 801-3:** Radiated electromagnetic field requirements for industrial process measurements and control equipment.

**IEC 801-4:** Electrically fast transients for industrial process measurement and control equipment.

Carl Haapaoja, Director of Quality Assurance

**Measurement Computing Corporation**  
**10 Commerce Way**  
**Suite 1008**  
**Norton, Massachusetts 02766**  
**(508) 946-5100**  
**Fax: (508) 946-9500**  
**E-mail: [info@mccdaq.com](mailto:info@mccdaq.com)**  
**[www.mccdaq.com](http://www.mccdaq.com)**